

M1240 Windrower

Unloading and Assembly Instructions (North America)

214385 Revision A

2018 Model Year

Original Instruction

M1240 Windrower, featuring Dual Direction® and Crossflex™ rear suspension



1016391

Published July 2017

Introduction

This manual contains unloading, assembly, and predelivery information for the MacDon M1240 Self-Propelled Windrower, which when coupled with one of MacDon's auger, rotary, or draper headers, provides a package designed to cut and lay a variety of grain, hay, and specialty crops in windrows.

The M1240 Windrower is Dual Direction®, meaning that the windrower can be driven in the cab-forward or the engine-forward mode. Right and left designations are determined by the operator's position facing the direction of travel. This manual uses the terms right cab-forward, left cab-forward, right engine-forward, and left engine-forward when referencing specific locations on the machine.

The ignition keys were shipped with the shipping documents and are used to lock the cab doors and tool box compartment.

NOTE:

Keep your MacDon publications up-to-date. The most current version can be downloaded from our website (www.macdon.com) or from our Dealer-only site (<https://portal.macdon.com>) (login required).

List of Revisions

The following list provides an account of major changes from the previous version of this document.

Summary of Change	Location
Added rotary headers in the introduction.	<i>Introduction, page i</i>
Revised procedure.	<ul style="list-style-type: none"> • <i>2.1 Using One Forklift to Unload Windrower, page 7</i> • <i>3.1 Lowering Steps, page 9</i> • <i>3.2 Installing Caster Wheels, page 11</i> • <i>3.3 Installing Drive Wheels, page 13</i> • <i>3.4 Repositioning Right Leg, page 15</i> • <i>4.1.2 Checking and Adding Wheel Drive Lubricant Level, page 42</i> • <i>4.1.11 Checking Tire Pressures, page 50</i>
Rearranged the first five topics for ease in assembly.	<i>3 Assembling the Windrower, page 9</i>
Added a step to remove shipping wire from traction drive hoses.	<i>3.4 Repositioning Right Leg, page 15</i>
Repositioning Walking Beam and Installing Anti-Shimmy Dampeners split into separate topics.	<ul style="list-style-type: none"> • <i>3.5 Repositioning Caster Wheels, page 18</i> • <i>3.6 Installing Caster Anti-Shimmy Dampeners, page 21</i>
<ul style="list-style-type: none"> • Replaced the term caster wheel shocks with anti-shimmy dampener. • Added a step and a note. 	<i>3.6 Installing Caster Anti-Shimmy Dampeners, page 21</i>
Removed a step about installing a new battery.	<i>3.13 Connecting Batteries, page 34</i>
Added an important note.	<i>3.14 Starting the Engine, page 36</i>
Replaced image.	<i>4.1.1 Recording Serial Numbers, page 41</i>
<ul style="list-style-type: none"> • Changed title from Checking Engine Oil Level to Checking and Adding Oil Level. • Added steps for adding engine oil. 	<i>4.1.4 Checking and Adding Engine Oil, page 44</i>
Moved Checking Tire Pressure topic at the end of Completing Predelivery Checklist.	<i>4.1.11 Checking Tire Pressures, page 50</i>
Added procedure/topic.	<i>4.2.7 Checking the Radio and Activating the Bluetooth® Feature, page 64</i>
Moved the chapter Attaching Headers to M1 Series Windrower after Performing Predelivery Checks.	<i>5 Attaching Headers to M1 Series Windrower, page 69</i>

Summary of Change	Location
<p>Added step about setting float.</p>	<ul style="list-style-type: none"> • <i>Attaching an A40-DX Auger Header, page 69</i> • <i>Attaching a D1X or D1XL Series Header, page 78</i> • <i>Attaching an R85 16-Footer Header, page 87</i>
<ul style="list-style-type: none"> • Corrected hydraulic oil specification and capacity. • Added windshield washer fluid specification and capacity. • Corrected the capacity of the diesel fuel tank and engine oil pan. 	<p><i>6.1 Lubricants, Fluids, and System Capacities, page 97</i></p>
<p>Removed the following topics:</p> <ul style="list-style-type: none"> • Detaching an A40-D and A40-DX Auger Header. • Detaching a D1X or D1XL Series Header. • Detaching R85 16-Footer Header. 	
<p>Added Lubricants, Fluids, and System Capacities topic for quick reference in the inside back cover page.</p>	<p>Inside back cover</p>

TABLE OF CONTENTS

Introduction.....	i
List of Revisions	ii
Chapter 1: Safety	1
1.1 Signal Words	1
1.2 General Safety.....	2
1.3 Battery Safety.....	4
1.4 Safety Signs	5
Chapter 2: Unloading the Windrower	7
2.1 Using One Forklift to Unload Windrower	7
Chapter 3: Assembling the Windrower	9
3.1 Lowering Steps	9
3.2 Installing Caster Wheels	11
3.3 Installing Drive Wheels	13
3.4 Repositioning Right Leg	15
3.5 Repositioning Caster Wheels	18
3.6 Installing Caster Anti-Shimmy Dampeners	21
3.7 Installing Windshield Access Step	23
3.8 Positioning Mirror Arms	24
3.9 Installing Slow Moving Vehicle (SMV) Signs	25
3.10 Replacing Speed Identification Symbol (SIS) Decal (US Only).....	26
3.11 Installing Rear Ballast Package	27
3.12 Lubricating the Windrower	33
3.12.1 Lubrication Procedure.....	33
3.12.2 Lubrication Points.....	33
3.13 Connecting Batteries	34
3.14 Starting the Engine.....	36
Chapter 4: Performing Predelivery Checks	41
4.1 Completing Predelivery Checklist	41
4.1.1 Recording Serial Numbers	41
4.1.2 Checking and Adding Wheel Drive Lubricant Level	42
4.1.3 Checking Engine Air Intake	43
4.1.4 Checking and Adding Engine Oil	44
4.1.5 Checking and Adding Hydraulic Oil.....	46
4.1.6 Checking Fuel Separator	47
4.1.7 Checking Engine Coolant Level.....	47
4.1.8 Checking Engine Gearbox Lubricant Level and Adding Lubricant.....	48
4.1.9 Checking Air Conditioning (A/C) Compressor Belts	48

TABLE OF CONTENTS

4.1.10 Checking Operating Safety System	49
4.1.11 Checking Tire Pressures	50
4.2 Performing Operational Checks	53
4.2.1 Checking Harvest Performance Display (HPT)	53
Navigating the Harvest Performance Tracker	54
Setting Language and Units of Measure	55
Setting Time and Date	56
Setting Windrower Tire Size	57
Checking Header Settings	58
4.2.2 Checking Engine Speed	58
4.2.3 Checking Exterior Lights	59
4.2.4 Checking Horn	62
4.2.5 Checking Interior Lights	63
4.2.6 Checking Air Conditioning and Heater	63
4.2.7 Checking the Radio and Activating the Bluetooth® Feature	64
4.3 Checking Manuals	66
4.4 Performing Final Steps	67
Chapter 5: Attaching Headers to M1 Series Windrower	69
5.1 Attaching Headers to M1 Series Windrower	69
5.1.1 A40-DX Auger Header	69
Attaching an A40-DX Auger Header	69
Connecting A40-DX Hydraulics	75
5.1.2 D1X or D1XL Series Header	77
Attaching Draper Header Supports	77
Attaching a D1X or D1XL Series Header	78
Connecting D1X or D1XL Series Hydraulics	84
5.1.3 R85 16-Foot Header	87
Attaching an R85 16-Foot Header	87
Connecting R85 16-Foot Header Hydraulics	93
Chapter 6: Reference	97
6.1 Lubricants, Fluids, and System Capacities	97
6.2 Fuel Specifications	99
6.3 Torque Specifications	100
6.3.1 Metric Bolt Specifications	100
6.3.2 Metric Bolt Specifications Bolting into Cast Aluminum	102
6.3.3 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)	103
6.3.4 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)	105
6.3.5 O-Ring Face Seal (ORFS) Hydraulic Fittings	106
6.3.6 Tapered Pipe Thread Fittings	107
6.4 Conversion Chart	108
6.5 Definitions	109

TABLE OF CONTENTS

Predelivery Checklist..... 113
Lubricants, Fluids, and System Capacities Inside Back Cover

1 Safety

1.1 Signal Words

Three signal words, **DANGER**, **WARNING**, and **CAUTION**, are used to alert you to hazardous situations. The appropriate signal word for each situation has been selected using the following guidelines:

DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.

CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

1.2 General Safety

CAUTION

The following are general farm safety precautions that should be part of your operating procedure for all types of machinery.

Protect yourself.

- When assembling, operating, and servicing machinery, wear all protective clothing and personal safety devices that could be necessary for job at hand. Do **NOT** take chances. You may need the following:
 - Hard hat
 - Protective footwear with slip resistant soles
 - Protective glasses or goggles
 - Heavy gloves
 - Wet weather gear
 - Respirator or filter mask
- Be aware that exposure to loud noises can cause hearing impairment or loss. Wear suitable hearing protection devices such as earmuffs or earplugs to help protect against loud noises.

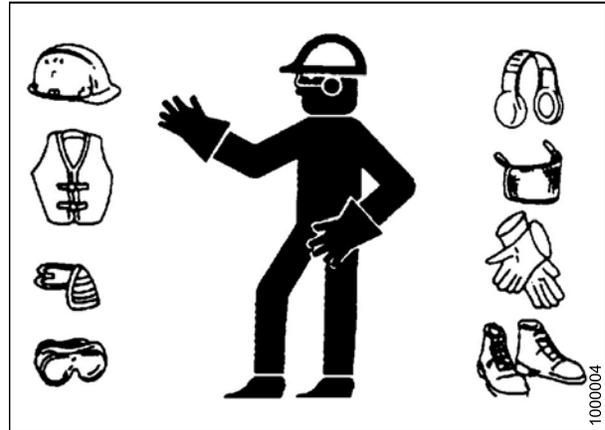


Figure 1.1: Safety Equipment



Figure 1.2: Safety Equipment

- Provide a first aid kit for use in case of emergencies.
- Keep a fire extinguisher on the machine. Be sure fire extinguisher is properly maintained. Be familiar with its proper use.
- Keep young children away from machinery at all times.
- Be aware that accidents often happen when Operator is tired or in a hurry. Take time to consider safest way. Never ignore warning signs of fatigue.

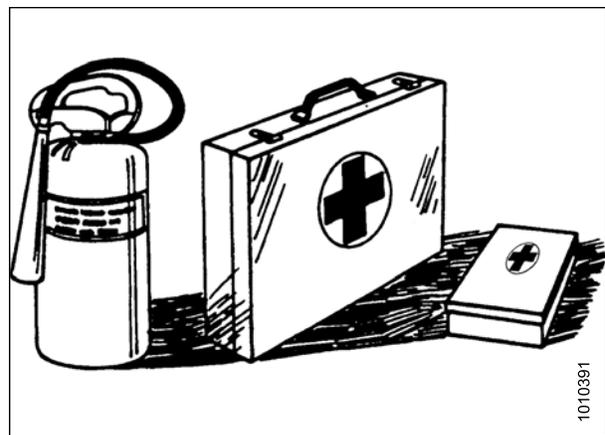


Figure 1.3: Safety Equipment

SAFETY

- Wear close-fitting clothing and cover long hair. Never wear dangling items such as scarves or bracelets.
- Keep all shields in place. **NEVER** alter or remove safety equipment. Make sure driveline guards can rotate independently of shaft and can telescope freely.
- Use only service and repair parts made or approved by equipment manufacturer. Substituted parts may not meet strength, design, or safety requirements.



Figure 1.4: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. **NEVER** attempt to clear obstructions or objects from a machine while engine is running.
- Do **NOT** modify machine. Unauthorized modifications may impair machine function and/or safety. It may also shorten machine's life.
- To avoid bodily injury or death from unexpected startup of machine, **ALWAYS** stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

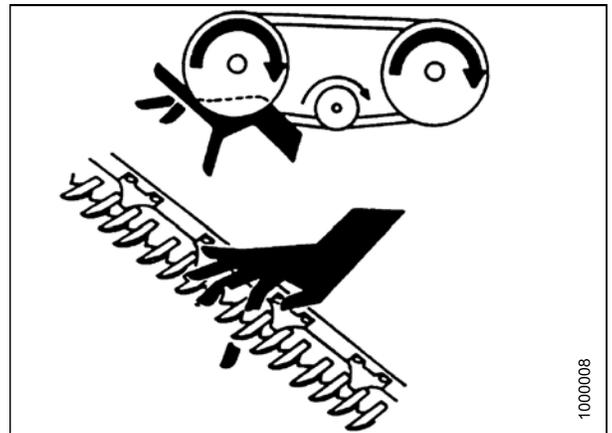


Figure 1.5: Safety around Equipment

- Keep service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
- Keep work area well lit.
- Keep machinery clean. Straw and chaff on a hot engine is a fire hazard. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before storage.
- **NEVER** use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover sharp or extending components to prevent injury from accidental contact.



Figure 1.6: Safety around Equipment

1.3 Battery Safety

WARNING

- Keep all sparks and flames away from batteries, as a gas given off by electrolyte is explosive.
- Ventilate when charging in enclosed space.



Figure 1.7: Safety around Batteries

WARNING

- Wear safety glasses when working near batteries.
- Do NOT tip batteries more than 45° to avoid electrolyte loss.
- Battery electrolyte causes severe burns. Avoid contact with skin, eyes, or clothing.
- Electrolyte splashed into eyes is extremely dangerous. Should this occur, force eye open, and flood with cool, clean water for 5 minutes. Call a doctor immediately.
- If electrolyte is spilled or splashed on clothing or body, neutralize it immediately with a solution of baking soda and water, then rinse with clear water.

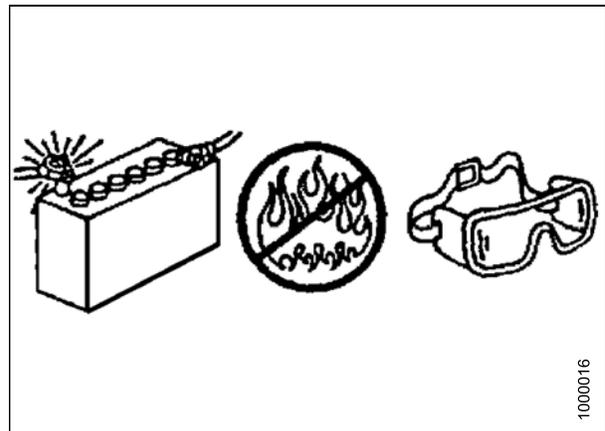


Figure 1.8: Safety around Batteries

WARNING

- To avoid injury from spark or short circuit, disconnect battery ground cable before servicing any part of electrical system.
- Do NOT operate engine with alternator or battery disconnected. With battery cables disconnected and engine running, a high voltage can be built up if terminals touch frame. Anyone touching frame under these conditions would be severely shocked.
- When working around storage batteries, remember that all of the exposed metal parts are live. Never lay a metal object across terminals because a spark or short circuit will result.
- Keep batteries out of reach of children.

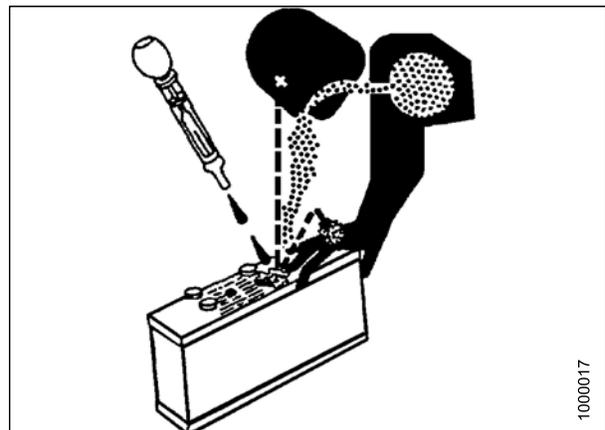


Figure 1.9: Safety around Batteries

1.4 Safety Signs

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or become illegible.
- If original parts on which a safety sign was installed are replaced, be sure repair part also bears current safety sign.
- Safety signs are available from your MacDon Dealer.

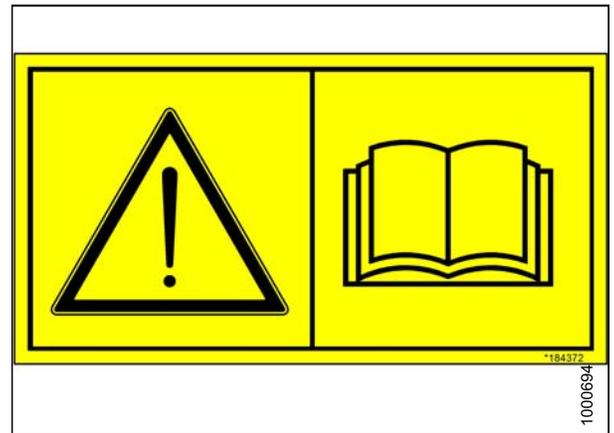


Figure 1.10: Operator's Manual Decal

2 Unloading the Windrower

2.1 Using One Forklift to Unload Windrower

CAUTION

Equipment used for unloading must meet or exceed the specified requirements. Using inadequate equipment may result in chain breakage, vehicle tipping, or machine damage.

Table 2.1 Lifting Vehicle Requirements

Minimum Capacity ¹	7037 kg (15,500 lb.)
Minimum Fork Length	198.1 cm (78 in.)

IMPORTANT:

Forklifts are normally rated for a load located 610 mm (24 in.) ahead of the back end of the forks. To obtain forklift capacity at 122.2 cm (48 in.), check with your forklift distributor.

1. Move the trailer onto level ground and block the trailer wheels.
2. Set forklift tines to the widest possible setting.

CAUTION

Ensure forks do not contact or lift on fuel tank (A) or engine oil pan (B) (not shown).

3. Position forklift from opposite side of fuel tank, and position forks (C) under windrower frame with the fuel tank (A) between the forks.

NOTE:

The windrower's center of gravity is approximately 157.5 cm (62 in.) rearwards from the center of the drive wheel.

WARNING

Ensure the forks extend beyond the far side of the frame.

4. Lift until windrower is clear of the trailer deck.
5. Back forklift slowly away from trailer until the windrower is clear of the trailer deck.
6. Lower unit slowly to the ground. If the ground is soft, place wooden blocks under the front shipping stands.
7. Carefully back forklift away from windrower.
8. Check windrower for shipping damage, and check shipment for missing parts.
9. In case of shipping damage or missing parts, confirm that serial number matches shipping manifest, then contact MacDon immediately with any damage or shortage claims.

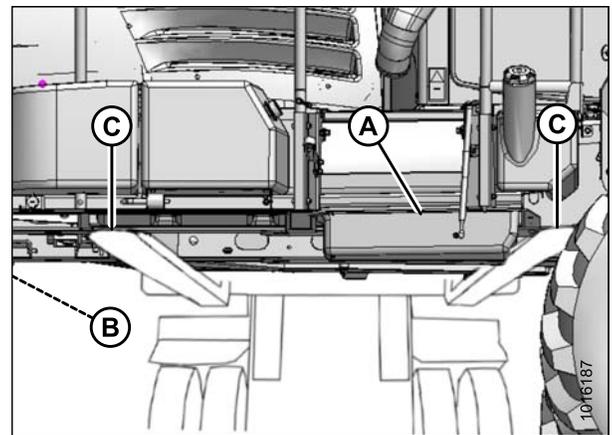


Figure 2.1: Windrower on Trailer

1. At 122.2 cm (48 in.) from back end of forks.

3 Assembling the Windrower

Perform all procedures in this chapter in the order in which they are listed.

3.1 Lowering Steps

Lowering the steps allows safe and easy access to the cab where some assembly hardware was stored for shipping purposes.

Lower steps from shipping position to working position as follows:

NOTE:

Left side shown, right side opposite.

1. Remove stop bolt (A) and discard.
2. Loosen pivot bolts (B) at both sides of step (C).

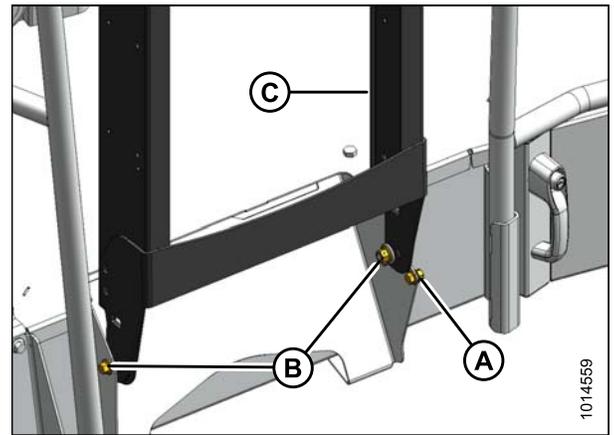


Figure 3.1: Left Step – Shipping Position

3. Lower step (A) to working position.
4. Ensure clips (B) are engaged in step.
5. Tighten pivot bolts (C) to 90–100 Nm (66–73 lbf-ft).

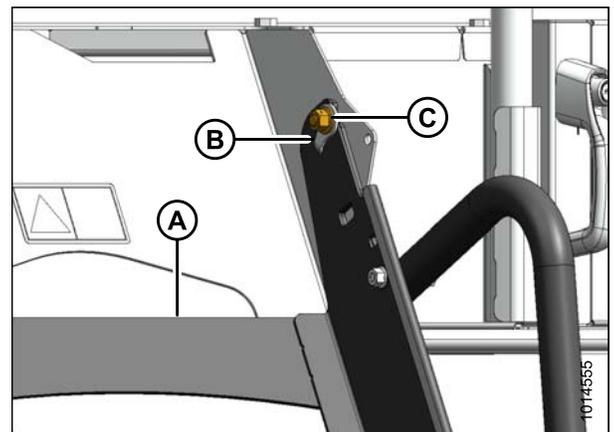


Figure 3.2: Left Step – Working Position

ASSEMBLING THE WINDROWER

6. Retrieve bag containing drive wheel nuts from the storage compartment (A) behind the training seat.

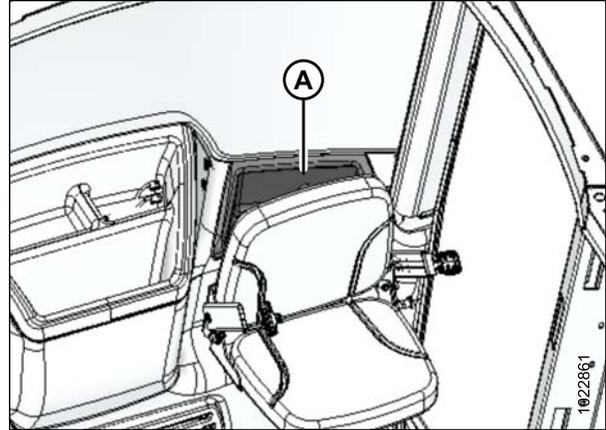


Figure 3.3: Storage Compartment

3.2 Installing Caster Wheels

Some shipping configurations come with caster wheels removed. Follow this procedure to install caster wheels if required.

1. Retrieve toolbox (A) from the storage compartment, and remove banding.

NOTE:

Use ignition key to unlock storage compartment.

2. Retrieve hardware from the toolbox (A).

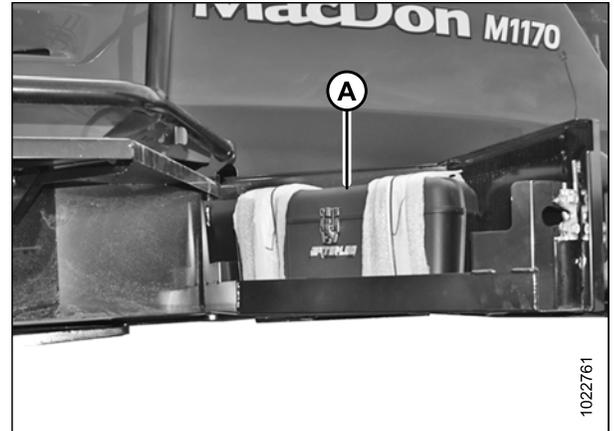


Figure 3.4: Toolbox – M1170 Shown, M1240 Similar

3. Remove banding and blocking (A) securing walking beam to frame.
4. Retrieve caster wheel assemblies from shipment.

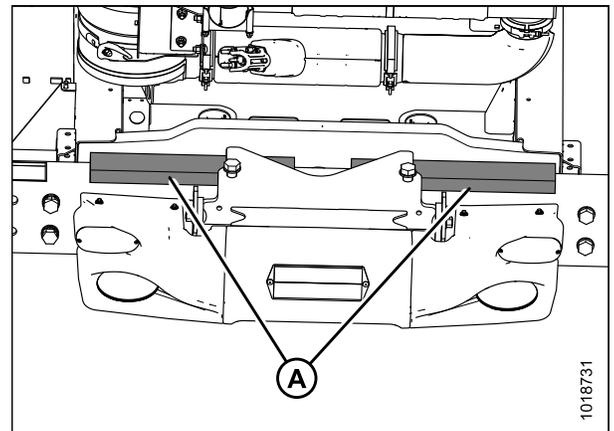


Figure 3.5: Walking Beam

5. Using a forklift, approach windrower from the front and slide forks under frame.

CAUTION

Ensure forks do not contact fuel tank (A) and that forks lift on windrower frame.

6. Raise windrower approximately 152 cm (60 in.) off the ground. Place suitable stands under the drive wheel legs and rear frame, and lower windrower onto stands to partially unload the forks.



Figure 3.6: Windrower Off the Ground

ASSEMBLING THE WINDROWER

7. Attach a sling (B) to caster assembly (A).
8. Retrieve two washers (C) from the toolbox and place them on the caster wheel spindle (D).
9. If caster assembly is on a pallet, remove banding and shipping material securing the assembly (A) to pallet.

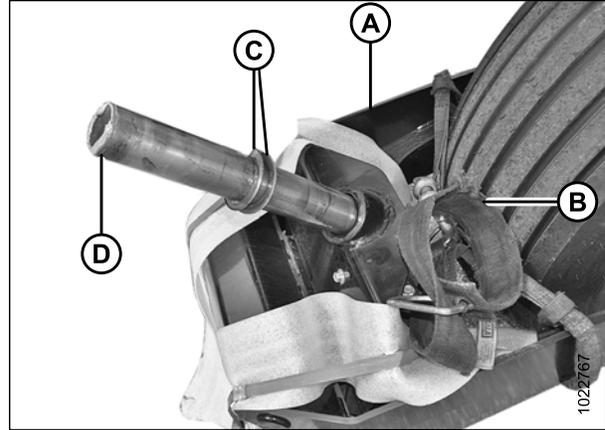


Figure 3.7: Caster Wheel Assembly in Shipping Configuration

10. Attach the sling (A) on the caster assembly (B) to a suitable lifting device.
11. Tilt walking beam (C) and maneuver caster assembly (B) so that spindle (D) can be installed onto walking beam (C).

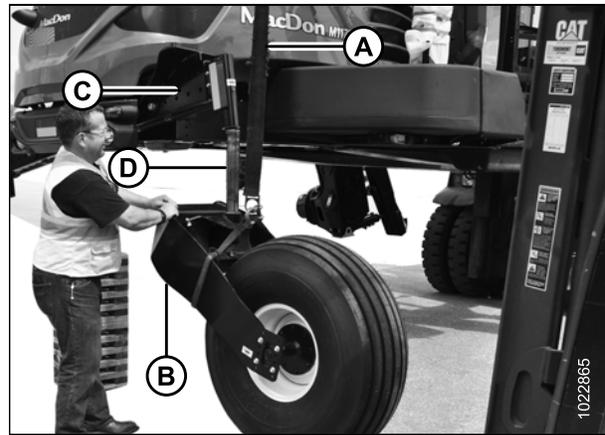


Figure 3.8: Installing Caster Assembly

12. Install the flat washer (A) onto the spindle.
13. Install key (B) and arm (C) onto spindle, ensuring that arm is positioned so there is no clearance at the top and bottom of the walking beam extension.
14. Install retaining ring (D).
15. Tighten nut (E) and torque to 190–200 Nm (140–147 lbf·ft).
16. Remove sling from caster assembly.
17. Repeat Steps 7, page 12 to 16, page 12 for second caster assembly.

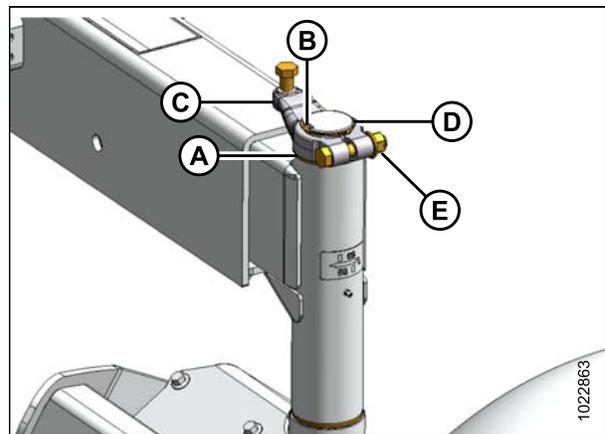


Figure 3.9: Caster Arm

3.3 Installing Drive Wheels

1. Using a forklift, lift cab-end of windrower to approximately 130 cm (51 in.) (B) off the ground, enough to position the drive wheel assembly (A). Place a stand (C) under windrower frame.
2. Clean mounting surface on wheel drive and rim.

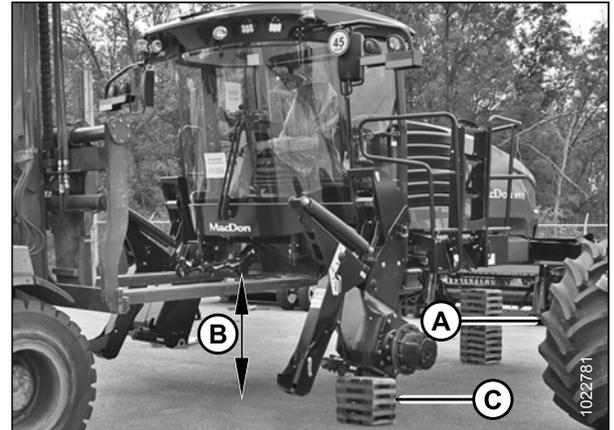


Figure 3.10: Supporting Windrower

CAUTION

Use a lifting device capable of supporting a minimum of 907 kg (2000 lb.) to lift the wheel assembly.

3. Position pallet jack (A) or equivalent under tire and raise slightly.
4. Locate drive wheel against the wheel drive hub so the air valve (B) is on the outside and the tire tread (C) points forward with the windrower in cab-forward orientation.

NOTE:

For turf tires (diamond tread pattern), be sure arrow on sidewall points in forward rotation with windrower in cab-forward.

5. Position wheel to line up holes in rim with studs on hub and push wheel onto hub.
6. Install wheel nuts (A).

IMPORTANT:

To avoid damage to wheel rims and studs, do **NOT** use an impact wrench. Threads must be clean and dry. Do **NOT** apply lubricant or anti-seize compound. Do **NOT** overtighten the wheel nuts.

7. Torque drive wheel nuts to 510 Nm (375 lbf-ft) using the tightening sequence shown.

IMPORTANT:

Use only manufacturer-specified nuts (MD #205397).

8. Repeat tightening sequence two additional times, ensuring the specified torque is achieved each time.
9. Lower jack and move away from work area.

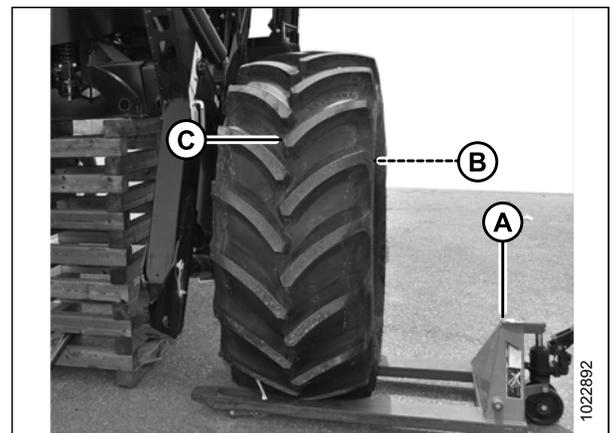


Figure 3.11: Drive Wheel

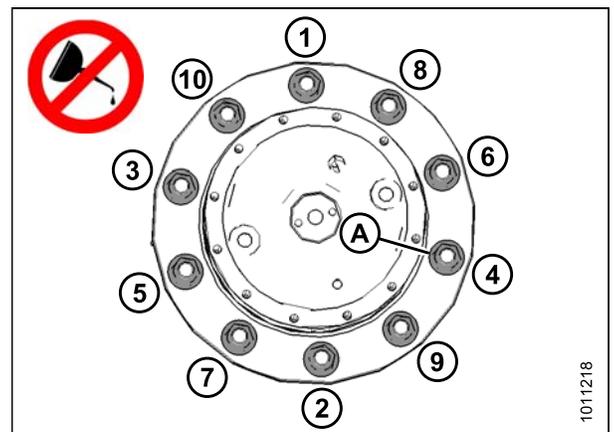


Figure 3.12: Tightening Sequence

ASSEMBLING THE WINDROWER

10. Raise windrower, remove stand, and lower windrower to ground.
11. Repeat Steps [2, page 13](#) to [8, page 13](#) for the other drive wheel.
12. Repeat torque procedure every hour of operation until two consecutive checks confirm that there is no movement of the nuts.

3.4 Repositioning Right Leg

The right (cab-forward) leg requires repositioning from shipping to field configuration.

CAUTION

Do NOT open the right cab-forward door when the right leg is in shipping configuration. If glass door contacts the leg, it may result in broken glass door and/or damaged door seal.

1. Using a forklift, lift front of windrower. Place a stand (A) (or equivalent) to support front of windrower and to keep right wheel (B) off the ground.
2. Slowly lower windrower to a stand (A).
3. Place a pallet jack (C) or equivalent under the right wheel (B) and raise pallet jack enough to take the weight off the right wheel.

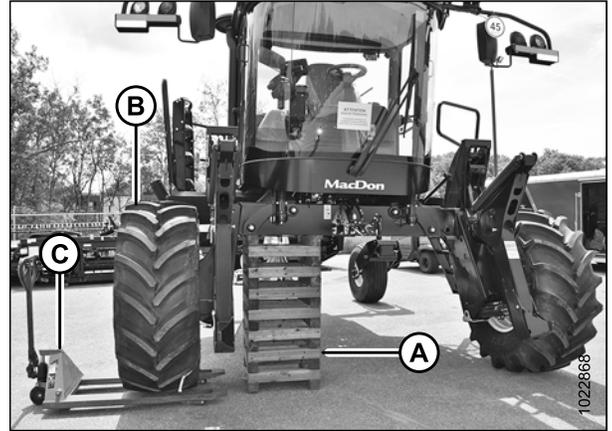


Figure 3.13: Supporting Right Leg of Windrower

4. Remove shipping tag and wire (A) from traction drive hoses under the cab.

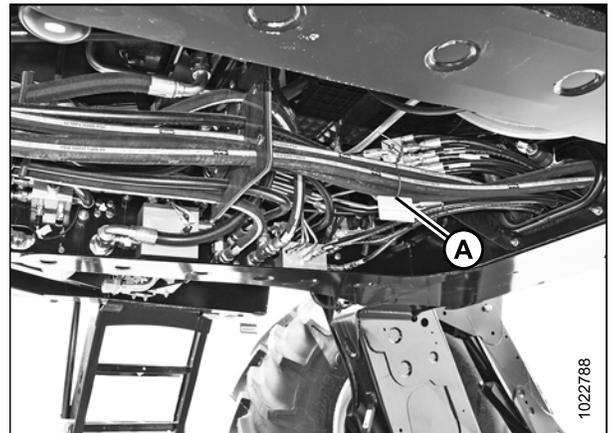


Figure 3.14: Underneath Windrower Cab

ASSEMBLING THE WINDROWER

- Remove two bolts (A), washers, and nuts from frame.



Figure 3.15: Windrower Right Leg

- Adjust jack height until pin (A) is loose. Extract pin from front of frame with a slide hammer (B) (MD #209816) (tool required due to limited space in front of fuel tank). Instructions are included with the tool.

NOTE:

Removing the pins will be difficult if the jack is not properly positioned to take the weight off the leg.

- Repeat for second pin.

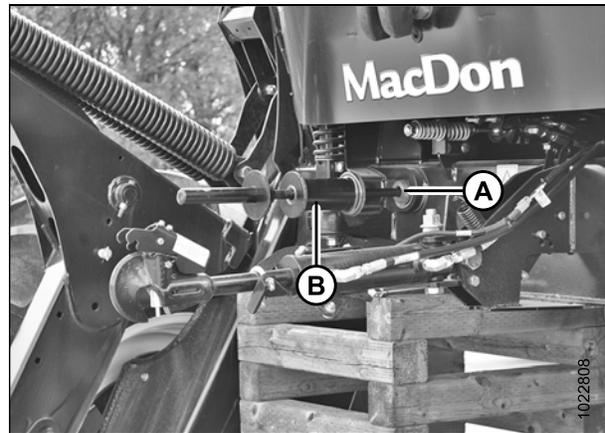


Figure 3.16: Slide Hammer

- Move leg outwards to expose one hole (A) in frame.



Figure 3.17: Repositioning Right Leg

ASSEMBLING THE WINDROWER

- Align holes at pin locations and use the slide hammer (B) to reinstall pins (A). If necessary, adjust jack to prevent damage to the outer edges of the pins.

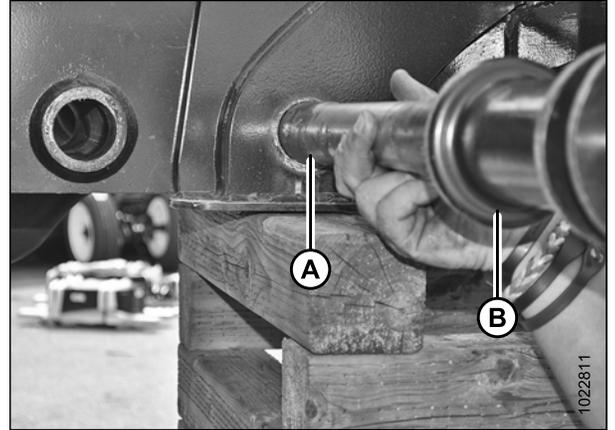


Figure 3.18: Leg Pin

- Secure pins with bolts (A), washers, and nuts. Torque nuts to 136 Nm (100 lbf·ft).
- Lower pallet jack and move it from work area.
- Support the windrower with forklift, remove stand and lower windrower to ground.



Figure 3.19: Right Leg

3.5 Repositioning Caster Wheels

A narrow caster tread width is better suited for smaller headers because it allows more space for the uncut crop and provides more maneuverability around poles, irrigation inlets, and other obstacles. A wider caster tread width reduces runover in heavy crops that produce large windrows.

1. Lift windrower with forklift to take most of the weight off casters.



Figure 3.20: Supporting Windrower

2. Remove four bolts and washers (A), shock support brackets (B), and slow moving vehicle (SMV) sign support bracket (C) from walking beam.
3. Retain hardware and support brackets (B) and (C) for installation later.

NOTE:

There is one SMV support bracket (C) preinstalled on shock support brackets (B) at the left cab-forward walking beam.

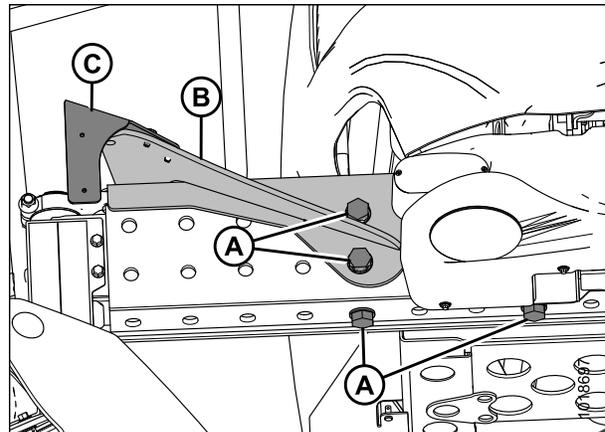


Figure 3.21: Walking Beam

4. If not done yet, remove banding and blocking (A) securing walking beam to frame.

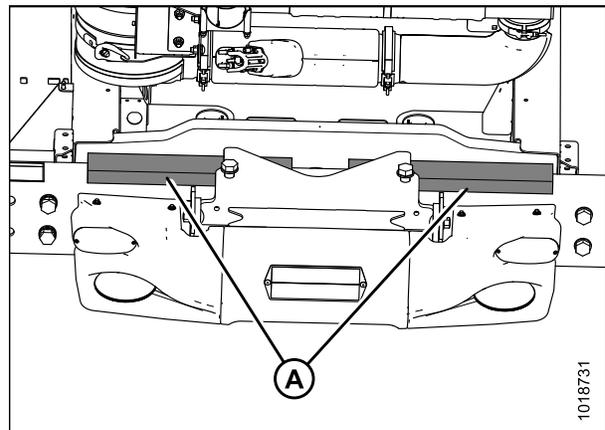


Figure 3.22: Walking Beam

ASSEMBLING THE WINDROWER

5. Rotate the caster so the wheel (A) is parallel to the walking beam to assist with moving the extensions. Pull walking beam extension (B) out to desired position and line up bolt holes.

NOTE:

The walking beam extension (B) can be adjusted into three working positions.

6. Install two M24 x 60 bolts and washers (C) on bottom of beam. Do **NOT** tighten.

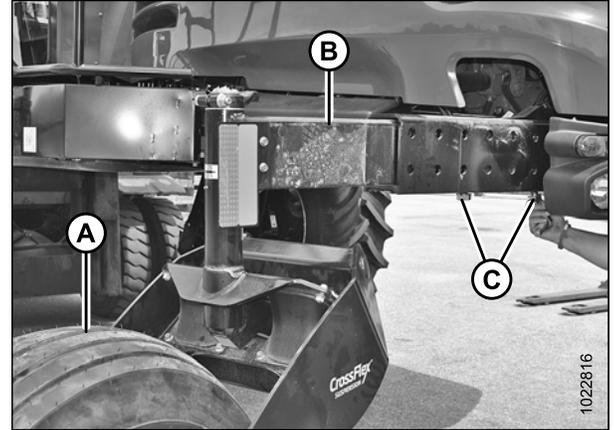


Figure 3.23: Walking Beam Extension

7. Install two M24 x 60 bolts coated with anti-seize compound and M24 flat washers (A) from the toolbox in the outboard side of the walking beam. Do **NOT** fully tighten.

NOTE:

Depending on the extent of walking beam position, outboard bolts may need to be installed first.

8. Place support brackets (B) onto walking beam as shown and secure with two M24 x 60 bolts coated with anti-seize compound and M24 flat washers (C). Do **NOT** fully tighten.

IMPORTANT:

Ensure support bracket plate (B) is parallel or is installed straight.

9. Tighten bolts as follows:
 - a. Snug bottom bolts (A), then snug back bolts (B).
 - b. Torque back bolts (B) to 745–770 Nm (550–570 lbf-ft).
 - c. Torque bottom bolts (A) to 745–770 Nm (550–570 lbf-ft).

IMPORTANT:

Torque bolts after first 5 hours of operation, and then again after 10 hours.

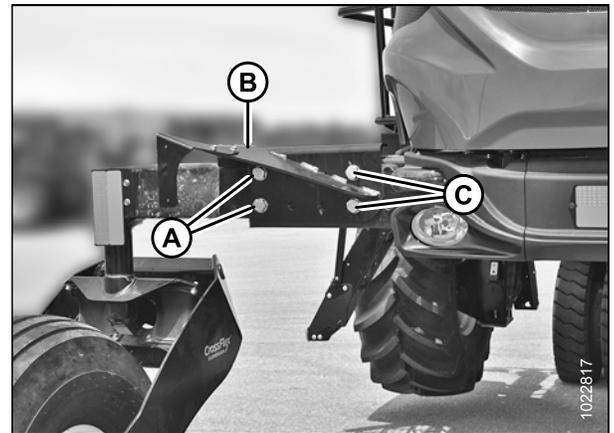


Figure 3.24: Anti-Shimmy Brackets

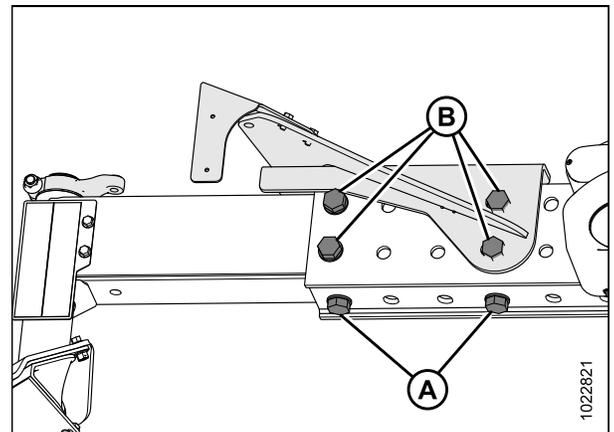


Figure 3.25: Walking Beam Bolts

ASSEMBLING THE WINDROWER

- Repeat Steps 2, [page 18](#) to 9, [page 19](#) at opposite end of walking beam, ensuring that casters are spaced equally from center of windrower.
- Lower windrower to ground.

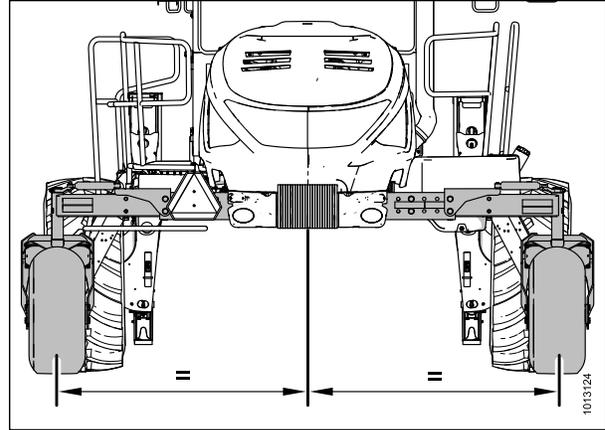


Figure 3.26: Walking Beam Adjustment

3.6 Installing Caster Anti-Shimmy Dampeners

1. Retrieve anti-shimmy dampeners and hardware from bag in toolbox.
2. If unit was shipped with casters installed, then do the following: Otherwise, proceed to step 3, page 21.
 - a. Remove retaining ring (A).
 - b. Remove and discard yellow spacer (B).
 - c. Retrieve key and arm from the toolbox.
 - d. Install key and arm (D), secure with retaining ring (E) on the caster shaft as shown.
 - e. Tighten nut (C), and torque to 190–200 Nm (140–147 lbf·ft).

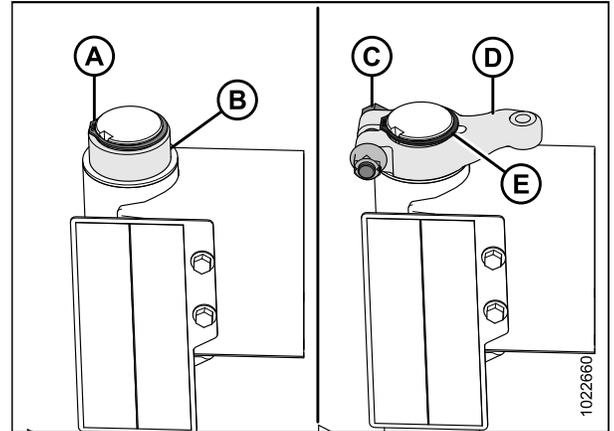


Figure 3.27: Anti-Shimmy Arm – Left Side

3. Attach barrel end of anti-shimmy dampener (A) to forward hole in support (B) with one M16 x 75 flange head bolt (C) and one M16 tech loc nut (D). Install bolt from under support. Do **NOT** fully tighten.

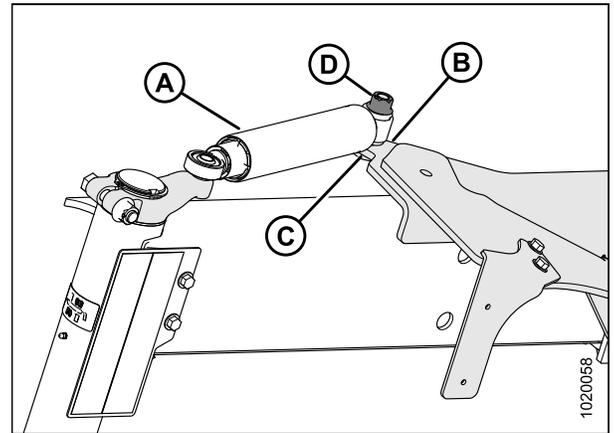


Figure 3.28: Anti-Shimmy System – Left Side

4. Attach barrel end of second anti-shimmy dampener (A) to support (B) at aft hole location with one M16 x 90 flange head bolt and M16 tech loc nut (C). Install bolt from under support. Do **NOT** fully tighten.
5. Rotate caster so that arm (D) is aligned with walking beam.

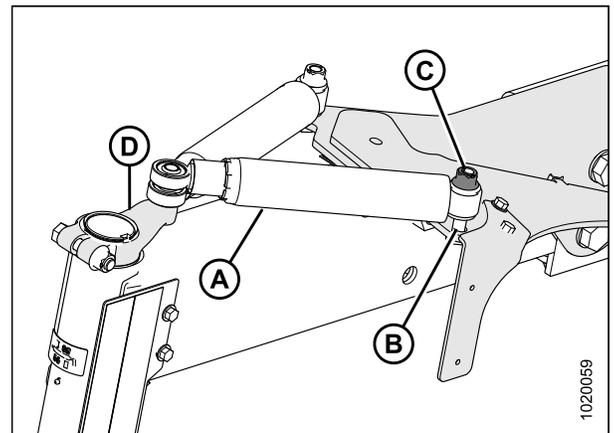


Figure 3.29: Anti-Shimmy System – Left Side

ASSEMBLING THE WINDROWER

6. Attach rod ends of anti-shimmy dampeners to arm with M16 x 90 flange head bolt (A) and three hardened washers (B).

NOTE:

These washers (B) are stamped with L9 for identification.

7. Torque bolt (A) to 244 Nm (180 lbf-ft).
8. Install jam nut (C) and torque to 136–140 Nm (100–103 lbf-ft).
9. Tighten bolts (D) at barrel end of anti-shimmy dampeners, and torque to 136–140 Nm (100–103 lbf-ft).

IMPORTANT:

Maintain arm parallel to walking beam while tightening. Do **NOT** overtighten.

10. Repeat Steps 2, [page 21](#) to 9, [page 22](#) for opposite end of walking beam.

IMPORTANT:

Torque bolts after first 5 hours of operation, and then again after 10 hours.

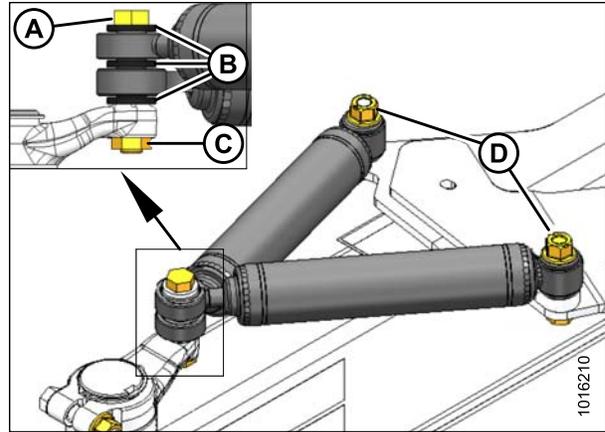


Figure 3.30: Anti-Shimmy System – Left Side

3.7 Installing Windshield Access Step

The windshield access step is secured on the railing of the right side platform (cab-forward).

1. Remove windshield access step (A) from shipping location on right platform, and remove packing materials (B) from step and railing.
2. Retrieve the three self-tapping bolts from a bag in the toolbox.

NOTE:

Use ignition key to unlock toolbox compartment.

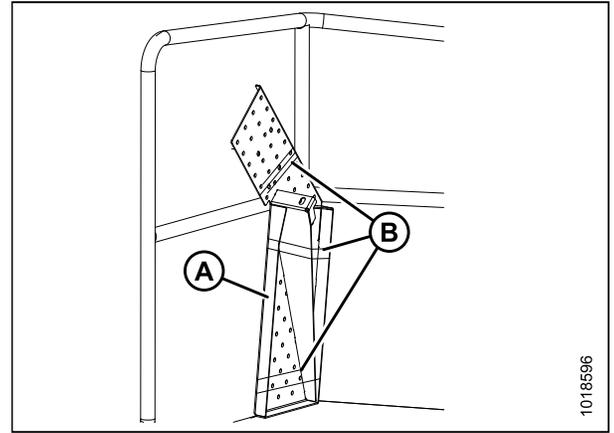


Figure 3.31: Step in Shipping Position

3. Position step (A) on right leg at forward end of platform as shown.
4. Install two M10 x 20 hex head screws (B) through top of step but do not tighten.
5. Install one M10 x 20 hex head screw (C) through step support.
6. Tighten and torque screws to 54–61 Nm (40–45 lbf·ft).

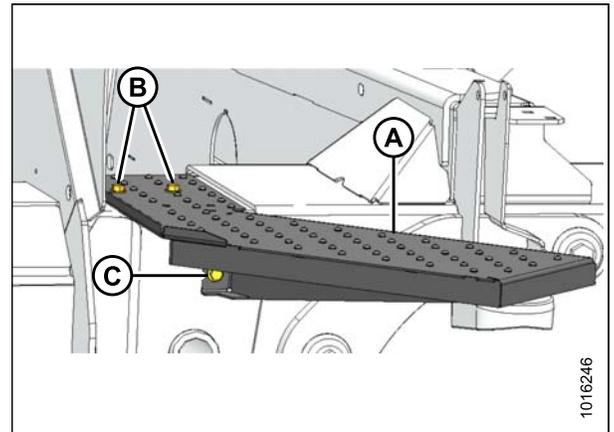


Figure 3.32: Windshield Access Step

3.8 Positioning Mirror Arms

The mirror/light support arms require repositioning from shipping position to working position.

1. Loosen retaining nut (A) and pivot nut (B) on support arm (C).
2. Swivel support arm (C) forward 90 degrees from shipping position to working position.

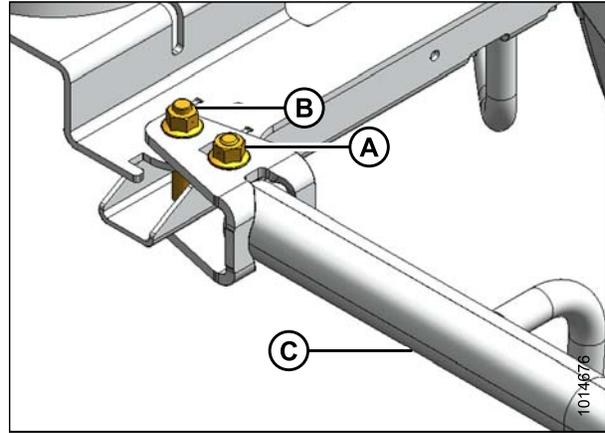


Figure 3.33: Mirror Arm in Shipping Position

3. Tighten retaining nut (A) to 37–41 Nm (28–30 lbf·ft).
4. Tighten pivot nut (B) to 24–27 Nm (18–20 lbf·ft).
5. Repeat above steps for opposite mirror.

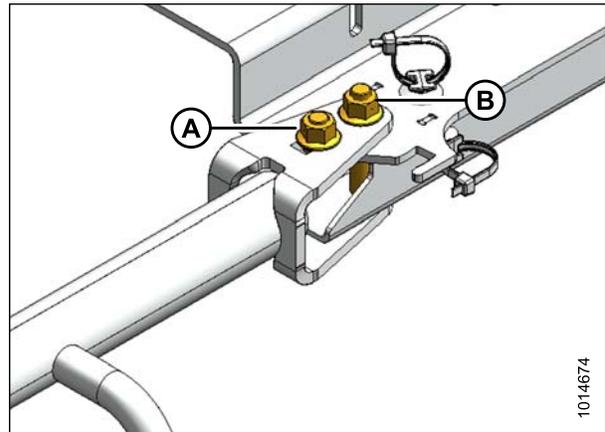


Figure 3.34: Mirror Arm in Working Position

3.9 Installing Slow Moving Vehicle (SMV) Signs

To install the SMV sign onto the mirror/light support and walking beam, proceed as follows:

1. Retrieve SMV signs from inside cab and hardware from toolbox.

NOTE:

Use ignition key to unlock cab door and toolbox compartment.

2. Position sign (A) on existing bracket (B) as shown on right cab-forward side mirror/light support, and secure with two M6 x 20 hex head bolts (C) and M6 lock nuts.

IMPORTANT:

Ensure SMV sign does **NOT** cover brake light.

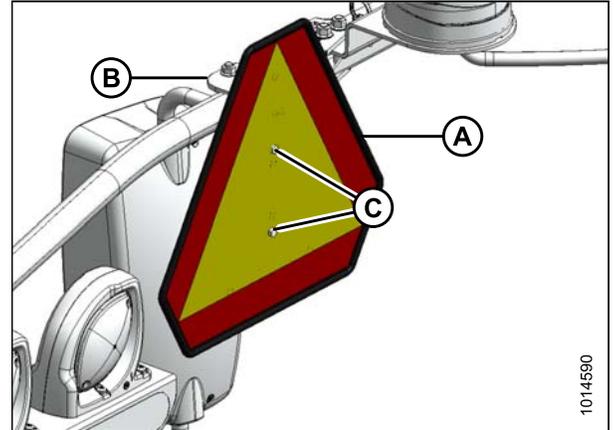


Figure 3.35: Cab Location

3. Locate support (A) on left cab-forward side of walking beam.
4. Position sign (B) on support (A) as shown, and secure with two M6 x 20 hex head bolts (C) and M6 lock nuts.

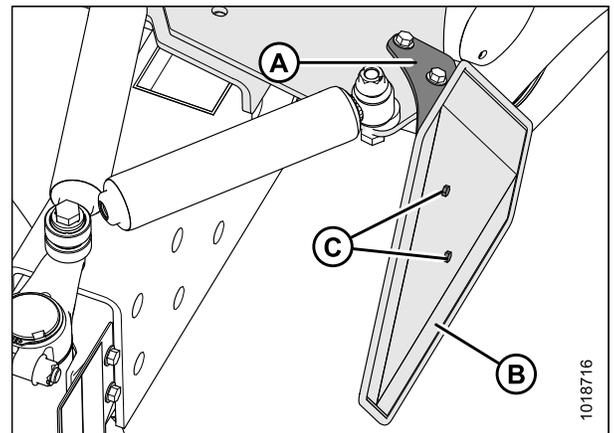


Figure 3.36: Walking Beam Location

3.10 Replacing Speed Identification Symbol (SIS) Decal (US Only)

This topic applies to windrowers used in the United States only.

1. Locate the existing SIS decal bracket on the left mirror/lighting arm.
2. Wipe the existing decal with a clean cloth to remove dirt and grease.
3. Apply the 30 mile/h SIS decal (A) (MD #208900) over the existing 45 km/h decal.

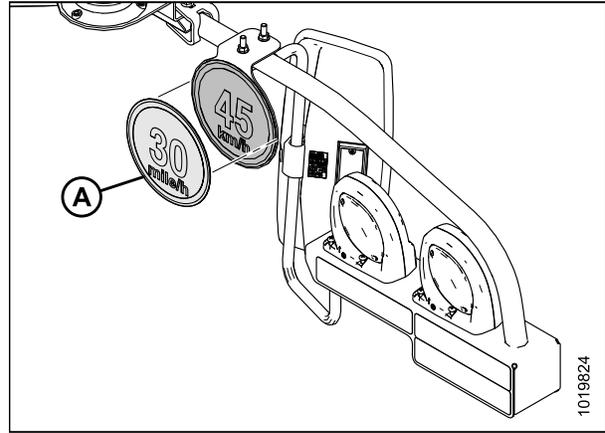


Figure 3.37: SIS Decal (US Only)

3.11 Installing Rear Ballast Package

When windrower operates with a heavy header, ballast needs to be added to the aft end. Use the following table to determine the amount of ballast required.

Refer to [4.1.11 Checking Tire Pressures, page 50](#) for proper tire pressures when operating with the applicable header.

Table 3.1 Ballast

Header Type	Description	Options	Base Kit	Additional Kits	Additional Float Springs
D125 X	25 foot, single reel, double knife, timed	–	0	0	0
D130 XL	30 foot, single reel, double knife, timed	Transport	1	0	0
D130 XL	30 foot, single reel, double knife, timed	Transport + upper cross auger + vertical knives	1	0	B6047
D135 XL	35 foot, single reel, double knife, untimed	Base	1	1	0
D135 XL	35 foot, single reel, double knife, untimed	Transport	1	1	B6047
D135 XL	35 foot, single reel, double knife, untimed	Transport + upper cross auger + vertical knives	1	2	B6047
D135 XL	35 foot, double reel, double knife, untimed	Base	1	1	0
D135 XL	35 foot, double reel, double knife, untimed	Transport	1	1	B6047
D135 XL	35 foot, double reel, double knife, untimed	Transport + upper cross auger + vertical knives	1	2	B6047
D140 XL	40 foot, double reel, double knife, untimed	Base	1	1	0
D140 XL	40 foot, double reel, double knife, untimed	Transport	1	1	B6047
D140 XL	40 foot, double reel, double knife, untimed	Transport + upper cross auger + vertical knives	1	2	B6047
D145 XL	45 foot, double reel, double knife, untimed	Base	1	1	B6047
D145 XL	45 foot, double reel, double knife, untimed	Transport	1	2	B6047
D145 XL	45 foot, double reel, double knife, untimed	Transport + upper cross auger + vertical knives	1	2	B6106

NOTE:

- Each kit consists of eight weights and weighs 163 kg (360 lb.).
- Ballast not required for A Series Auger and R Series Rotary Disc headers.

ASSEMBLING THE WINDROWER

To install rear ballast, follow these steps:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Refer to Table 3.1, page 27 to determine ballast to add to windrower.
2. Stop engine, and remove key.
3. Move latch (A) towards right cab-forward side of windrower.
4. Grasp louver (B), and lift hood to open.

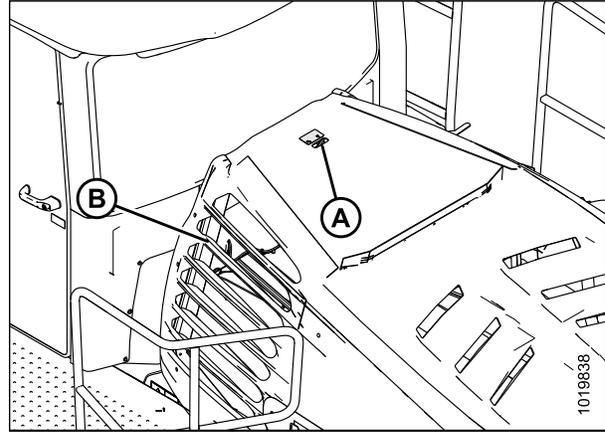


Figure 3.38: Engine Compartment Hood

5. Remove eight hex flange bolts (A).
6. Slightly pull light bezel assembly (B), and disconnect plugs P215 (C) and P210 (D) from back of red tail/brake lights inside bezel.
7. Remove light bezel assembly (B).

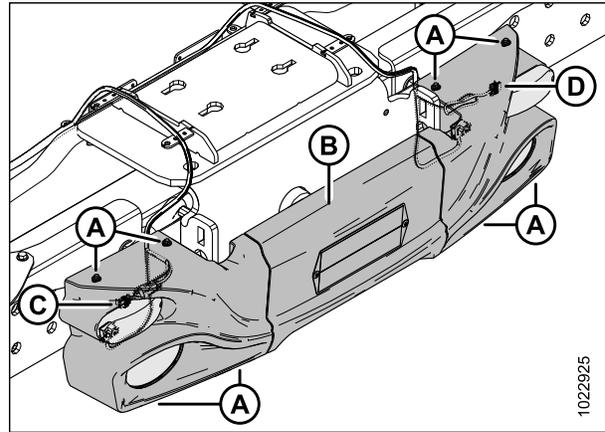


Figure 3.39: Rear Light Bezel

ASSEMBLING THE WINDROWER

- Separate light bezel assembly (A) by removing six hex screws (B).

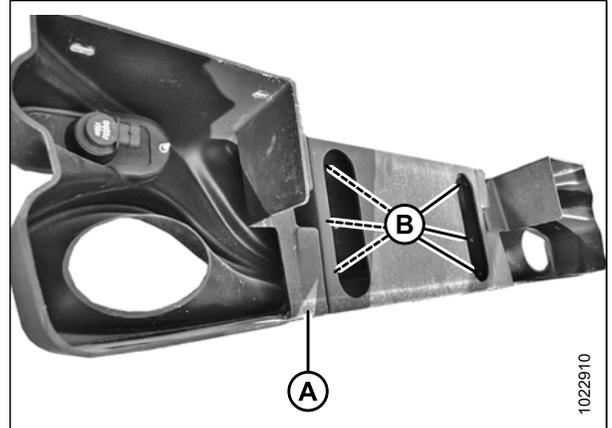


Figure 3.40: Bezel Assembly

NOTE:

- Retain center portion (A) of light bezel assembly for reinstallation when rear ballast are removed.
- Install six hex screws (B) on side bezels for safekeeping. These hex screws will be used when reinstalling center portion of light bezel.

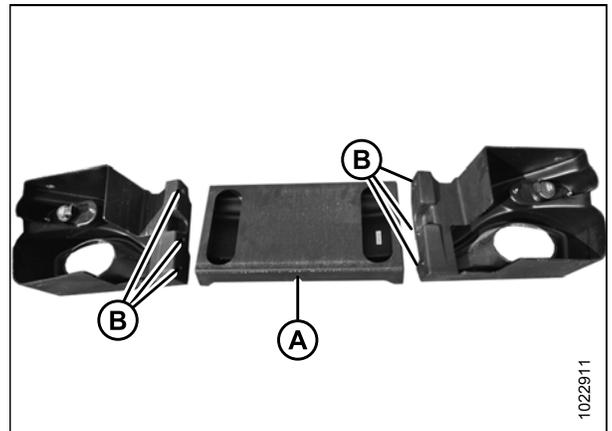


Figure 3.41: Bezel Assembly

- Grasp hood by louver (A) and lower until hood engages latch.

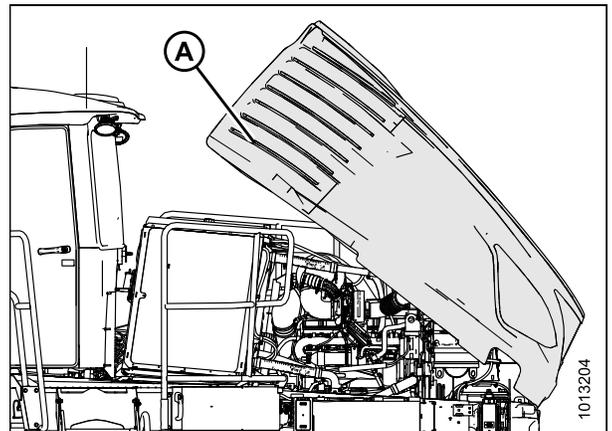


Figure 3.42: Closing Hood

ASSEMBLING THE WINDROWER

CAUTION

To avoid injury, keep fingers clear of weight bracket when installing weights.

10. Install weights (A) from outboard side and slide to middle of bracket on walking beam.
11. Install retaining bracket (B) on each side of weight bundle.

IMPORTANT:

Ensure retaining bracket (B) engage slot (C) in bracket.

12. Install rod (D) through retaining bracket and weights with spacers (E) as required.
13. Secure with nuts (F) and tighten.

IMPORTANT:

Ensure nuts (F) are flush with rod.

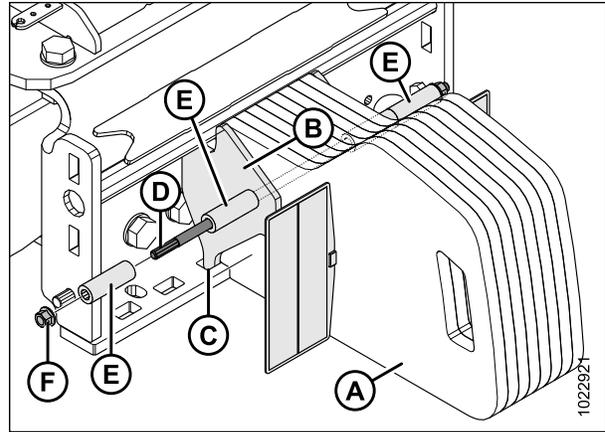


Figure 3.43: Weights Installed

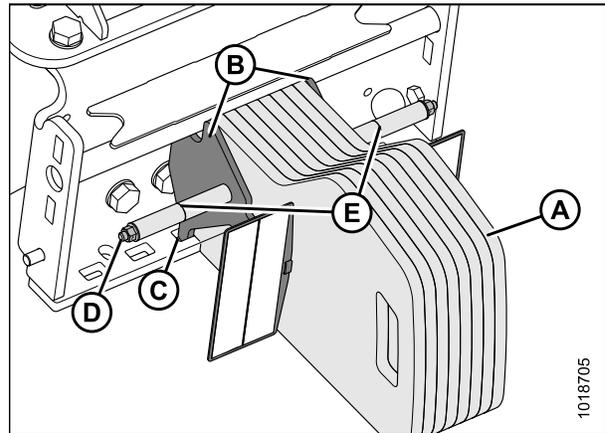


Figure 3.44: Base Kit – 163 kg (360 lb.)

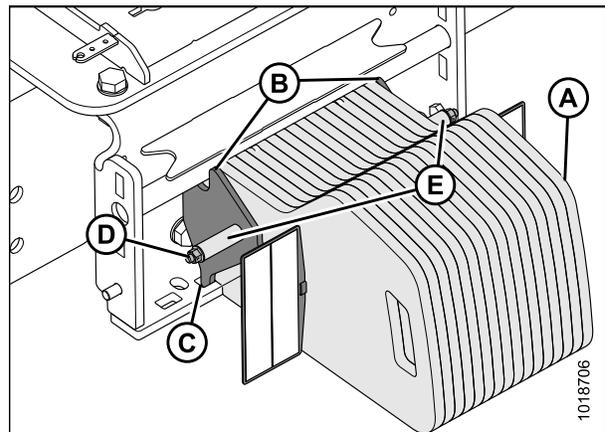


Figure 3.45: Two Sets – 326 kg (720 lb.)

ASSEMBLING THE WINDROWER

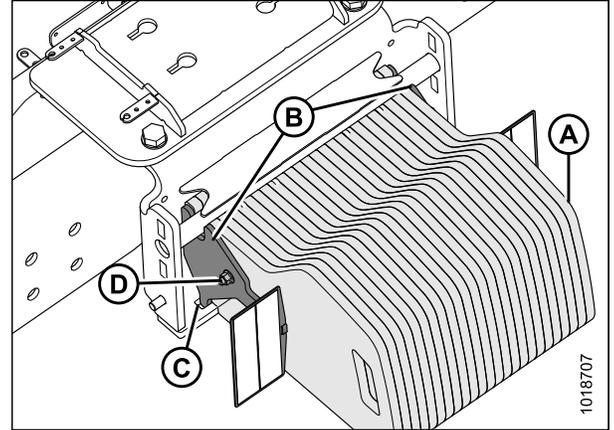


Figure 3.46: Three Sets – 489 kg (1080 lb.)

14. Move latch (A) towards right cab-forward side of windrower.
15. Grasp louver (B), and lift hood to open.

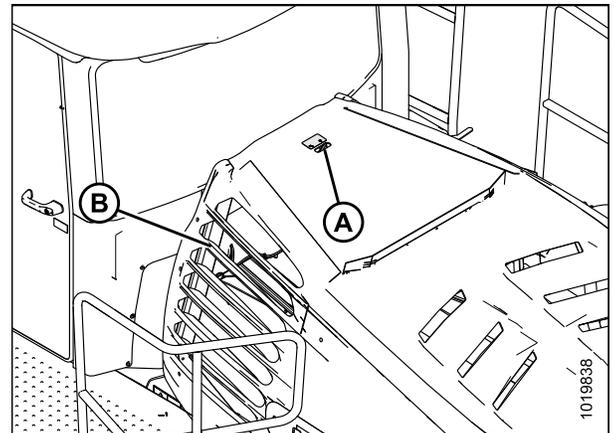


Figure 3.47: Engine Compartment Hood

16. Bring left side bezel (A) close to frame and connect plug P215 to back of red tail/brake light.
17. Loosely attach left side bezel (A) to frame with four hex flange bolt (B).
18. Repeat steps 16, page 31 to 17, page 31 attaching plug P210 at right side bezel (C).
19. Turn IGNITION key to RUN position, ensure that rear swath lights (D) and red tail/brake lights (E) are working.
20. If lights are working, tighten hex flange bolt (B) to secure left and right light bezel.

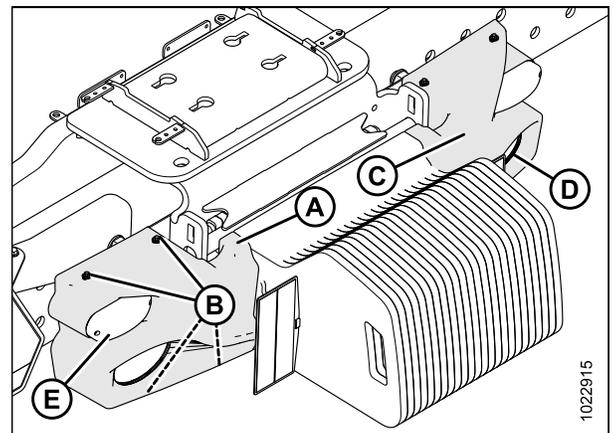


Figure 3.48: Rear Light Bezel with Ballast

IMPORTANT:

Ensure rear swath lights (D) are centered in light bezel.

ASSEMBLING THE WINDROWER

21. Grasp hood by louver (A) and lower until hood engages latch.

NOTE:

Check that latch lever is not tilted to ensure hood is latched.

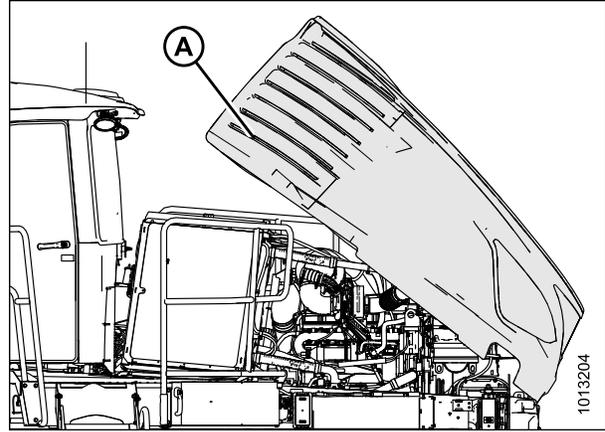


Figure 3.49: Closing Hood

3.12 Lubricating the Windrower

For grease specification, refer to the inside back cover of this book for quick reference.

3.12.1 Lubrication Procedure


DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Wipe grease fitting with a clean cloth before greasing to avoid injecting dirt and grit.
2. Inject grease through fitting with grease gun until grease overflows fitting. Do **NOT** overgrease wheel bearings.
3. Leave excess grease on fitting to keep out dirt.
4. Replace any loose or broken fittings immediately.
5. Remove and thoroughly clean any fittings (including the lubricant passageway) that will not take grease. Replace fitting, if necessary.

3.12.2 Lubrication Points

Figure 3.50: Lubrication Points

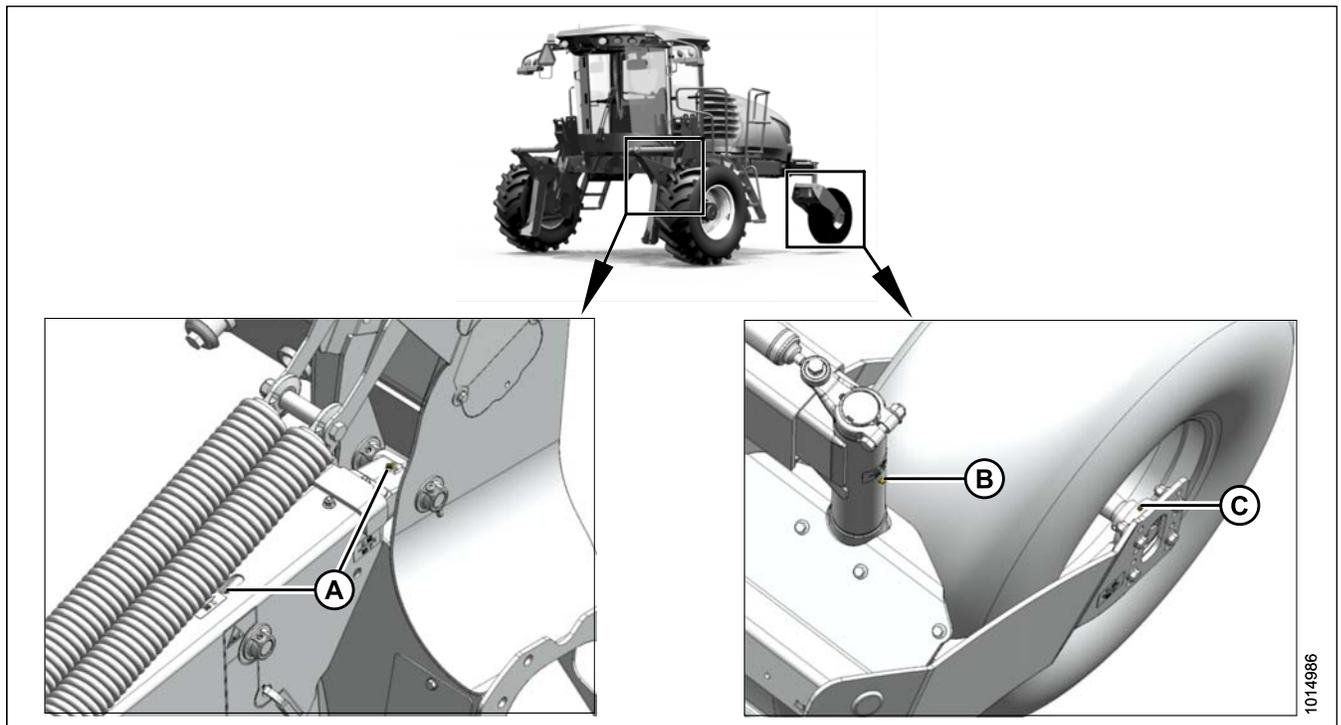

A - Top Link (Two Places) (Both Sides)
 C - Forked Caster Wheel Bearing (Two Places) (Both Wheels)

B - Caster Pivot (Both Sides)

1014986

3.13 Connecting Batteries

1. Move latch (A) towards right cab-forward side of the windrower.
2. Grasp louver (B), and lift the hood to open.

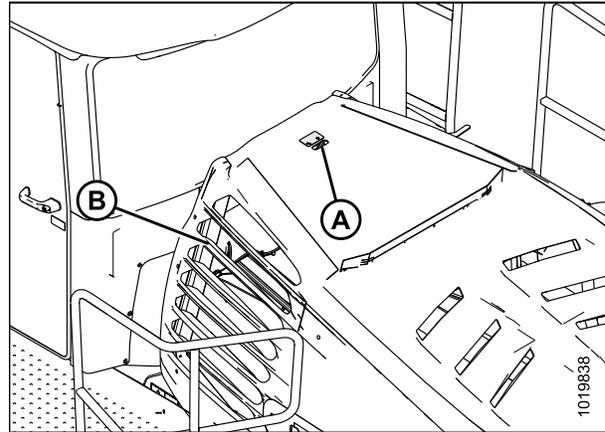


Figure 3.51: Engine Compartment Hood

3. Lift up on the cab-end of the cover (A) to disengage it from the retaining tab (B), and swing cover away from the frame.

IMPORTANT:

Batteries are negative grounded. Always connect starter cable to the positive (+) terminal of battery and battery ground cable to negative (-) terminal of battery. Reversed polarity in battery or alternator may result in permanent damage to electrical system.

NOTE:

Before connecting the harness to the batteries, ensure that positive terminal is positioned on the right side of the battery when installed on the battery support.

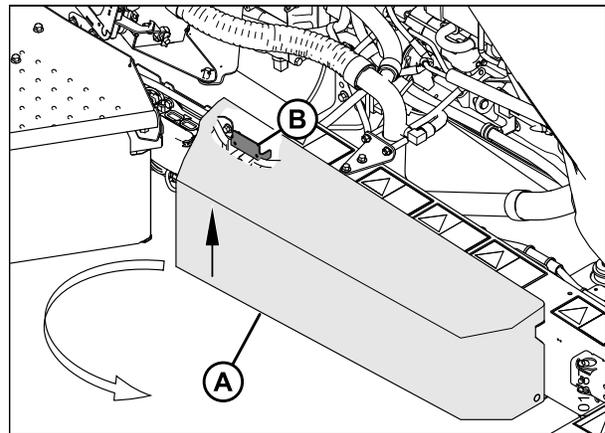


Figure 3.52: Battery Location

4. Attach red positive (+) cable terminals to positive posts (B) on batteries and tighten clamps. Reposition plastic covers onto clamps.
5. Attach black negative (-) cable terminals to negative posts (A) on batteries and tighten clamps. Reposition plastic covers onto clamps.

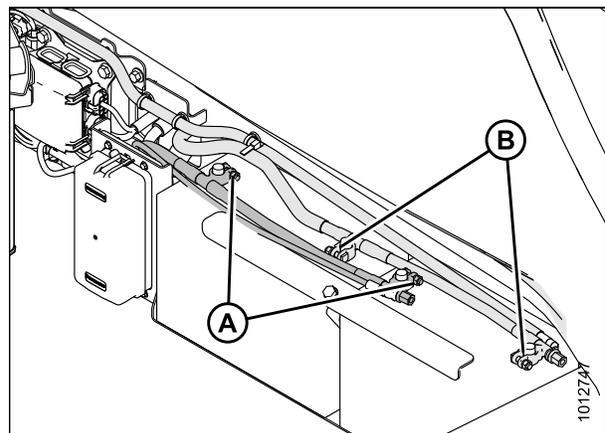


Figure 3.53: Batteries

ASSEMBLING THE WINDROWER

6. Swing the cover (A) towards the windrower frame. Lift up on the cab end of the cover until it is secured by the retaining tab (B) on the frame.
7. Grasp the hood by the louver (C) and lower until hood engages latch.

NOTE:

Check that the latch lever is not tilted to ensure hood is latched.

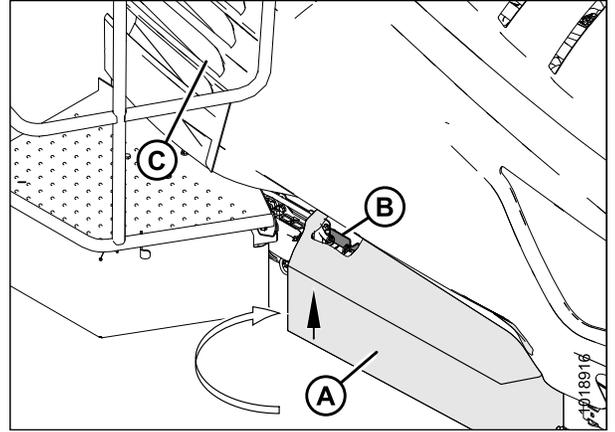


Figure 3.54: Battery Cover

3.14 Starting the Engine

DANGER

- Avoid possible injury or death from a runaway machine.
- This machine has safety devices which allow the engine to start only when the ground speed lever is in PARK, the steering wheel is locked in the NEUTRAL position, and the HEADER ENGAGE switch is in the OFF position. Under no circumstances are these devices to be deliberately rewired or misadjusted so that the engine can be started with controls out of NEUTRAL.
- Do NOT start engine by shorting across starter or starter relay terminals. If normal starting circuitry is bypassed, machine will start with drive engaged and move.
- Start engine only from operator's seat with controls in NEUTRAL. NEVER start engine while standing on ground. Never try to start engine with someone under or near machine.
- Before starting engine, be sure there is plenty of ventilation to avoid asphyxiation.

IMPORTANT:

Before starting assembly, check the fluid level of the following, and add fluid if necessary:

- Engine oil. Refer to [4.1.4 Checking and Adding Engine Oil, page 44](#)
- Hydraulic oil. Refer to [4.1.5 Checking and Adding Hydraulic Oil, page 46](#)
- Gearbox oil. Refer to [4.1.8 Checking Engine Gearbox Lubricant Level and Adding Lubricant, page 48](#)

IMPORTANT:

Do NOT tow machine to start engine. Damage to hydrostatic drives will result.

1. Ensure the cab-forward or engine-forward directional lock (A) is engaged at the base of the steering column.

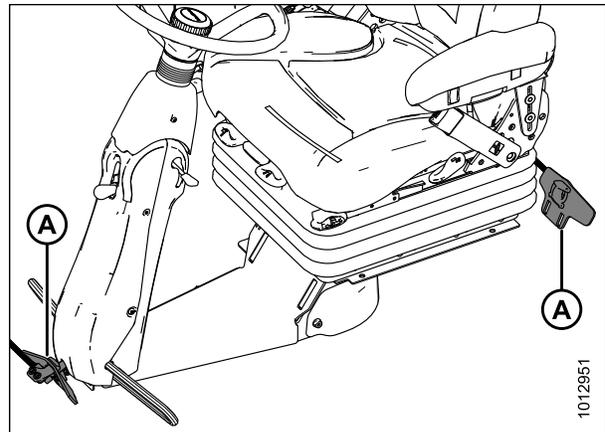


Figure 3.55: Direction Locks

ASSEMBLING THE WINDROWER

2. Move ground speed lever (GSL) (A) into PARK (C).
3. Turn steering wheel until it locks. It may be possible to move the steering wheel slightly in the locked position.

IMPORTANT:

Do **NOT** attempt to force the wheel out of the locked position or damage to the steering system may occur.

4. Fasten seat belt.
5. Push HEADER ENGAGE switch (B) to ensure it is in the OFF position.

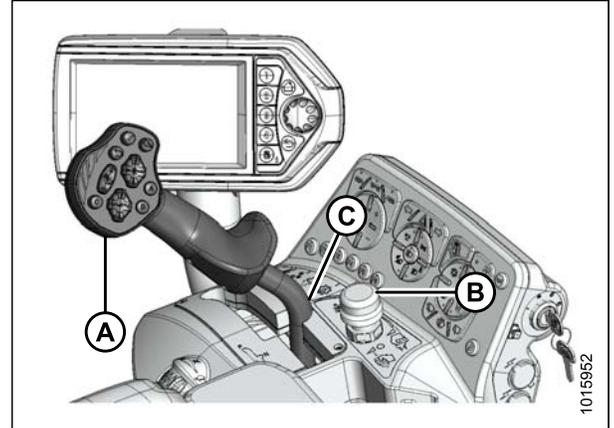


Figure 3.56: Operator Controls

6. Turn IGNITION switch (A) to the ON position, and the Harvest Performance Tracker (HPT) (B) will illuminate. If HPT is still booting up, wait for Wait to Start (WTS) symbol (C) to disappear before trying to start engine.
7. Check that red PARK symbol light (D) is ON and that there are no error messages on screen.
8. Press HORN button (E) three times.

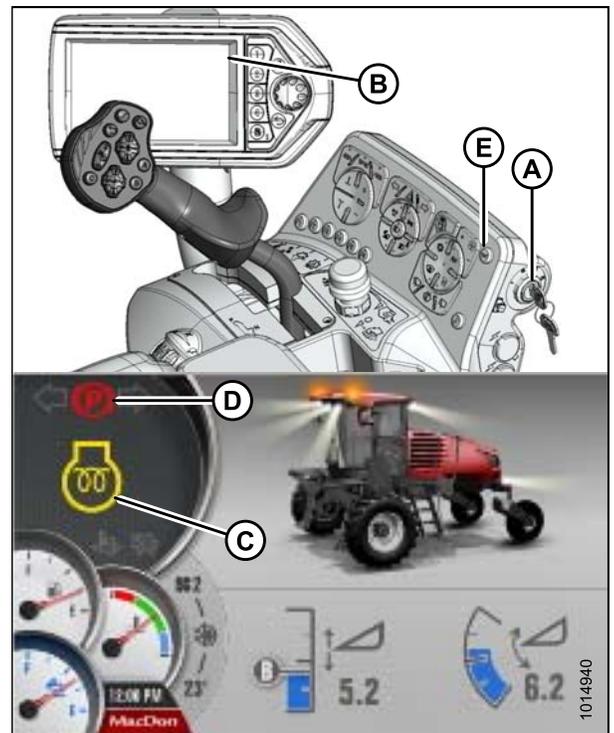


Figure 3.57: Operator Console and HPT Run Screen

ASSEMBLING THE WINDROWER

- Turn the IGNITION switch to crank (A).

NOTE:

When the engine starts and the header is not engaged, the HPT will display as shown. This is the HEADER DISENGAGED screen (B).

IMPORTANT:

- Do **NOT** operate starter for longer than 15 seconds at a time.
- If engine does not start, wait at least 2 minutes before trying again.
- If you crank the engine for more than 30 seconds within a 2-minute period, the engine will lock the starter circuit to prevent overheating, and a flashing WTS symbol will illuminate on the HPT display. Wait for the WTS symbol to stop flashing before attempting to crank engine again.
- If engine still does not start, refer to the following table: [3.2 Engine Start Troubleshooting](#), page 39.

NOTE:

When the engine temperature is below 5°C (40°F), the engine will cycle through a period where it appears to labor until the engine warms up. Do **NOT** operate engine above 1500 rpm until the HPT engine temperature gauge is above the blue range (A).

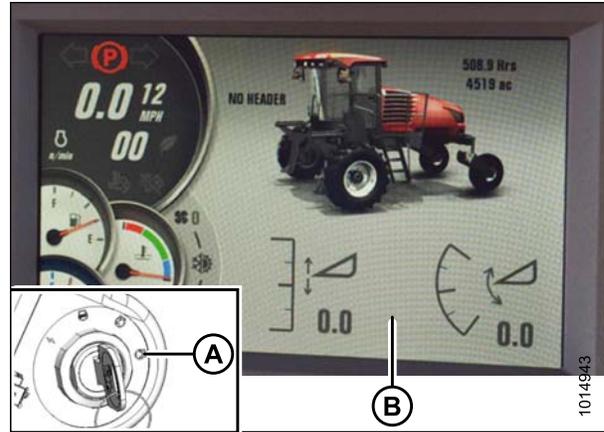


Figure 3.58: HPT Header Disengage Screen



Figure 3.59: HPT Header Disengage Screen

ASSEMBLING THE WINDROWER

Table 3.2 Engine Start Troubleshooting

Problem	Solution
Controls not in NEUTRAL	<ul style="list-style-type: none"> • Move GSL to NEUTRAL • Move steering wheel to locked position • Disengage header clutch
Operator's station not locked	<ul style="list-style-type: none"> • Adjust position of operator's station • Ensure lock is engaged
Neutral interlock misadjusted	<ul style="list-style-type: none"> • Refer to the windrower technical manual
No fuel to engine	<ul style="list-style-type: none"> • Fill empty fuel tank • Replace clogged filter • Check for blocked or damaged fuel lines
Old fuel in tank	<ul style="list-style-type: none"> • Drain tank • Refill with fresh fuel
Water, dirt, or air in fuel system	<ul style="list-style-type: none"> • Drain, flush, fill, and prime system
Improper type of fuel	<ul style="list-style-type: none"> • Use proper fuel for operating conditions
Crankcase oil too heavy	<ul style="list-style-type: none"> • Use recommended oil
Low battery output	<ul style="list-style-type: none"> • Test the battery • Check battery electrolyte level
Poor battery connection	<ul style="list-style-type: none"> • Clean and tighten loose connections
Faulty starter	<ul style="list-style-type: none"> • Refer to the windrower technical manual
Wiring shorted, circuit breaker open	<ul style="list-style-type: none"> • Check continuity of wiring and breaker (manually reset)
Faulty injectors	<ul style="list-style-type: none"> • Refer to the windrower technical manual

4 Performing Predelivery Checks

Perform all procedures in this chapter in the order in which they are listed.

IMPORTANT:

The machine is factory-set and should not require further adjustments; however, perform the following checks to ensure your machine operates at maximum performance. Adjustments should be made only if absolutely necessary and in accordance with the instructions in this manual.

4.1 Completing Predelivery Checklist

1. Lower header so that lift cylinders are fully retracted.
2. Shut down engine, and remove key.
3. Perform the final checks and adjustments listed on the following pages and the *Predelivery Checklist, page 113* (yellow sheet attached to this instruction) to ensure the machine is field-ready.

IMPORTANT:

Ensure the Operator or the Dealer retains the completed Predelivery Checklist.

4.1.1 Recording Serial Numbers

Record the windrower and engine serial numbers on the *Predelivery Checklist, page 113*.

The windrower serial number plate (A) is located on the left side of the main frame near the walking beam as shown.

IMPORTANT:

Confirm serial number with manifest or work order.

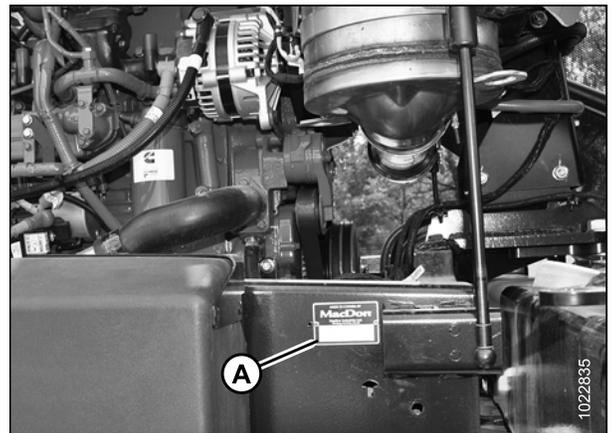


Figure 4.1: Windrower Serial Number Location

PERFORMING PREDELIVERY CHECKS

The engine serial number plate (A) is located on top of the engine cylinder head cover as shown.

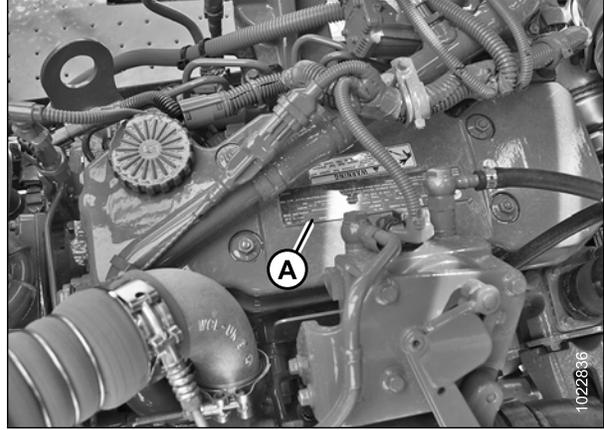


Figure 4.2: Engine Serial Number Location (M1170 Shown, M1240 Similar)

4.1.2 Checking and Adding Wheel Drive Lubricant Level

1. Park the windrower on level ground.
2. Position windrower so plugs (A) and (B) are horizontally aligned with the center (C) of the hub.
3. Stop the engine, and remove the key.
4. Remove plug (A) or (B). The lubricant should be visible through the port or running out slightly.
5. If necessary, add lubricant until lubricant runs out from the open port (A) or (B). For lubricant specifications, refer to the inside back cover of this book.

NOTE:

The type of lubricant used after the first lubricant change is different from the factory supplied lubricant.

6. Reinstall plugs and tighten.

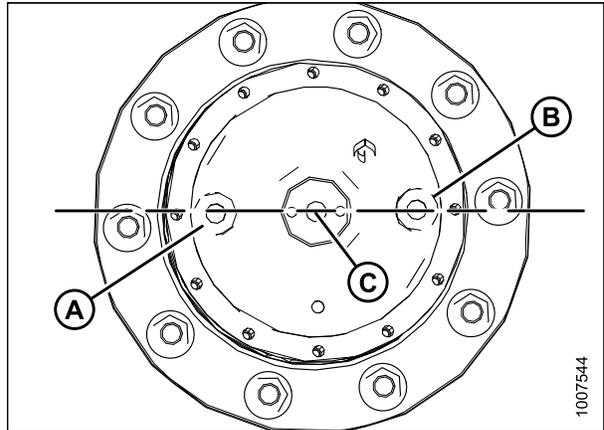


Figure 4.3: Drive Wheel Hub

PERFORMING PREDELIVERY CHECKS

4.1.3 Checking Engine Air Intake

1. Check all engine air intake ducting (A) and joints for looseness. Tighten hose clamps as required.
2. Check that end cap (B) is secure and locked.

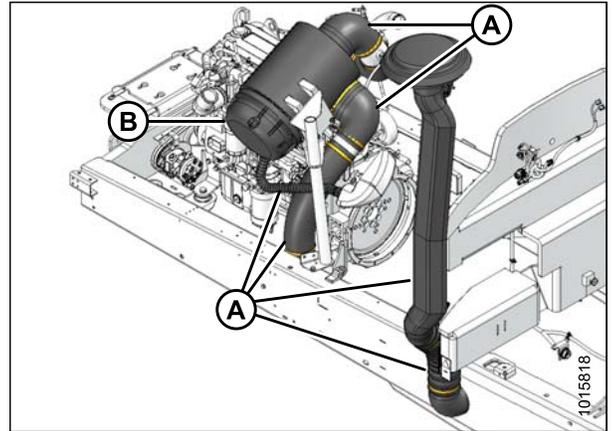


Figure 4.4: Engine Air Intake

3. Check the three constant torque hose clamps (A) on intake duct. Clamp is properly tightened when screw tip (A) extends beyond housing and Belleville washers (B) are almost flat.
4. Check clamp (C) at turbo inlet.

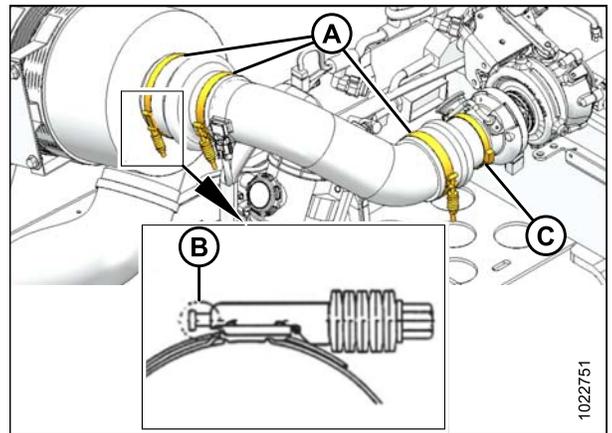


Figure 4.5: Constant Torque Clamps

PERFORMING PREDELIVERY CHECKS

4.1.4 Checking and Adding Engine Oil

NOTE:

Oil can be checked without opening the hood, but to add oil, hood must be open.

1. Operate the engine at low idle and check for leaks at the filter and drain plug.
2. Shut down the engine and remove the key. Wait about 5 minutes.
3. Remove the dipstick (A) by turning it counterclockwise to unlock.
4. Wipe the dipstick clean and reinsert it into the engine.

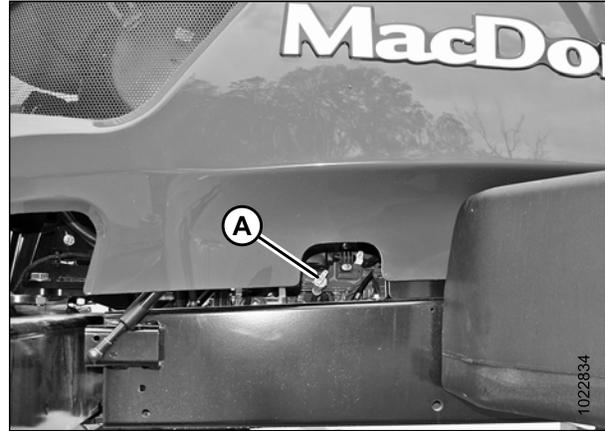


Figure 4.6: Dipstick Location

5. Remove the dipstick again and check the oil level.

NOTE:

Oil level should be between LOW (L) and HIGH (H). If level is below LOW mark, 1.9 liters (2 US quarts) will raise the level from LOW to HIGH.

6. Replace dipstick and turn it clockwise to lock.

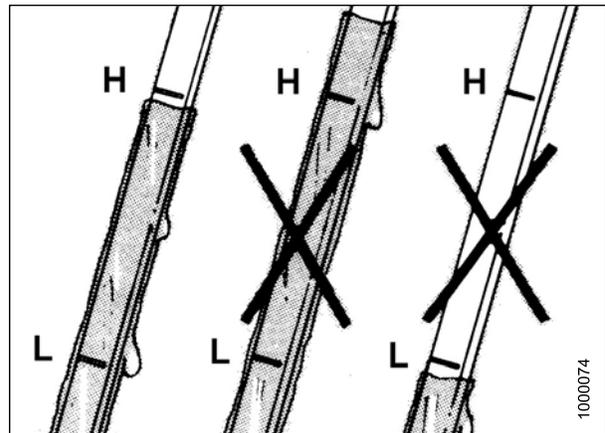


Figure 4.7: Engine Oil Level

PERFORMING PREDELIVERY CHECKS

To add oil, do the following:

7. Move latch (A) towards right cab-forward side of the windrower.
8. Grasp louver (B), and lift hood to open.

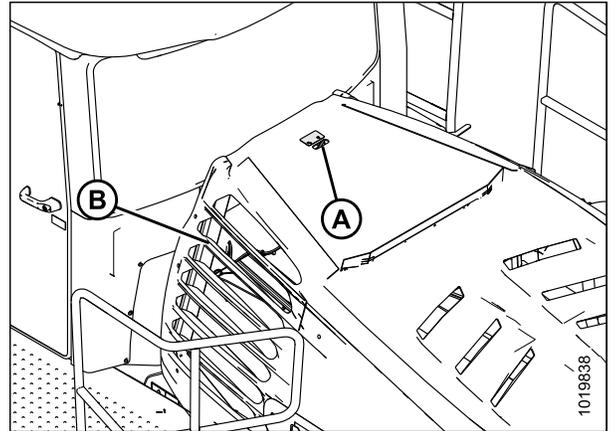


Figure 4.8: Hood

9. Clean around filler cap (A) and remove by turning it counterclockwise.
10. Carefully pour 1.9 liters (2 US quarts) to raise the level from LOW to HIGH. A funnel is recommended to avoid spillage. For oil specifications, refer to the inside back cover of this book.



CAUTION

Do NOT fill above the HIGH mark.

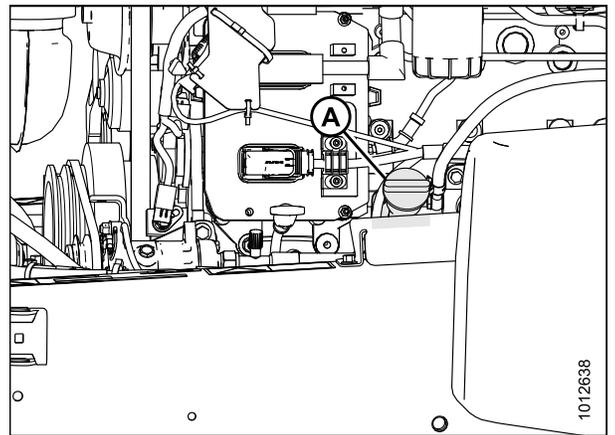


Figure 4.9: Oil Filler Cap

11. Replace oil filler cap (A) and turn it clockwise until snug.

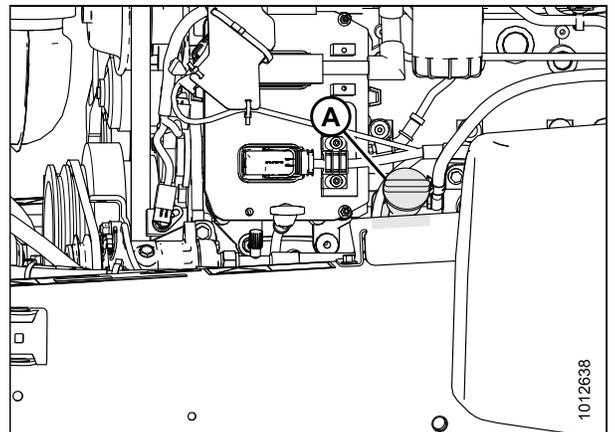


Figure 4.10: Oil Filler Cap

PERFORMING PREDELIVERY CHECKS

12. Grasp the hood by louver (A) and lower until hood engages latch.

NOTE:

Check that latch lever is not tilted to ensure hood is latched.

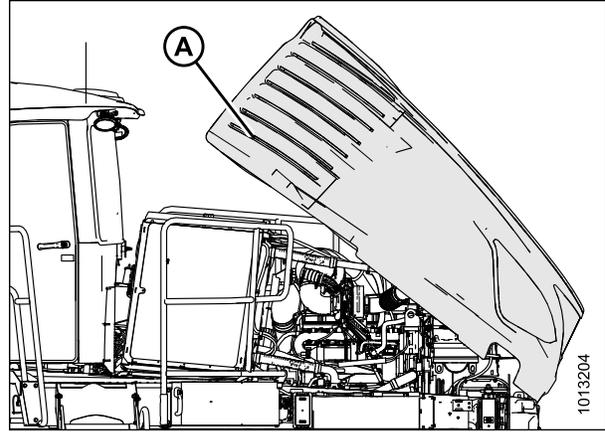


Figure 4.11: Lowering Hood

4.1.5 Checking and Adding Hydraulic Oil

⚠ WARNING

Avoid high-pressure fluids. Escaping fluid can penetrate the skin causing serious injury.

1. Park windrower on level ground, and lower header so that lift cylinders are fully retracted.
2. Shut down the engine, and remove the key.
3. Locate the sight glass (A) that is provided on the right side of the tank. It indicates the oil level and any signs of contamination.

NOTE:

No oil in the sight glass indicates that the oil level is below the add mark on the dipstick. The sight glass is viewable with the hood open or closed.

4. Ensure the hydraulic oil level is between the low and full indicator marks.
5. Add oil if necessary. For specifications, refer to the inside back cover of this book.

NOTE:

After running up a header, the oil level should be checked again.

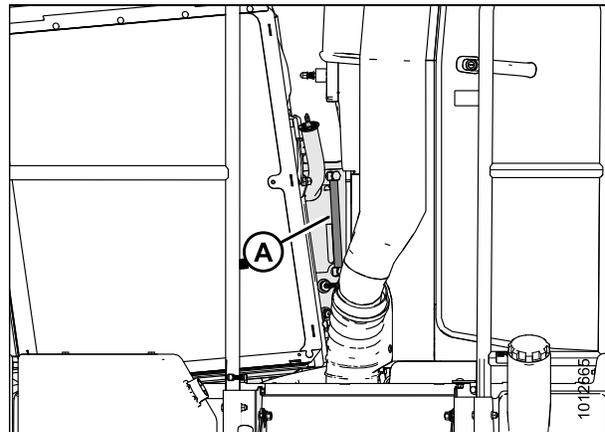


Figure 4.12: Hydraulic Oil Sight Glass

PERFORMING PREDELIVERY CHECKS

4.1.6 Checking Fuel Separator

1. Place a container under the filter drain (A).
2. Turn drain valve (A) by hand 1-1/2 to 2 turns counterclockwise until fuel begins draining.
3. Drain the filter sump of water and sediment until clear fuel is visible. Clean as necessary.
4. Turn the drain valve (A) by hand 1-1/2 to 2 turns clockwise until tight.
5. Dispose of fluid in container in a safe manner.

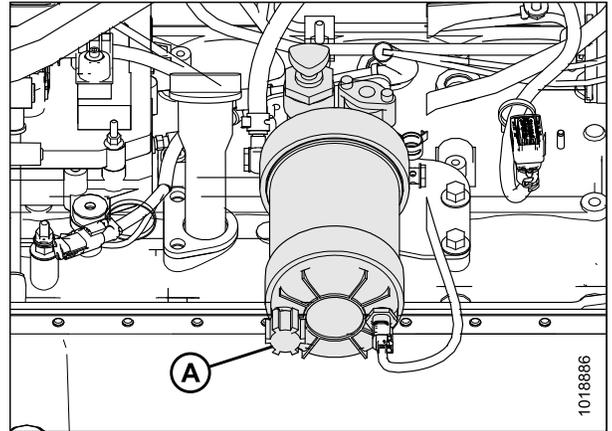


Figure 4.13: Fuel Filter

4.1.7 Checking Engine Coolant Level

NOTE:

Ensure the engine has cooled down prior to checking.

1. Move latch (A) towards right cab-forward side of the windrower.
2. Grasp louver (B), and lift hood to open.

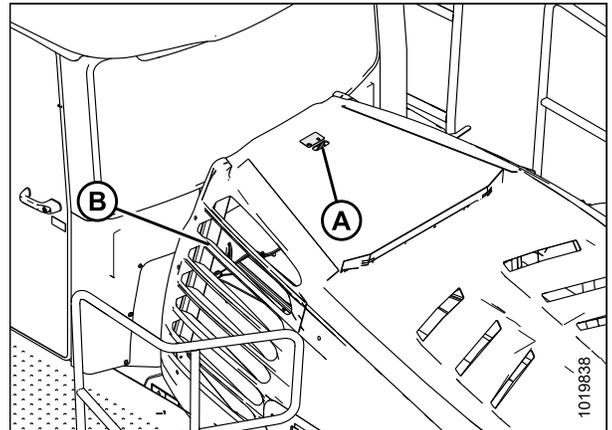


Figure 4.14: Hood

3. The tank has a MAX and MIN COLD line marker. Coolant level should be kept at the MAX COLD line (A).

NOTE:

When checking coolant level, use the MAX COLD line on the side of tank that faces cab for an accurate measurement.

NOTE:

For specifications, refer to the inside back cover of this book.

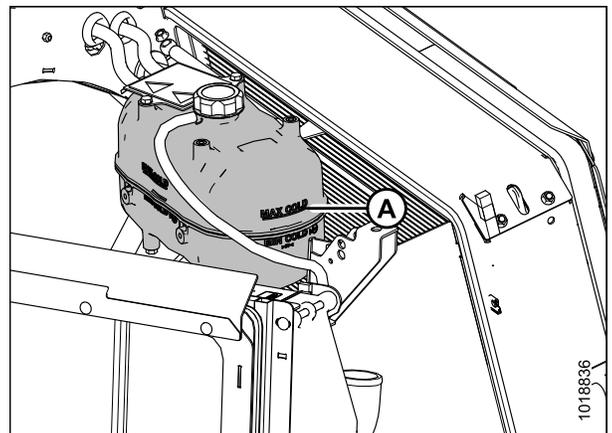


Figure 4.15: Coolant Tank

PERFORMING PREDELIVERY CHECKS

4. Grasp the hood by louver (A) and lower until hood engages latch.

NOTE:

Check that latch lever is not tilted to ensure hood is latched.

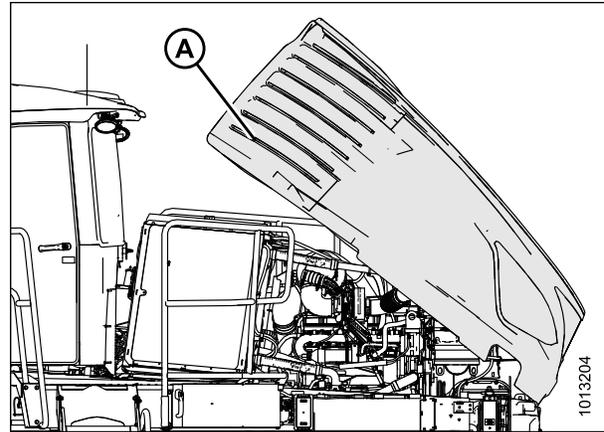


Figure 4.16: Lowering Hood

4.1.8 Checking Engine Gearbox Lubricant Level and Adding Lubricant

1. Remove check plug (A) on underside of windrower beneath the main pumps. The lubricant should be visible through the hole or slightly running out.
2. Add lubricant, if required, through the check plug hole (A) using a squeeze bottle, or by removing the breather at the top right side of the gearbox. For specification, refer to the inside back cover of this book.

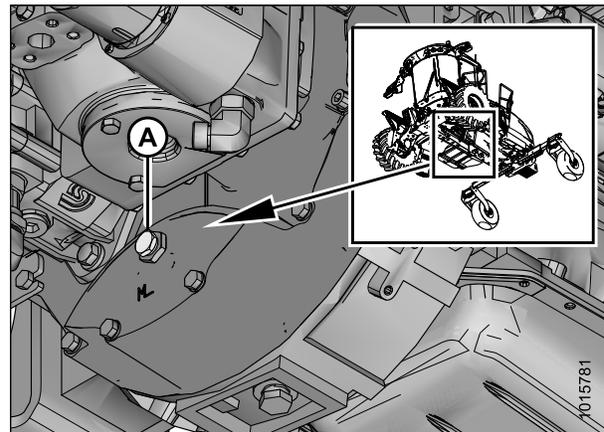


Figure 4.17: Gearbox Lubricant Check Plug

4.1.9 Checking Air Conditioning (A/C) Compressor Belts

1. Ensure A/C compressor belts (A) are tensioned so that a force of 35–55 N (8–12 lbf) on each belt deflects belt 5 mm (3/16 in.) at midspan.

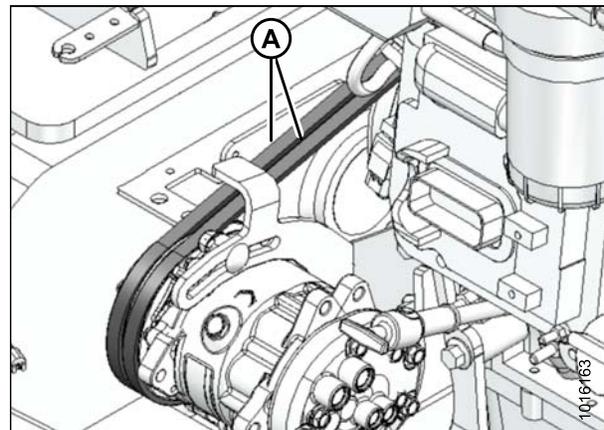


Figure 4.18: A/C Compressor Belts

4.1.10 Checking Operating Safety System

Perform the following checks to ensure the windrower operating safety systems are functioning properly:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

Check to be sure all bystanders have cleared the area.

1. With the engine running and the seat base in engine-forward mode, engage the HEADER ENGAGE switch. Confirm the header drive does **NOT** engage and the Harvest Performance Tracker (HPT) displays LOCK SEAT BASE IN CAB-FORWARD.
2. With the engine running and the seat base in cab-forward mode, stand up and engage the HEADER DRIVE switch. The header drive should **NOT** engage and the HPT displays OPERATOR MUST BE SEATED.
3. With the engine running and the seat base is between locked positions, move the GSL out of PARK. Confirm the engine immediately shuts down and the HPT displays LOCK SEAT BASE and sounds a tone.
4. Shut down the engine and engage HEADER ENGAGE switch. Try starting the engine and confirm the HPT displays DISENGAGE HEADER. If the engine turns over, the safety system requires adjustment. Refer to the technical manual for adjustment procedures.
5. Shut down the engine and open the cooler box door. Try starting the engine and confirm the HPT displays CLOSE COOLER BOX DOOR. If the engine turns over, the safety system requires adjustment. Refer to the technical manual for adjustment procedures.
6. Shut down the engine and perform the following safety system checks:
 - a. Open engine compartment hood.
 - b. Pry the steering interlock away from pintle arms (A) by inserting a wedge or pry bar between one of the interlock channels (B) and pintle arm.
 - c. Insert a wooden block approximately 19 mm (3/4 in.) thick between the opposite channel and the pintle arm so the interlock channel is clear of the pintle arm.
 - d. Turn the steering wheel off-center and move the GSL to PARK.
 - e. Try starting the engine and confirm the HPT displays LOCK STEERING WHEEL IN CENTER POSITION. The engine should **NOT** turn over. If the engine turns over, the safety system requires adjustment. Refer to the technical manual for adjustment procedures.
 - f. Remove key from ignition.
 - g. Remove wooden block and close hood.

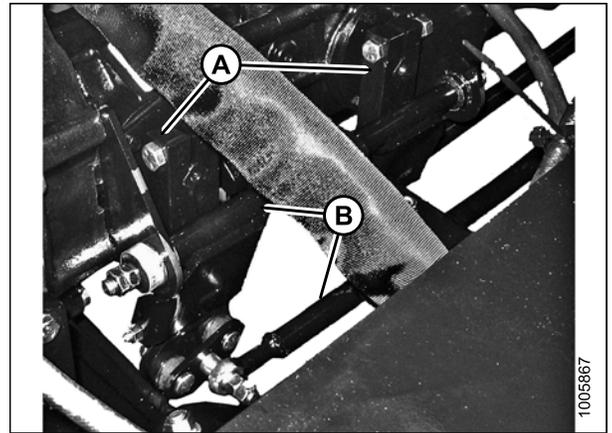


Figure 4.19: Pintle Arms

PERFORMING PREDELIVERY CHECKS

7. Shut down the engine and center the steering wheel. Place the GSL in NEUTRAL but not in PARK. Try starting the engine and confirm the HPT displays MOVE GSL INTO PARK. The engine should **NOT** turn over. If the engine turns over, the safety system requires adjustment. Refer to the technical manual for adjustment procedures.
8. Shut down the engine and center the steering wheel. Place the GSL in PARK and ensure the operator's station is **NOT** locked. Try starting the engine and confirm that the engine does **NOT** crank, and the HPT displays LOCK SEAT BASE. If the engine starts, the safety system requires adjustment. Refer to the technical manual for adjustment procedures.

4.1.11 Checking Tire Pressures

Check tire pressures with a gauge.

Drive Wheel Tires: For optimal performance, drive wheel (A) tire pressures are determined by tire type, header size, and additional options. Refer to Table 4.1, page 50.

Caster Wheel Tires: Inflate all caster wheel (B) tires to 110 kPa (16 psi).

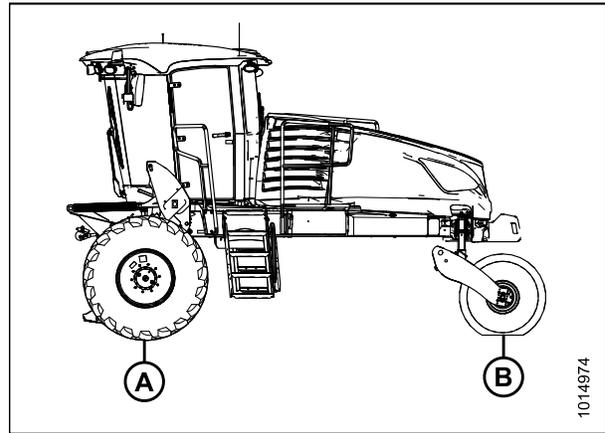


Figure 4.20: Windrower Tires

Table 4.1 Drive Tire Inflation Specifications

Header Type	Description	Options	Weight Kit	Tire Type	Pressure kPa (psi)
Draper Header					
D125X single reel	25-foot, double knife, timed	—	—	Bar	159 (23)
D125X single reel	25-foot, double knife, timed	—	—	Turf	159 (23)
D130XL single reel	30-foot, double knife, timed	Transport	1	Bar	200 (29)
D130XL single reel	30-foot, double knife, timed	Transport	1	Turf	241 (35)
D130XL single reel	30-foot, double knife, timed	Transport + upper cross auger + vertical knives	1	Bar	241 (35)
D130XL single reel	30-foot, double knife, timed	Transport + upper cross auger + vertical knives	1	Turf	241 (35)
D135XL single reel	35-foot, double knife, untimed	Base	2	Bar	200 (29)

PERFORMING PREDELIVERY CHECKS

Table 4.1 Drive Tire Inflation Specifications (continued)

Header Type	Description	Options	Weight Kit	Tire Type	Pressure kPa (psi)
D135XL single reel	35-foot, double knife, untimed	Base	2	Turf	241 (35)
D135XL single reel	35-foot, double knife, untimed	Transport	2	Bar	241 (35)
D135XL single reel	35-foot, double knife, untimed	Transport	2	Turf	241 (35)
D135XL single reel	35-foot, double knife, untimed	Transport + upper cross auger + vertical knives	3	Bar	241 (35)
D135XL single reel	35-foot, double knife, untimed	Transport + upper cross auger + vertical knives	3	Turf	241 (35)
D135XL double reel	35-foot, double knife, untimed	Base	2	Bar	221 (32)
D135XL double reel	35-foot, double knife, untimed	Base	2	Turf	241 (35)
D135XL double reel	35-foot, double knife, untimed	Transport	2	Bar	241 (35)
D135XL double reel	35-foot, double knife, untimed	Transport	2	Turf	241 (35)
D135XL double reel	35-foot, double knife, untimed	Transport + upper cross auger + vertical knives	3	Bar	283 (41)
D135XL double reel	35-foot, double knife, untimed	Transport + upper cross auger + vertical knives	3	Turf	241 (35)
D140XL double reel	40-foot, double knife, untimed	Base	2	Bar	241 (35)
D140XL double reel	40-foot, double knife, untimed	Base	2	Turf	241 (35)
D140XL double reel	40-foot, double knife, untimed	Transport	2	Bar	241 (35)
D140XL double reel	40-foot, double knife, untimed	Transport	2	Turf	241 (35)
D140XL double reel	40-foot, double knife, untimed	Transport + upper cross auger + vertical knives	3	Bar	283 (41)
D140XL double reel	40-foot, double knife, untimed	Transport + upper cross auger + vertical knives	3	Turf	241 (35)
D145XL double reel	45-foot, double knife, untimed	Base	2	Bar	241 (35)

PERFORMING PREDELIVERY CHECKS

Table 4.1 Drive Tire Inflation Specifications (continued)

Header Type	Description	Options	Weight Kit	Tire Type	Pressure kPa (psi)
D145XL double reel	45-foot, double knife, untimed	Base	2	Turf	241 (35)
D145XL double reel	45-foot, double knife, untimed	Transport	3	Bar	262 (38)
D145XL double reel	45-foot, double knife, untimed	Transport	3	Turf	241 (35)
D145XL double reel	45-foot, double knife, untimed	Transport + upper cross auger + vertical knives	3	Bar	283 (41)
D145XL double reel	45-foot, double knife, untimed	Transport + upper cross auger + vertical knives	3	Turf	241 (35)
Rotary Disc Header					
R85	16-foot	—	—	Bar	179 (26)
R85	16-foot	—	—	Turf	179 (26)
Auger Header					
A40 D	16-foot	—	—	Bar	179 (26)
A40 D	16-foot	—	—	Turf	159 (23)
A40 D	18-foot	—	—	Bar	179 (26)
A40 D	18-foot	—	—	Turf	159 (23)

4.2 Performing Operational Checks

1. Perform the final checks and adjustments listed on the following pages and the *Predelivery Checklist, page 113* (yellow sheet attached to this instruction) to ensure the machine is field-ready.
2. Ensure the Operator or the Dealer retains the completed Predelivery Checklist.

4.2.1 Checking Harvest Performance Display (HPT)

1. If not already running, start the engine. Refer to *3.14 Starting the Engine, page 36*.
2. If a header is not attached, check that No Header screen is displayed.



Figure 4.21: No Header Screen

3. If a header is attached, check that the header screen (A) is displayed.
4. Check red park symbol (B) is on.
5. Check engine rpm (C) is displayed.
6. Check fuel gauge (D), DEF gauge (E) and temperature gauge (F) in display screen.

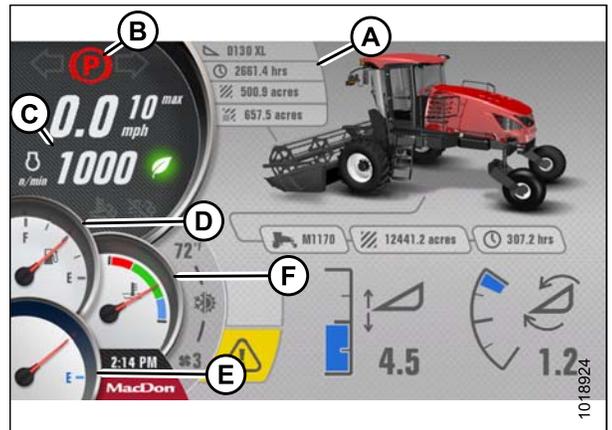


Figure 4.22: Header Attached Screen

PERFORMING PREDELIVERY CHECKS

Navigating the Harvest Performance Tracker

Turning the scroll knob (A) on the Harvest Performance Tracker (HPT) highlights the available options within a menu and increases/decreases the available settings. Pushing the scroll knob selects functions or menu items. Scroll and select functions are duplicated on the ground speed lever (GSL) controls. Unless otherwise specified, these two buttons will always perform the same function and when 'select' is referred to in this document, either one of these buttons can be used.

1. Turn rotary scroll knob (A) clockwise to move selections down the screen, to the right, clockwise, or to increase settings. Push scroll knob to activate selection.
2. Turn rotary scroll knob (A) counterclockwise to move selections up the screen, to the left, counterclockwise, or to decrease settings. Push scroll knob to activate selection.



Figure 4.23: HPT Scroll Knob

NOTE:

The scroll wheel (A) on the back of the GSL and the SELECT button (B) on the front of the GSL perform the same functions as the HPT scroll knob.

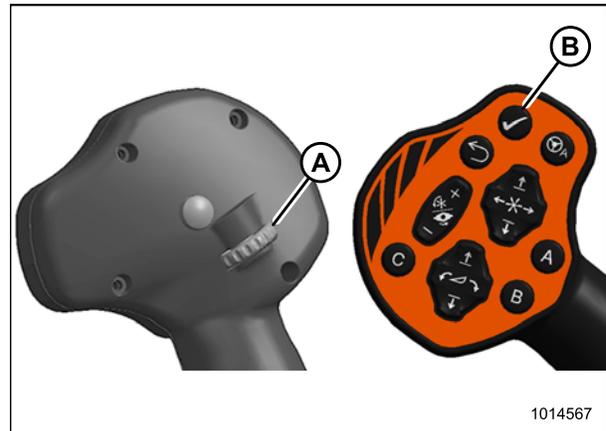


Figure 4.24: GSL Scroll Wheel and Select Button

PERFORMING PREDELIVERY CHECKS

3. Press soft key 5 (A) to open main menu.
4. Use HPT scroll knob (B) or ground speed lever (GSL) scroll wheel to place red cursor over SETTINGS icon (C).
5. Press HPT scroll knob (B) or GSL SELECT button to activate SETTINGS menu options.

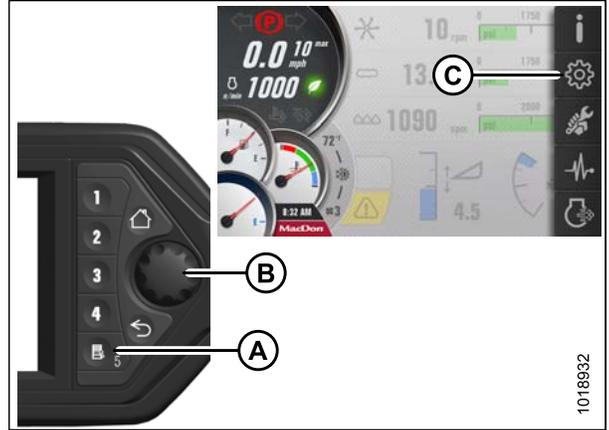


Figure 4.25: Main Menu

6. Press BACK button (A) on HPT to return to previous level within menu structure.
7. Press HOME button (B) on HPT to return to last selected run screen (or header disengaged screen).



Figure 4.26: HPT

Setting Language and Units of Measure

1. Navigate to the SETTINGS menu with soft key 5 and Harvest Performance Tracker (HPT) scroll knob. Refer to [Navigating the Harvest Performance Tracker, page 54](#) if required.
2. Scroll to the SCREEN icon (A) and select it.
3. Scroll to the LANGUAGE AND UNITS icon (B), and select it to open the adjustment window.
4. Scroll through the available options on the HPT, select desired item, and scroll to adjust:

LANGUAGE

- ENGLISH (default)

UNITS

- METRIC
- USA (default)

Refer to [6.4 Conversion Chart, page 108](#) for a comprehensive list of imperial and metric units.

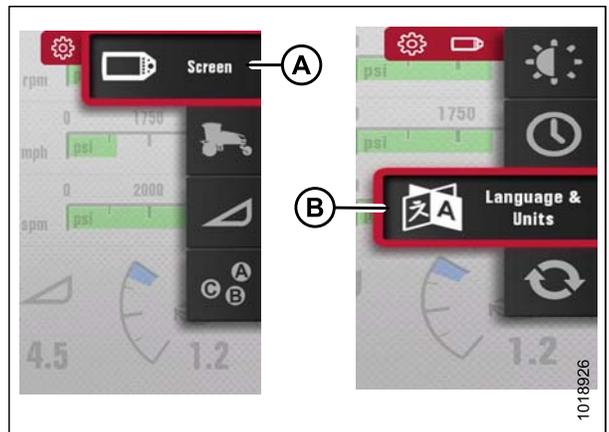


Figure 4.27: Language and Units

PERFORMING PREDELIVERY CHECKS

Setting Time and Date

Whenever the Harvest Performance Tracker (HPT) boots up, the time and date will display according to your selected configuration.

1. Navigate to the SETTINGS Menu with soft key 5 and the HPT scroll knob. Refer to [Navigating the Harvest Performance Tracker, page 54](#) if required.
2. Scroll to the SCREEN option (A) and select it.
3. Scroll to the TIME AND DATE option (B), and select it to open the adjustment window.

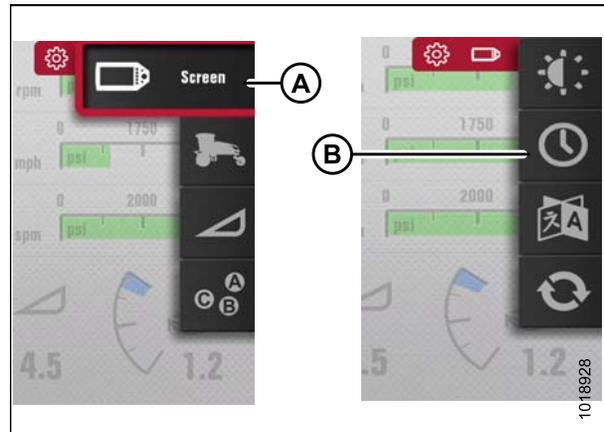


Figure 4.28: Time and Date

4. Scroll through the available options on the HPT display, select desired option, and scroll to adjust.

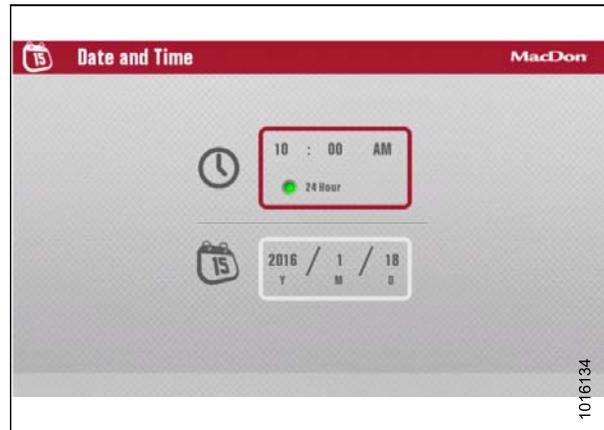


Figure 4.29: Time and Date

PERFORMING PREDELIVERY CHECKS

Setting Windrower Tire Size

The Harvest Performance Tracker (HPT) is factory-set for 600/65R28 bar tires. If the windrower has a different tire type, you need to change this setting. Setting the proper tire size is important for accurate tracking of ground speed, acres, and productivity data.

1. Navigate to the SETTINGS menu with soft key 5 and the HPT scroll knob. Refer to *Navigating the Harvest Performance Tracker, page 54* if required.
2. Scroll to the WINDROWER SETTINGS icon (A) and select it.
3. Scroll to the TIRES icon (B), and select it to display the adjustment window.

NOTE:

The F3 shortcut button on the operator's console will also display the WINDROWER SETTINGS menu.

4. Scroll to highlight the appropriate tire size (A) and select it. The new selection will be displayed with a shaded green radio button.

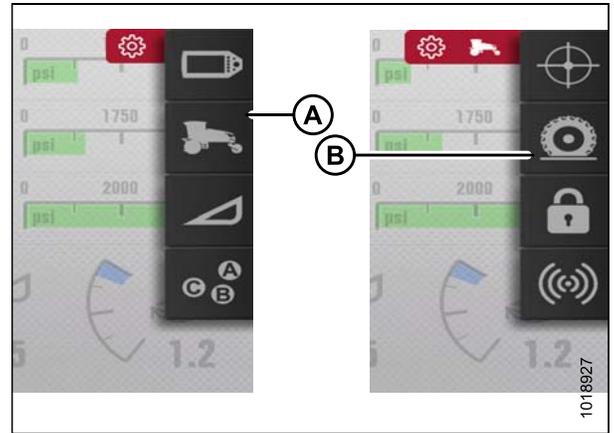


Figure 4.30: Tire Size

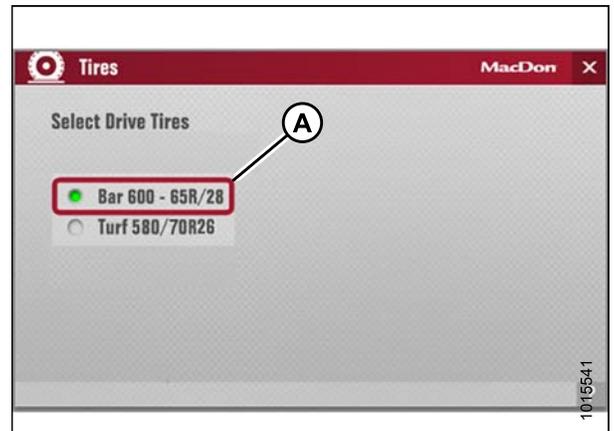


Figure 4.31: Tire Selection

PERFORMING PREDELIVERY CHECKS

Checking Header Settings

1. Navigate to SETTINGS menu with soft key 5 and Harvest Performance Tracker (HPT) scroll knob. Refer to *Navigating the Harvest Performance Tracker, page 54* if required.
2. Scroll to SET-UP HEADER option (A) and select it.
3. Scroll to highlight appropriate item and select it.
4. Scroll to highlight appropriate option and select it.
 - Example: If a draper header is attached, and ATTACHMENTS (B) is selected, the available choice is DOUBLE DRAPER DRIVE.
5. Scroll to highlight appropriate item and select it.

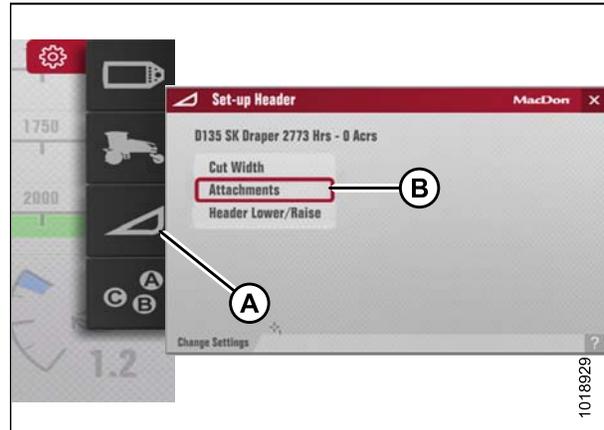


Figure 4.32: Header Settings

4.2.2 Checking Engine Speed

1. Move throttle to idle position.
2. Check engine speed (A) on Harvest Performance Tracker (HPT) display and compare to value in table below.
3. Move throttle to maximum rpm position.

Table 4.2 Engine Speed

Idle	Maximum (No Load)
1000 rpm	2300 rpm

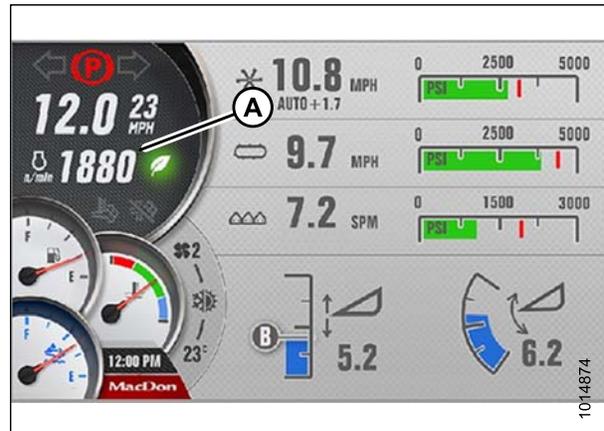


Figure 4.33: Harvest Performance Tracker

PERFORMING PREDELIVERY CHECKS

4.2.3 Checking Exterior Lights

1. **For models with LED lighting:** Remove plastic film from LED lighting.
2. Rotate operator's seat to cab-forward mode.
3. Press FIELD LIGHT switch (A).
4. Check that front field lights (B), rear field lights (C), and rear swath lights (D) are functioning.

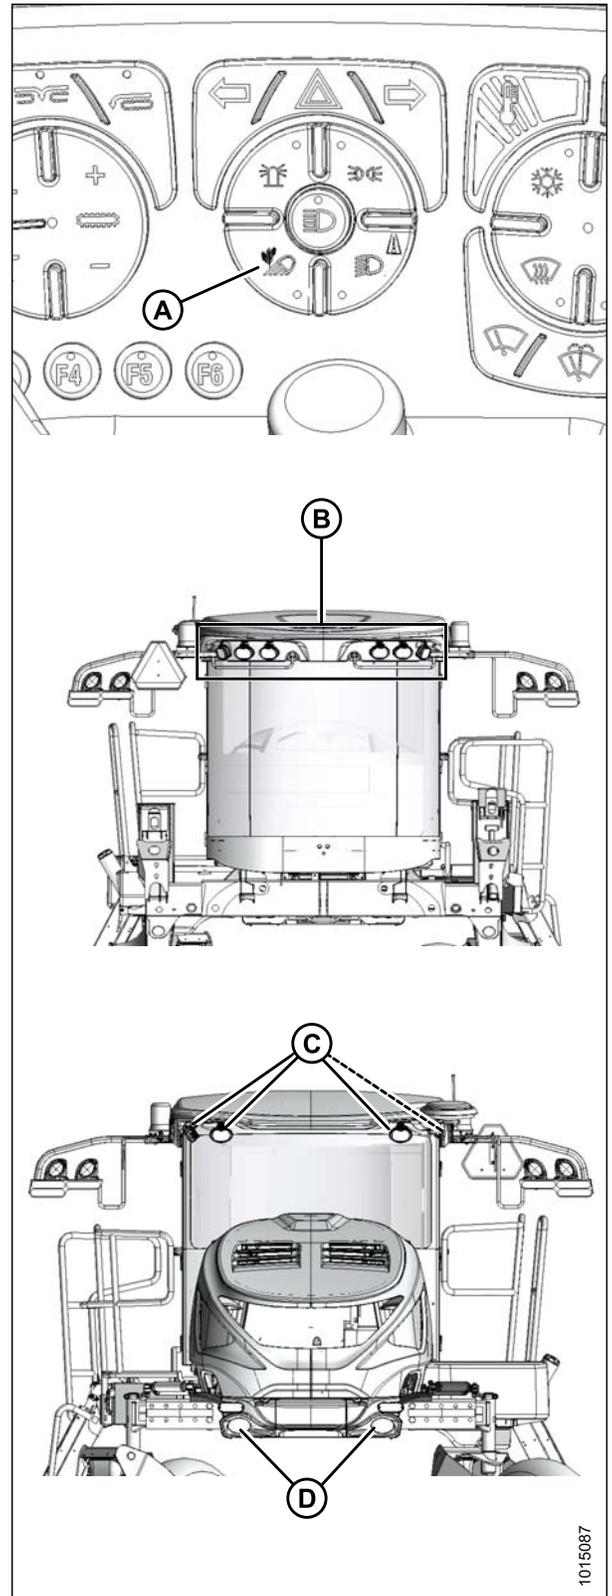


Figure 4.34: Field Lights

PERFORMING PREDELIVERY CHECKS

5. Press ROAD LIGHT switch (A), and check that front road lights (B) and rear red tail/brake lights (C) are functioning.
6. Press HIGH/LOW switch (D), and check lights (B).
7. Press TURN SIGNAL switches (E) on console, and check amber lights (F).
8. Press HAZARD LIGHT switch (G), and check flashing hazard lights (F).
9. Press switches to shut off lights.

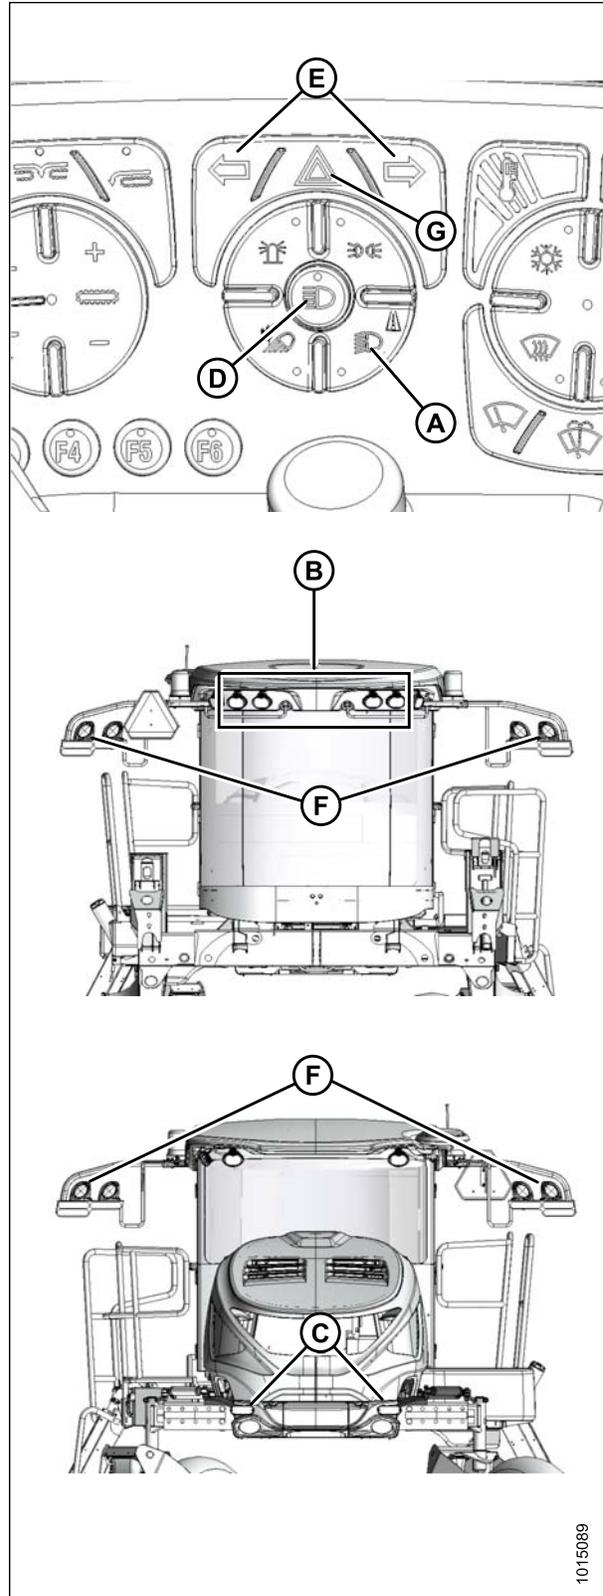


Figure 4.35: Road Lights – Cab-Forward

PERFORMING PREDELIVERY CHECKS

10. Rotate operator's seat to engine-forward mode.
11. Press ROAD LIGHT switch (A), and check that front road lights (B) and rear red tail/brake lights (C) are functioning.
12. Press HIGH/LOW switch (D) and check lights (B).
13. Press TURN SIGNAL switches (E) switches on console and check amber lights (F).
14. Press HAZARD LIGHT switch (G) and check flashing hazard lights (F).
15. Press switches to shut off lights.

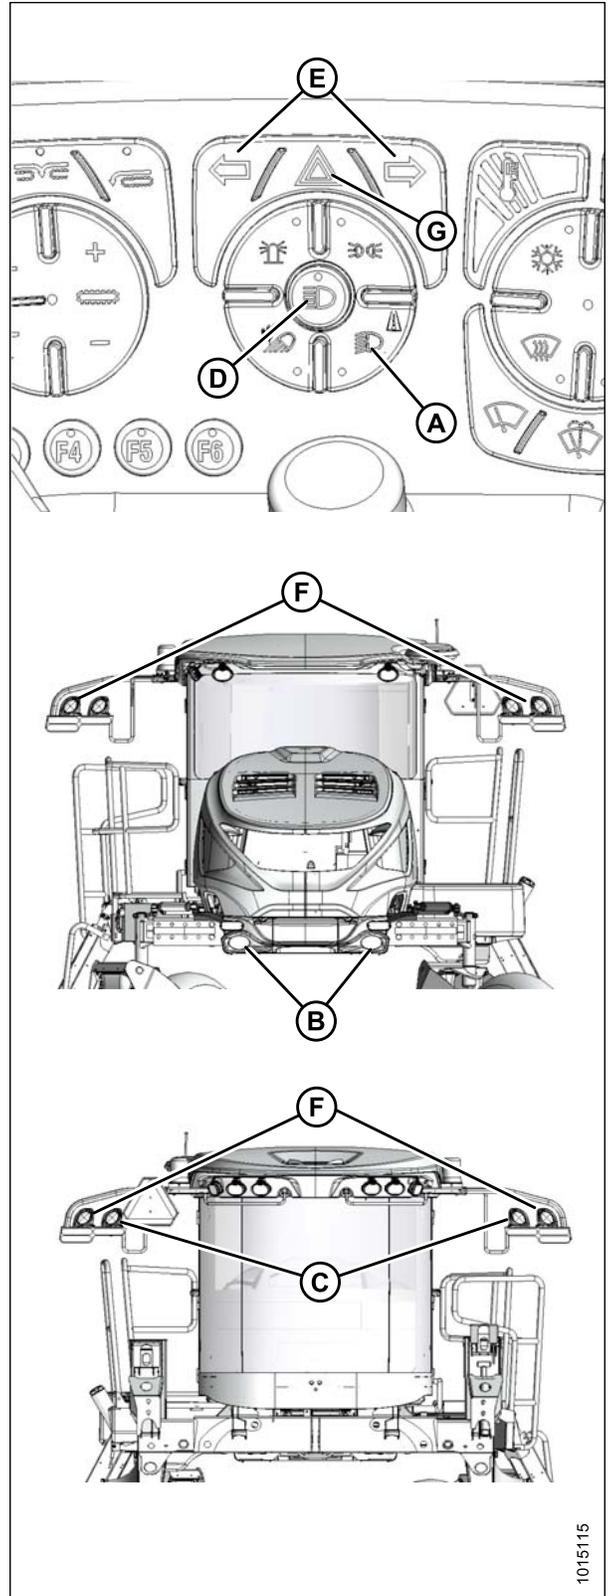


Figure 4.36: Road Lights – Engine-Forward

PERFORMING PREDELIVERY CHECKS

16. Push BEACON SWITCH (A), and check that amber beacons (B) are functioning.
17. Press switch to shut off beacons.

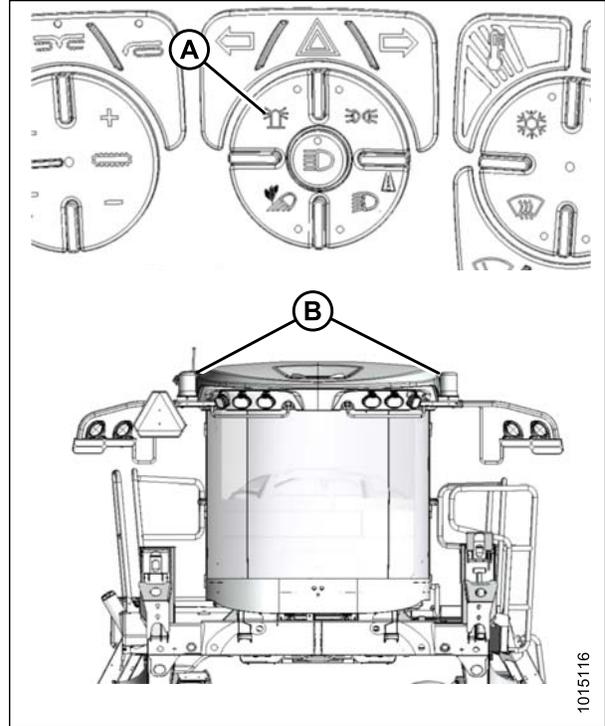


Figure 4.37: Beacons

4.2.4 Checking Horn

1. Push HORN button (A) and listen for horn.

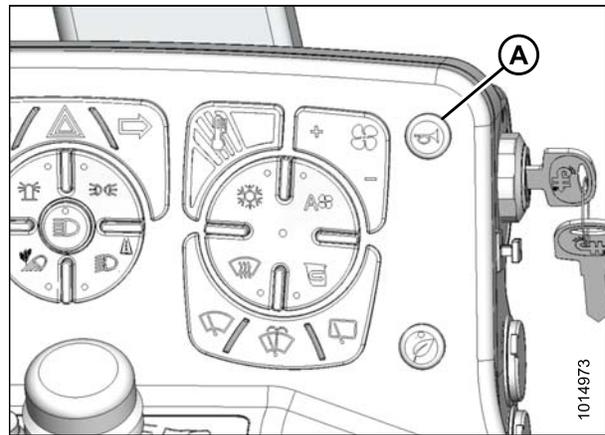


Figure 4.38: Horn Button

PERFORMING PREDELIVERY CHECKS

4.2.5 Checking Interior Lights

1. Open cab door and check that interior light (A) illuminates.
2. Enter the cab and close door; light should go off.

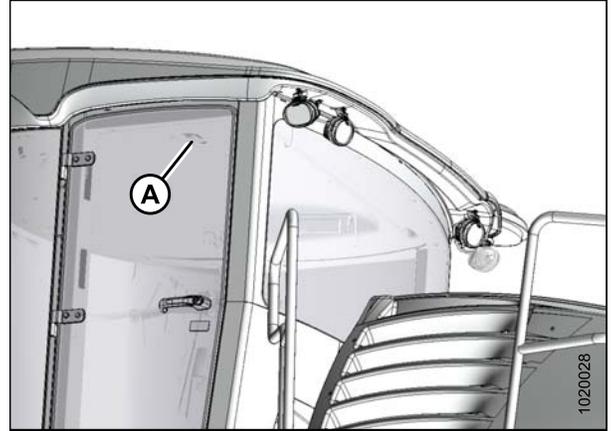


Figure 4.39: Ingress/Egress Lights

3. Turn IGNITION key to RUN position.
4. Push OVERHEAD DOME LIGHT switch (A) to the ON position (B) and check that the light illuminates.
5. Push LIGHT switch to the DOOR position (C) and check that the light is off.
6. Open the door and check that the light illuminates. Leave door open.
7. Push switch (A) to OFF position (D) and check that light is off.

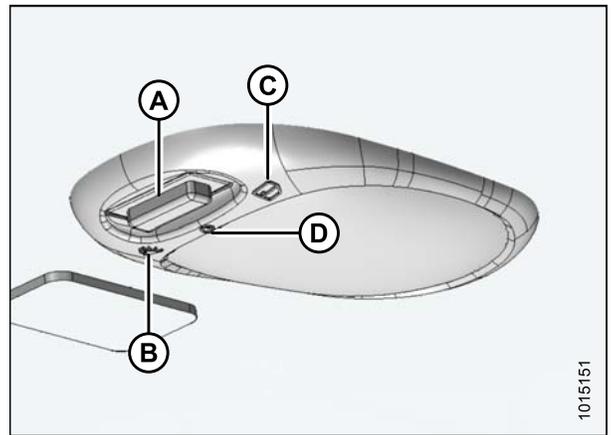


Figure 4.40: Dome Light

4.2.6 Checking Air Conditioning and Heater

1. Start engine and allow it to reach operating temperature.
2. To distribute oil throughout the A/C system, perform the following steps after starting a machine that has been stored for more than 1 week:
 - a. Press + (A) on FAN SPEED switch to start fan, adjust temperature control (B) to maximum heating, and press A/C switch (C) if necessary so that LED light is **NOT** lit.
 - b. Press A/C switch (C) to ON (LED light is lit) for one second, then OFF for 5 to 10 seconds. Repeat this step ten times.

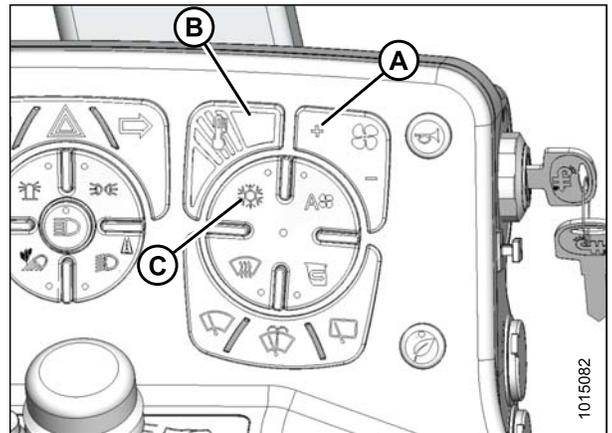


Figure 4.41: A/C Controls

PERFORMING PREDELIVERY CHECKS

3. Press AUTO FAN switch (A) (LED light shows orange) and then press RED TEMPERATURE CONTROL switch (B) until warm air enters cab through vents.
4. Press BLUE TEMPERATURE CONTROL switch (C) until cool air is entering the cab.
5. Press FAN SPEED switch (D) (+ or -) and note change in air flow. AUTO FAN light should be off.
6. Press RECIRCULATING AIR switch (E) and check air flow in cab.

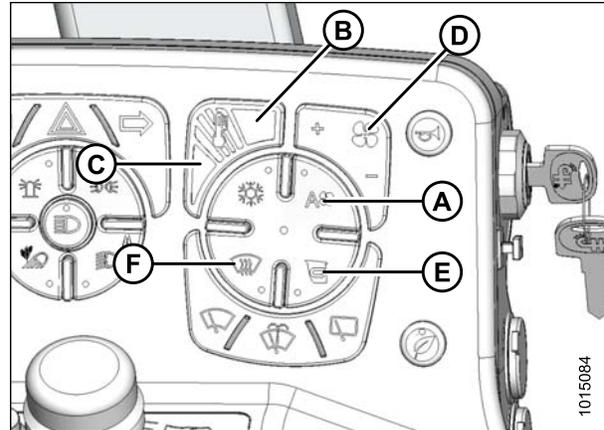


Figure 4.42: Climate Controls

4.2.7 Checking the Radio and Activating the Bluetooth® Feature

A radio (A) and two speakers (B) are factory-installed in the cab headliner. The radio operates in AM, FM, CD, and USB modes. It also supports Bluetooth® wireless technology audio streaming and hands-free calling.

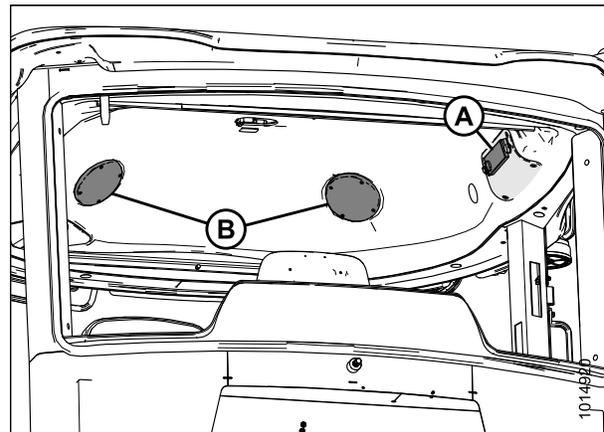


Figure 4.43: Radio and Speakers

1. To check the radio, follow this procedure:
 - a. Turn IGNITION key to RUN position.
 - b. Press POWER button (A) to turn the radio on. Hold the POWER button to turn it off.

NOTE:

The button will illuminate red when OFF and blue when ON.

- c. Press BAND/BACK button (B) to change radio bands.
- d. Rotate the Volume/Select knob (C) to change the volume level.
- e. Insert a CD into the disc slot (D), or connect a USB storage device to the unit. The radio will automatically switch mode and begin playback after the media is successfully loaded.

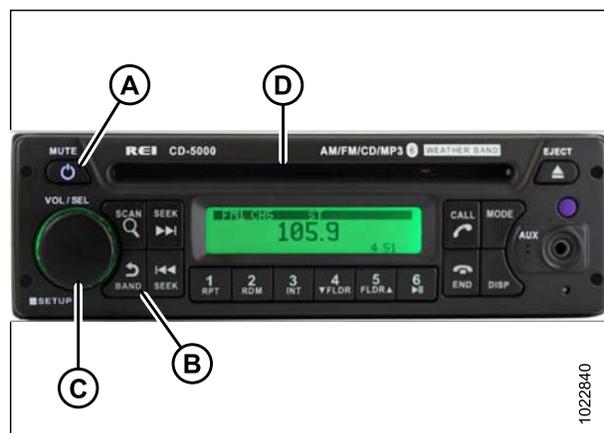


Figure 4.44: Radio

PERFORMING PREDELIVERY CHECKS

2. To activate the bluetooth® feature, follow this procedure:
 - a. Press POWER button (A) to turn the radio on.
 - b. Press and hold VOL/SEL knob (B) for two seconds. MENU is displayed on screen (C).
 - c. Rotate VOL/SEL (B) to highlight BT SET menu and press VOL/SEL to select. BLUETOOTH ON/OFF is displayed (C).
 - d. Press VOL/SEL to select BLUETOOTH.
 - e. Rotate VOL/SEL knob to display ON and press VOL/SEL to select.
 - f. Rotate VOL/SEL knob and select DISCOVER.
 - g. Rotate VOL/SEL knob to display ON and press VOL/SEL to select.

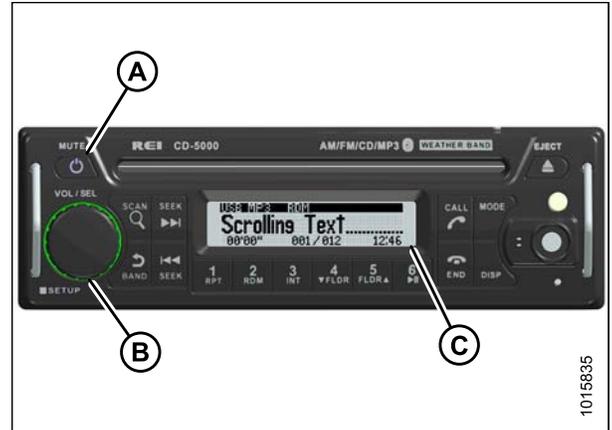


Figure 4.45: Bluetooth® Radio

PERFORMING PREDELIVERY CHECKS

4.3 Checking Manuals

Manuals are stored in one of the manual storage cases (A) behind the operator's seat.

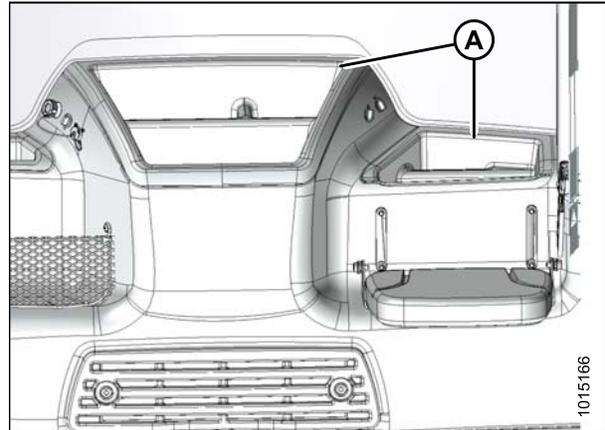


Figure 4.46: Manual Storage Case

1. Ensure the following manuals are included with the windrower:

- Operator's Manual
- Parts Catalog
- Quick Card
- Engine Manual

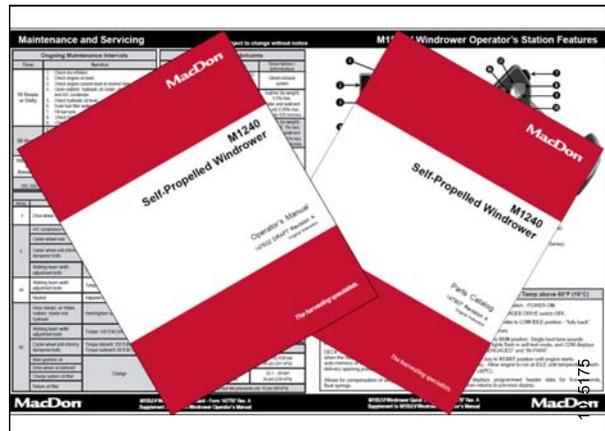


Figure 4.47: Manuals and Quick Card

PERFORMING PREDELIVERY CHECKS

4.4 Performing Final Steps

1. Remove plastic covering from Harvest Performance Tracker (HPT) and seats after predelivery checks are complete.
2. If there is an optional GPS kit included, locate bag inside the cab containing the kit, and install in accordance with the instructions included. If not installing kit, label bag (GPS Completion kit) and place kit in toolbox for safekeeping.
3. Remove instruction (MD #214082) from the right cab-forward door only **AFTER** right leg is repositioned to field configuration.
4. Remove decal (MD #166705) from windshield only **AFTER** machine is delivered to the end user.

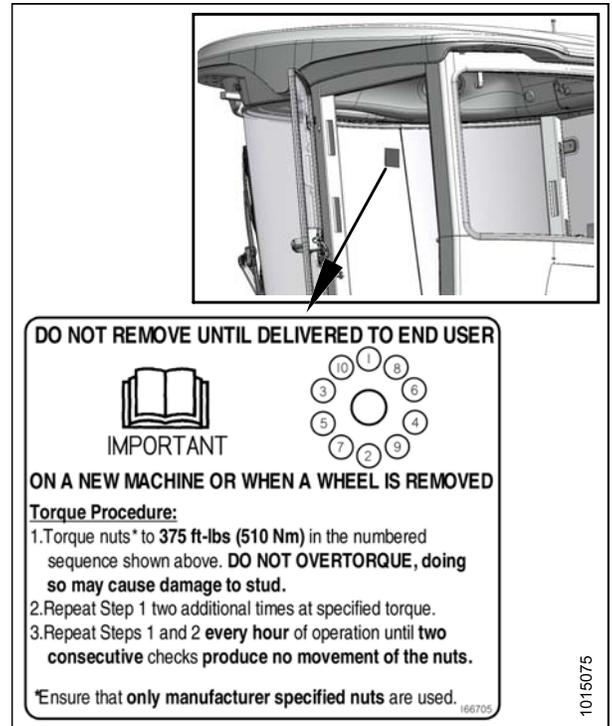


Figure 4.48: Windshield Decal (MD #166705)

5 Attaching Headers to M1 Series Windrower

5.1 Attaching Headers to M1 Series Windrower

5.1.1 A40-DX Auger Header

Attaching an A40-DX Auger Header

CAUTION

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Remove hairpin (A) from pin (B), and remove pin from header supports (C) on both sides of header.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

CAUTION

Check to be sure all bystanders have cleared the area.

2. Start engine.

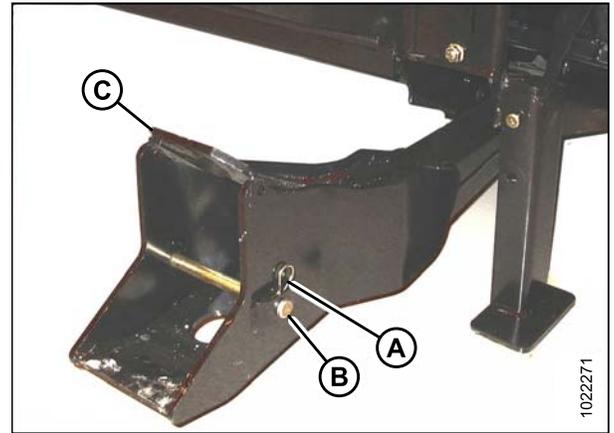


Figure 5.1: Header Support

CAUTION

To prevent damage to the header lift linkages when lowering header lift legs without a header or weight box attached to the windrower, ensure the float springs tension is fully released.

NOTE:

If not prompted by the Harvest Performance Tracker (HPT) display to remove float, remove float manually by doing the following:

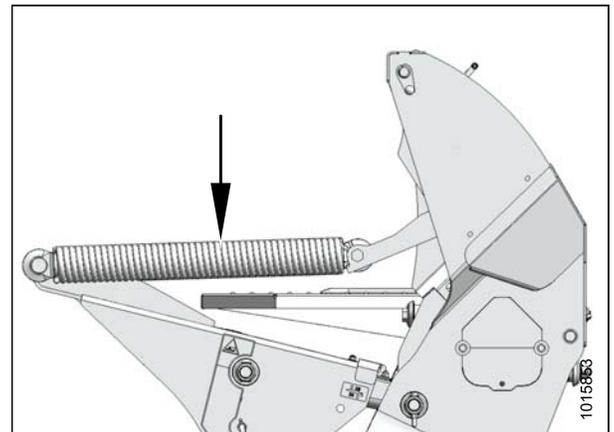


Figure 5.2: Header Float Springs

ATTACHING HEADERS TO M1 SERIES WINDROWER

3. Press HPT scroll knob (A) to highlight QuickMenu options.
4. Rotate HPT scroll knob (A) to highlight the HEADER FLOAT symbol (B) and press to select.



Figure 5.3: HPT Display

5. On Float Adjust page, press soft key 3 (A) to remove float.



Figure 5.4: HPT Display

6. Press the HEADER DOWN switch (A) on the ground speed lever (GSL) to fully retract header lift cylinders.
7. **For hydraulic center-link with self-alignment:** Press the REEL UP switch (B) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.



Figure 5.5: GSL

ATTACHING HEADERS TO M1 SERIES WINDROWER

8. **For hydraulic center-link without self-alignment:** Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

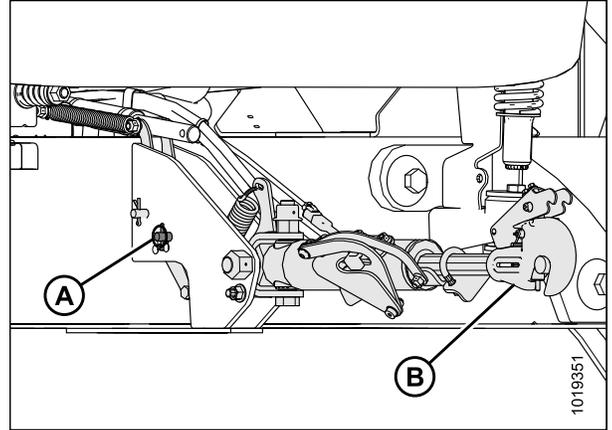


Figure 5.6: Hydraulic Center-Link without Self-Alignment Kit

9. Drive the windrower slowly forward so the feet (A) on the windrower enter the supports (B) on the header. Continue to drive slowly forward until the feet engage the supports, and the header nudges forward.

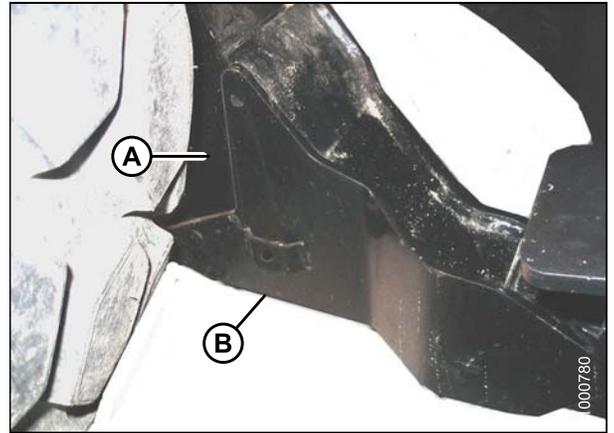


Figure 5.7: Header Support

10. **For hydraulic center-link with self-alignment:** Adjust position of the center-link cylinder (A) with switches on the GSL until the hook (B) is above the header attachment pin.
11. **For hydraulic center-link without self-alignment:** Push down on rod end of link cylinder (C) until hook engages and locks onto header pin.

IMPORTANT:

Hook release (D) must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

12. **For hydraulic center-link with self-alignment:** Lower center-link (A) onto the header with REEL DOWN switch on the GSL until it locks into position (hook release [D] is down).
13. **For hydraulic center-link with self-alignment:** Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.

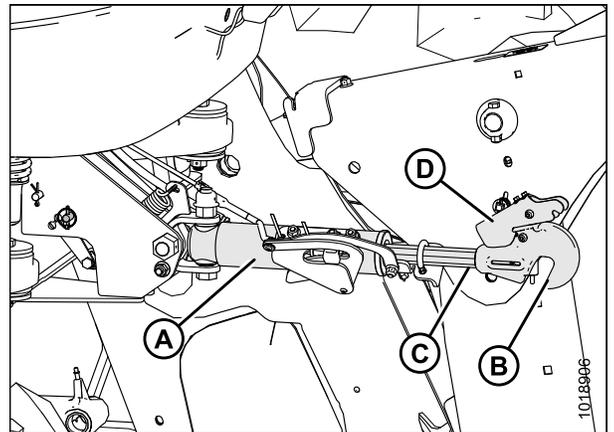


Figure 5.8: Hydraulic Center-Link

ATTACHING HEADERS TO M1 SERIES WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

14. Press the HEADER UP switch (A) to raise header to maximum height.
15. If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:
 - a. Press and hold the HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

This procedure may have to be repeated if there is air in the system.

16. Stop the engine and remove the key.
17. Engage safety prop on the windrower's lift cylinder as follows:
 - a. Pull lever (A) and rotate toward header to release, and lower safety prop onto cylinder.
 - b. Repeat for opposite lift cylinder.

IMPORTANT:

Ensure the safety props engage over the cylinder piston rods. If safety prop does not engage properly, raise header until prop fits over the rod.

18. Install clevis pin (A) through support and foot, and secure with hairpin. Repeat for opposite support.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.



Figure 5.9: GSL

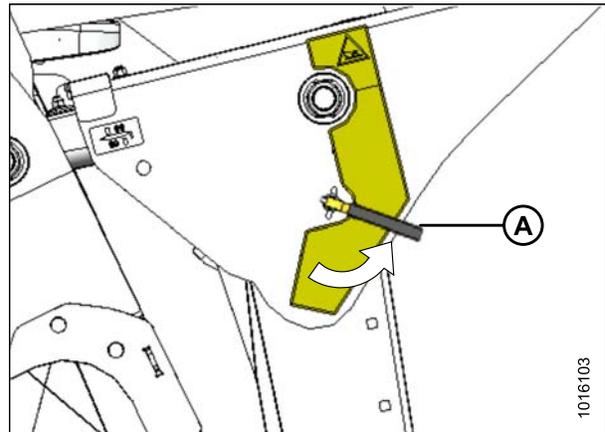


Figure 5.10: Cylinder Safety Prop

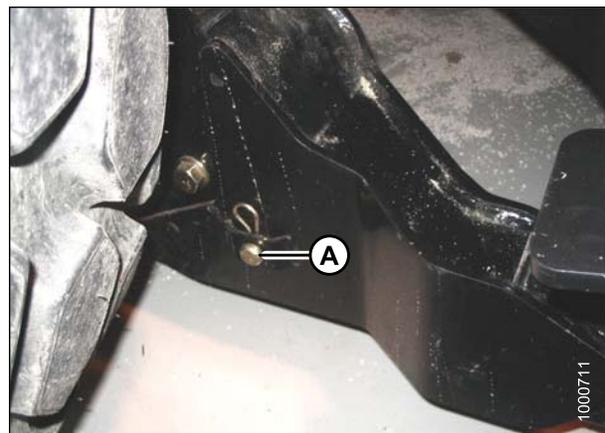


Figure 5.11: Header Support

ATTACHING HEADERS TO M1 SERIES WINDROWER

19. Remove lynch pin from clevis pin (A) in stand (B).
20. Hold stand (B) and remove pin (A).
21. Move stand to storage position by inverting and relocating onto bracket as shown. Reinsert clevis pin (A) and secure with lynch pin.

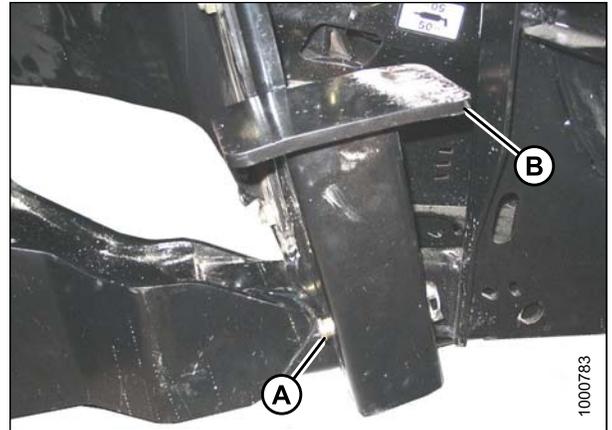


Figure 5.12: Header Stand

22. Disengage safety prop by turning lever (A) downward to raise prop until lever locks into vertical position.
23. Repeat for opposite side.

CAUTION

Check to be sure all bystanders have cleared the area.

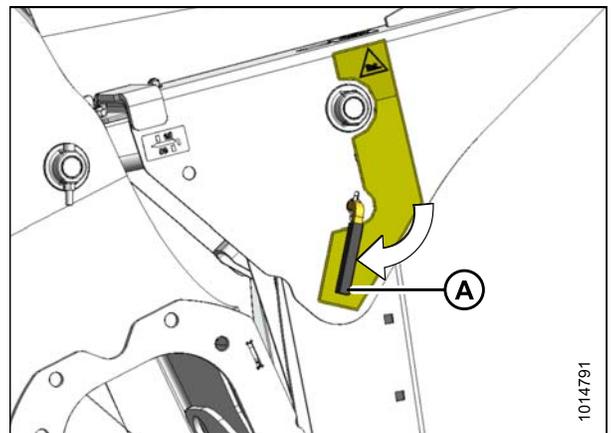


Figure 5.13: Cylinder Safety Prop

24. Start engine and press HEADER DOWN switch (A) on GSL to fully lower header.

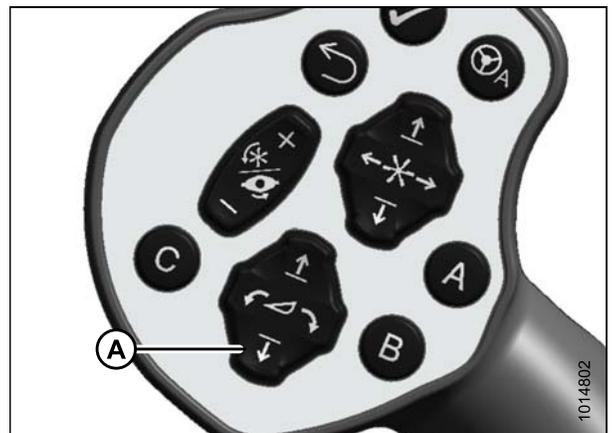


Figure 5.14: Ground Speed Lever

ATTACHING HEADERS TO M1 SERIES WINDROWER

25. Press rotary scroll knob (A) on HPT to highlight QuickMenu options.
26. Rotate scroll knob (A) to highlight the HEADER FLOAT symbol (B). Press scroll knob to select.



Figure 5.15: HPT Display

27. Turn scroll knob (A) to highlight left (B) or right (C) float and press knob (A) to activate selection.
28. Rotate scroll knob (A) to adjust float setting and press knob when finished.

IMPORTANT:

Float adjustments of 1.0 (out of 10) change the header weight at the cutterbar by approximately 91 kg (200 lb.). Adjust float in increments of 0.05 to optimize field performance.

29. Turn ignition off and remove key from ignition.
30. Grasp one end of the auger header and lift. Lifting force should be 335–380 N (75–85 lbf) and should be the same at both ends.
31. Proceed to [Connecting A40-DX Hydraulics, page 75](#).



Figure 5.16: HPT Display

ATTACHING HEADERS TO M1 SERIES WINDROWER

Connecting A40-DX Hydraulics

CAUTION

Do NOT stand on an unlocked platform. It is unstable and may cause you to fall.

1. Approach platform/stair unit (A) on left cab-forward side of windrower and ensure cab door is closed.
2. Push latch (B), and pull platform (A) toward walking beam until it stops and latch engages.

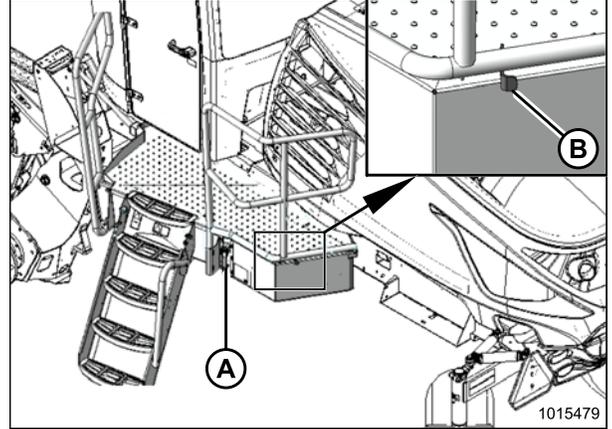


Figure 5.17: Left Cab-Forward Platform

3. Retrieve hydraulic multicouplers (A) and electrical harness (B) from the header.
4. Route hose/harness bundle toward the windrower through support (C).

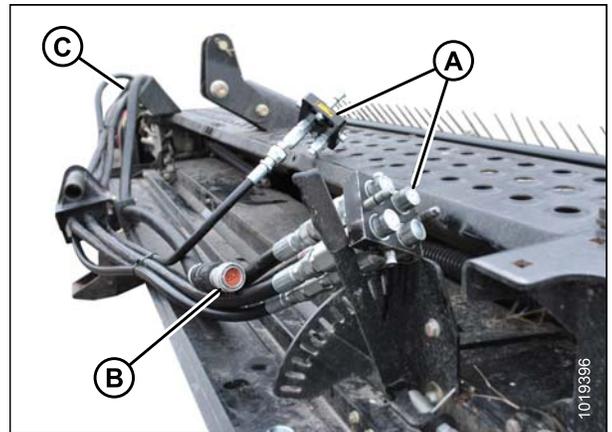


Figure 5.18: Hydraulics Hoses in Storage Position

5. Insert hose support (A) into hole in the windrower left leg, and route the header hose bundle (B) under the windrower to the hydraulic and electrical couplers.

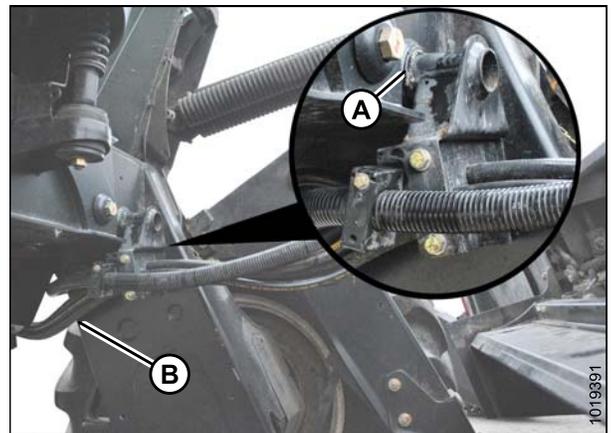


Figure 5.19: Multicoupler

ATTACHING HEADERS TO M1 SERIES WINDROWER

6. Clean multicouplers and receptacles to prevent contamination.
7. Push button (A) on rear multicoupler receptacle and rotate handle (B) away from windrower.
8. Open cover (C) and position multicoupler (D) onto receptacle. Align pins in coupler with slots in handle (B), and rotate handle toward windrower so that coupler is locked onto receptacle and button (A) snaps out.
9. Push button (E) on front multicoupler receptacle and rotate handle (F) away from windrower.
10. Open cover and position multicoupler (G) onto receptacle. Align pins in coupler with slots in handle, and rotate handle toward windrower so that coupler is locked onto receptacle and button (E) snaps out.
11. Remove cover from receptacle (A), and connect electrical harness from header.

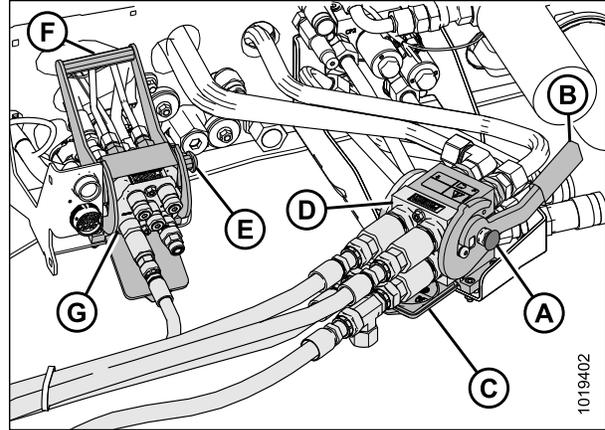


Figure 5.20: Knife/Reel/Auger Drive Multicoupler

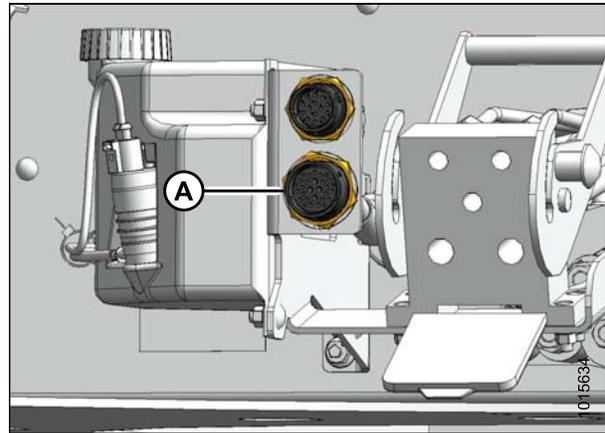


Figure 5.21: Electrical Connectors

12. Push latch (A) to unlock the platform (B).

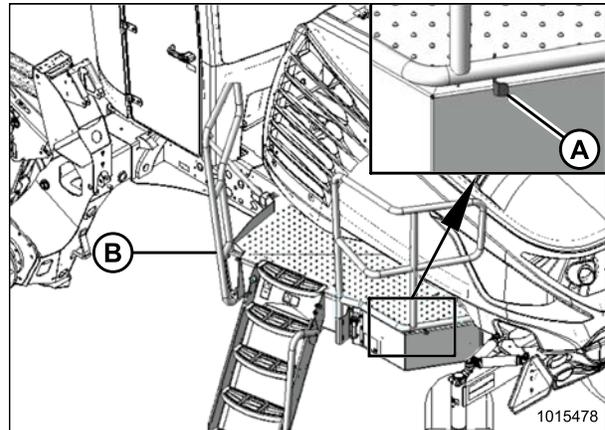


Figure 5.22: Platform: Open

ATTACHING HEADERS TO M1 SERIES WINDROWER

13. Pull platform (A) towards the cab until it stops and latch engages.

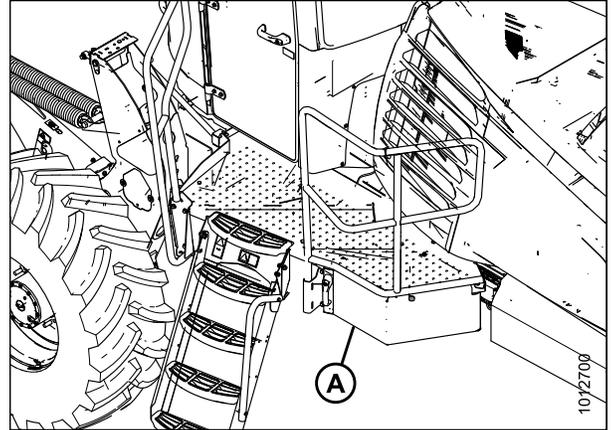


Figure 5.23: Platform: Closed

5.1.2 D1X or D1XL Series Header

Attaching Draper Header Supports

Draper header supports are required to attach a D1X or D1XL Series Draper Header to the windrower.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

If **NOT** installed, attach draper header support (supplied with header) to windrower lift linkage as follows:

1. Remove hairpin and clevis pin (B) from the draper header support (A).

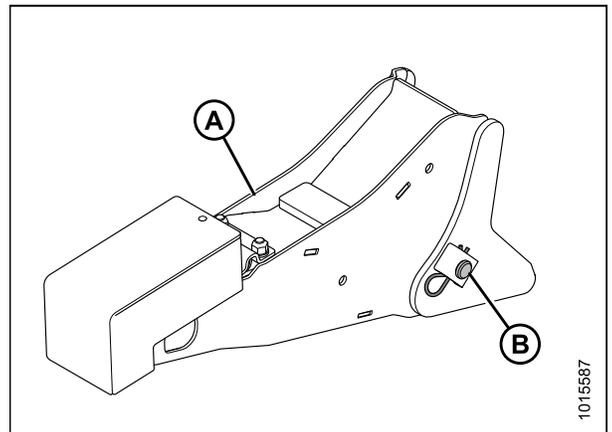


Figure 5.24: Draper Header Support

ATTACHING HEADERS TO M1 SERIES WINDROWER

2. Position the draper header support (B) on lift linkage (A), and reinstall clevis pin (C).

NOTE:

To avoid pin snagging the windrow, install the clevis pin on the outboard side of the draper header support.

3. Secure clevis pin (C) with hairpin (D).
4. Repeat for opposite lift linkage.

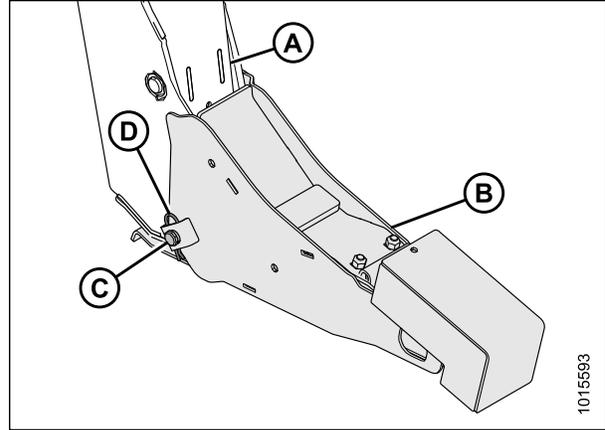


Figure 5.25: Draper Header Support

Attaching a D1X or D1XL Series Header

NOTE:

Draper header supports must be installed onto the windrower lift linkage before starting this procedure. Refer to [Attaching Draper Header Supports, page 77](#).

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. **Hydraulic center-link without self-alignment:**
Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

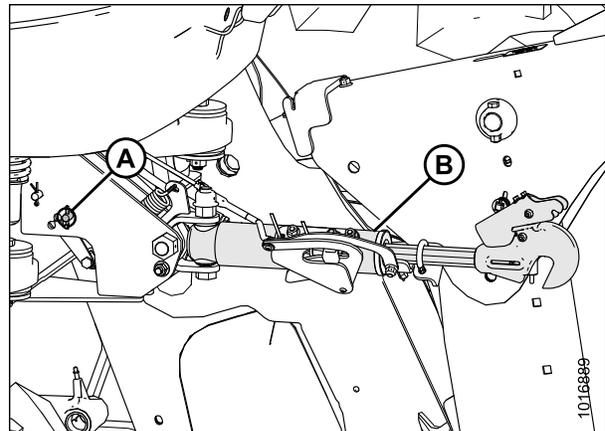


Figure 5.26: Center-Link without Self-Alignment

ATTACHING HEADERS TO M1 SERIES WINDROWER

2. Remove hairpin (A) from pin (B), and remove pin (B) from header leg. Repeat on the other header leg.

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

3. Start engine.

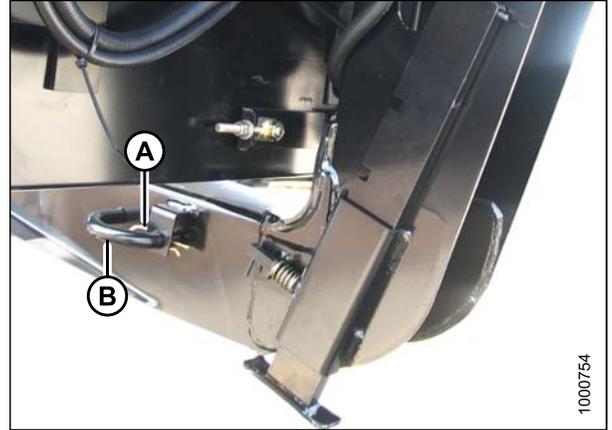


Figure 5.27: Header Leg

CAUTION

To prevent damage to the header lift linkages when lowering header lift legs without a header or weight box attached to the windrower, ensure the float springs tension is fully released.

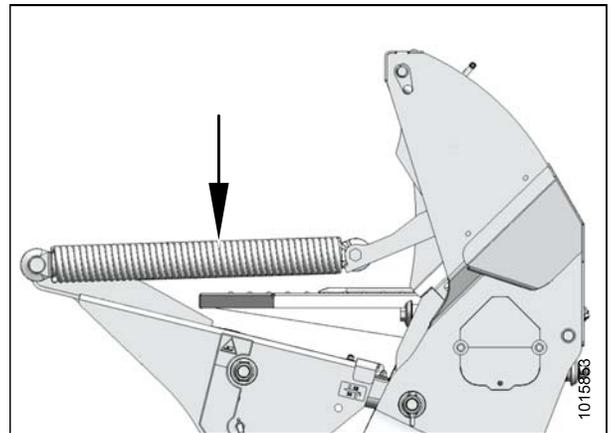


Figure 5.28: Header Float Springs

4. Press scroll knob (A) on HPT to display the QuickMenu system.
5. Rotate scroll knob (A) to highlight the HEADER FLOAT symbol (B) and press scroll knob to select.



Figure 5.29: HPT Display

ATTACHING HEADERS TO M1 SERIES WINDROWER

6. On Float Adjust page, press soft key 3 (A) to remove float.



Figure 5.30: HPT Display

7. **For hydraulic center-link with optional self-alignment:**
 - a. Press HEADER DOWN switch on the ground speed lever (GSL) to fully retract header lift cylinders.
 - b. Press REEL UP switch on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

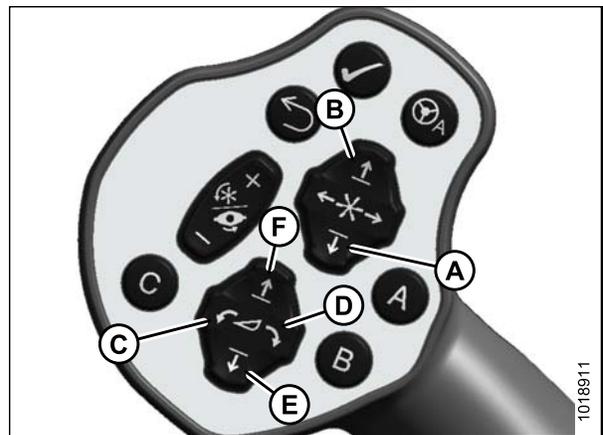


Figure 5.31: Ground Speed Lever Switches

- | | |
|----------------------|--------------------|
| A - Reel Down | B - Reel Up |
| C - Header Tilt Down | D - Header Tilt Up |
| E - Header Down | F - Header Up |

8. Drive the windrower slowly forward until the draper header supports (A) enter the header legs (B). Continue driving slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
9. Ensure that lift linkages are properly engaged in header legs and are contacting the support plates.

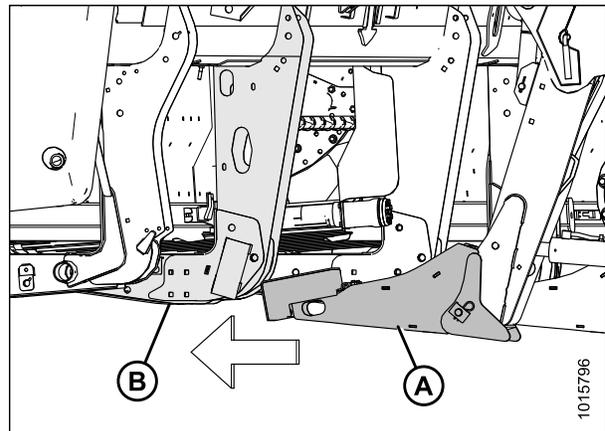


Figure 5.32: Header Leg and Draper Header Support

ATTACHING HEADERS TO M1 SERIES WINDROWER

10. *Hydraulic center-link with optional self-alignment:*

- a. Adjust position of the center-link cylinder (A) with the switches on the GSL until the hook (B) is above the header attachment pin.

IMPORTANT:

Hook release (C) must be down to enable self-locking mechanism.

- b. If the hook release (C) is open (up), stop the engine and remove ignition key. Manually push the hook release (C) down after hook engages the header pin.
- c. Lower center-link (A) onto the header with REEL DOWN switch on the GSL until it locks into position (hook release [C] is down).
- d. Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.

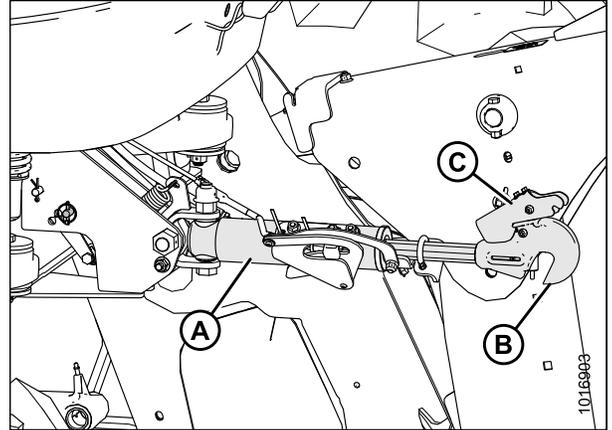


Figure 5.33: Hydraulic Center-Link

11. *Hydraulic center-link without self-alignment:*

- a. Press HEADER TILT UP or HEADER TILT DOWN cylinder switches on the GSL to extend or retract center-link cylinder until the hook is aligned with the header attachment pin.
- b. Stop the engine and remove the key.
- c. Push down on rod end of link cylinder (B) until hook engages and locks onto header pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the hook release is open (up), manually push it down after hook engages pin.

- d. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

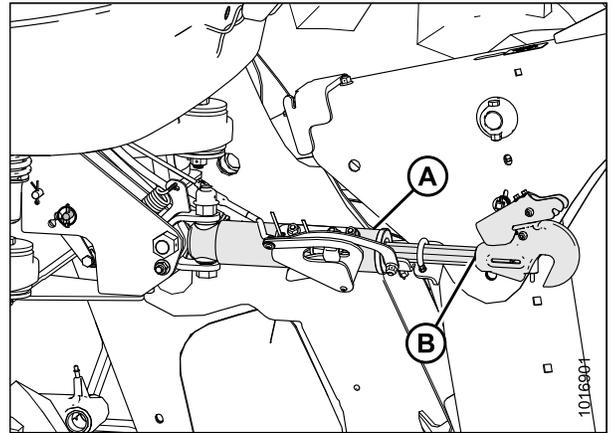


Figure 5.34: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

- e. Start engine.

ATTACHING HEADERS TO M1 SERIES WINDROWER

12. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch (A) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.
13. Stop the engine, and remove key from ignition.



Figure 5.35: Ground Speed Lever

14. Engage safety prop on lift cylinder as follows:

- a. Pull lever (A) and rotate toward header to release, and lower safety prop onto cylinder.
- b. Repeat for opposite lift cylinder.

IMPORTANT:

Ensure the safety props engage over the cylinder piston rods. If safety prop does not engage properly, raise header until prop fits over the rod.

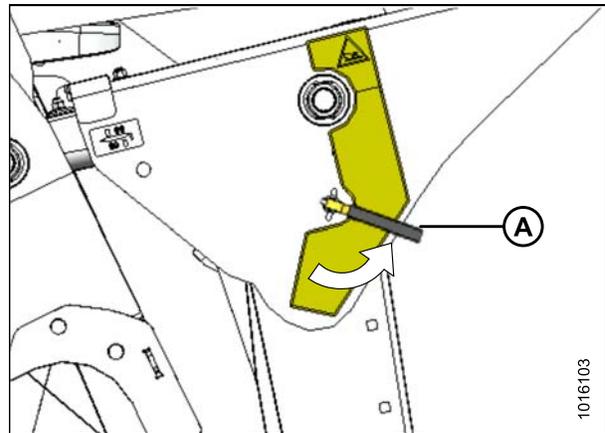


Figure 5.36: Cylinder Safety Prop

15. Install pin (B) through the header leg (engaging U-bracket in draper header support) on both sides and secure with a hairpin (A).
16. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin.

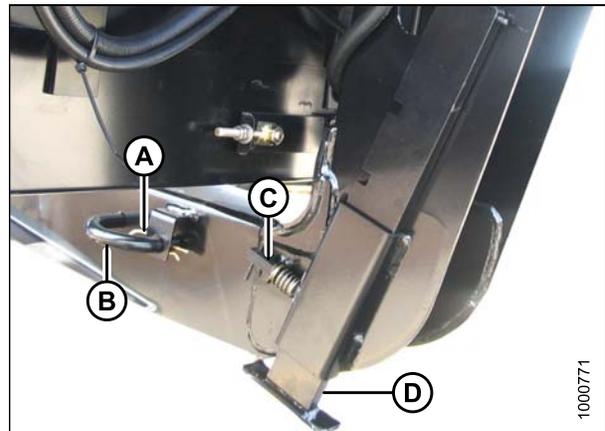


Figure 5.37: Header Leg

ATTACHING HEADERS TO M1 SERIES WINDROWER

- Disengage safety prop by turning lever (A) downward to raise safety prop until lever locks into vertical position.

NOTE:

If safety prop will not disengage, raise header slightly.

- Repeat for opposite side.

CAUTION

Check to be sure all bystanders have cleared the area.

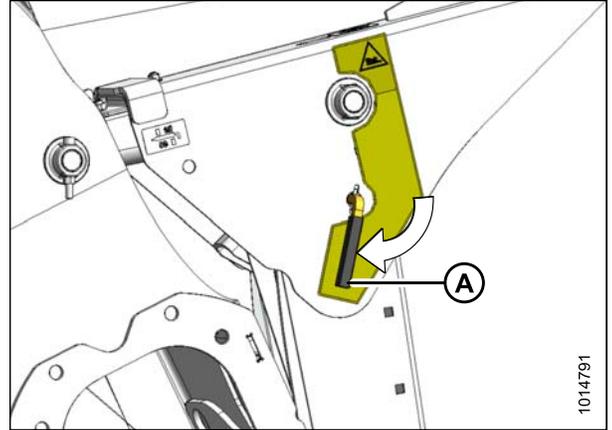


Figure 5.38: Cylinder Safety Prop

- Start engine and press HEADER DOWN switch (A) on GSL to fully lower header.

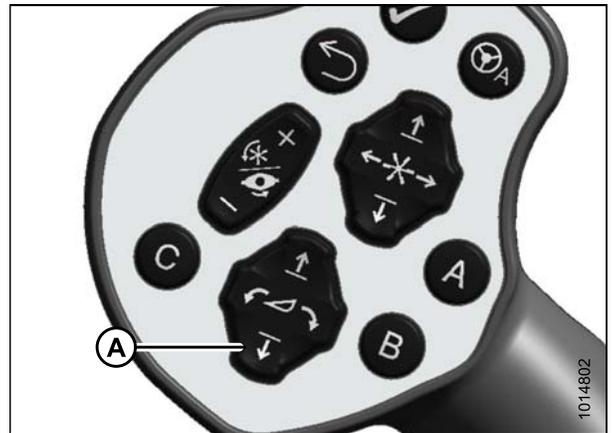


Figure 5.39: Ground Speed Lever

- Press rotary scroll knob (A) on Harvest Performance Tracker (HPT) to highlight QuickMenu options.
- Rotate scroll knob (A) to highlight the HEADER FLOAT symbol (B) and press scroll knob to select.



Figure 5.40: HPT Display

ATTACHING HEADERS TO M1 SERIES WINDROWER

- Turn scroll knob (A) to highlight left (B) or right (C) float and press knob (A) to activate selection.
- Rotate scroll knob (A) to adjust float setting and press knob when finished.

IMPORTANT:

Float adjustments of 1.0 (out of 10) change the header weight at the cutterbar by approximately 91 kg (200 lb.). Adjust float in increments of 0.05 to optimize field performance.



Figure 5.41: HPT Display

- Stop engine, and remove key from ignition.
- Grasp one end of the draper header and lift. Lifting force should be 335–380 N (75–85 lbf) and should be the same at both ends.
- Proceed to [Connecting D1X or D1XL Series Hydraulics, page 84](#).

Connecting D1X or D1XL Series Hydraulics

IMPORTANT:

To prevent contamination of the hydraulic system, use a clean rag to remove dirt and moisture from all (fixed and movable) hydraulic couplers.

- Pull handle (A) on hose management arm (B) rearward to disengage arm from support (C).
- Move arm (B) toward left cab-forward side of windrower.

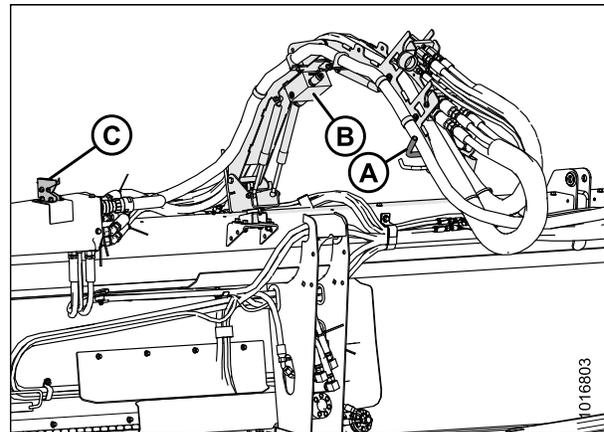


Figure 5.42: Hydraulic Hose Management Arm

ATTACHING HEADERS TO M1 SERIES WINDROWER

3. Ensure cab door is closed on the left cab-forward side of the windrower.
4. Push latch (B), and pull platform (A) toward walking beam until it stops and latch engages.

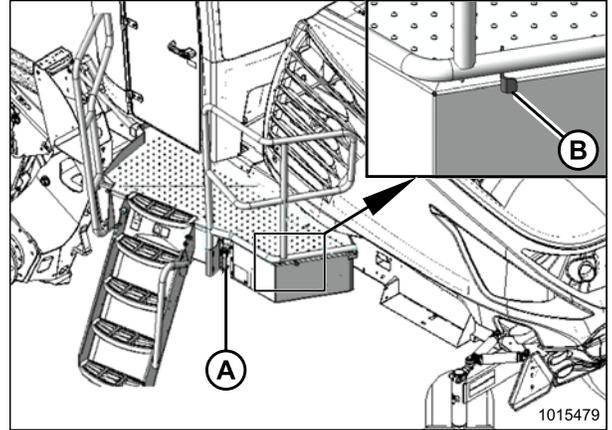


Figure 5.43: Platform

5. Unhook hoses from arm assembly.
6. Connect hydraulic hose management arm (A) to windrower by securing the ball joint (B) on arm into the latch support (C) on windrower leg.

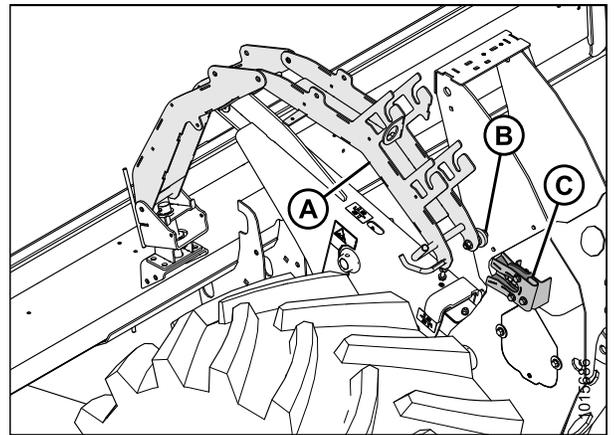


Figure 5.44: Windrower Left Leg

7. Retrieve draper drive and reel control multicoupler (A) from hose management arm.
8. Push knob (B) on hydraulic receptacle and pull handle (C) fully away from windrower.
9. Open cover (D) and position coupler onto receptacle. Align pins in coupler with slots in handle (C) and push handle toward windrower so that coupler is locked onto receptacle and knob (B) snaps out.
10. Remove cover from electrical connector (E), push electrical connector onto receptacle, and secure by turning collar on electrical connector clockwise.
11. Remove hose quick-disconnect (F) from storage location and connect to receptacle on frame.

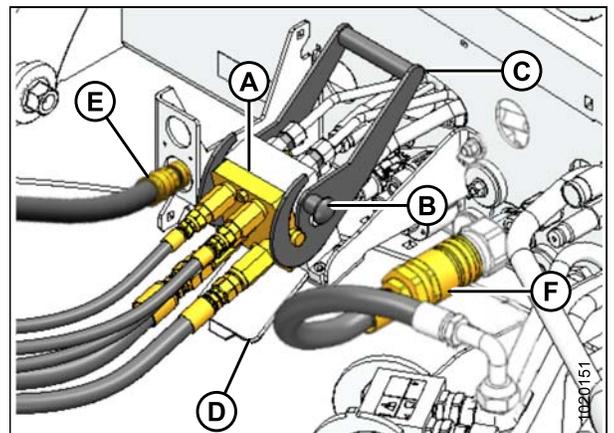


Figure 5.45: Draper/Reel Multicoupler

ATTACHING HEADERS TO M1 SERIES WINDROWER

12. Retrieve knife and reel drive multicoupler (A) from hose management arm.
13. Push knob (B) on hydraulic receptacle and pull handle (C) fully away from windrower.
14. Open cover (D) and position coupler onto receptacle. Align pins in coupler with slots in handle (C) and push handle toward windrower so that coupler is locked onto receptacle and knob (B) snaps out.

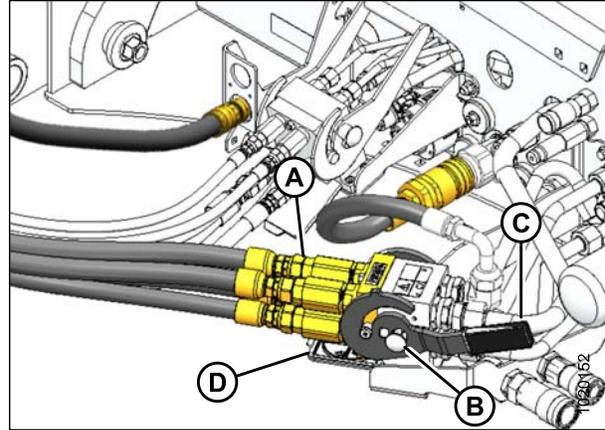


Figure 5.46: Knife/Reel Drive Multicoupler

15. Push latch (B) to unlock the platform (A).
16. Push the platform (B) towards the cab until it stops and latch engages.

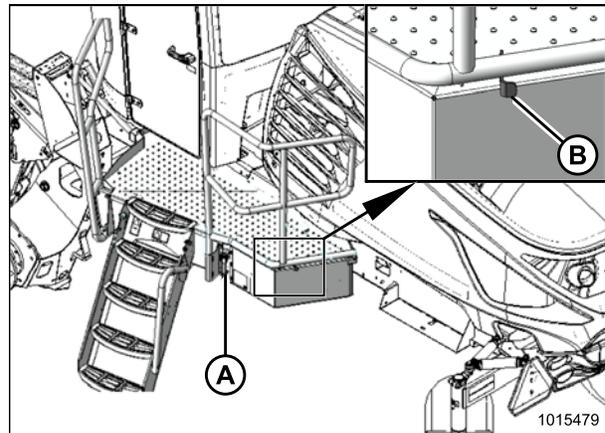


Figure 5.47: Platform

17. Ensure hydraulic hose routing is as straight as possible and avoids potential rub/wear points.

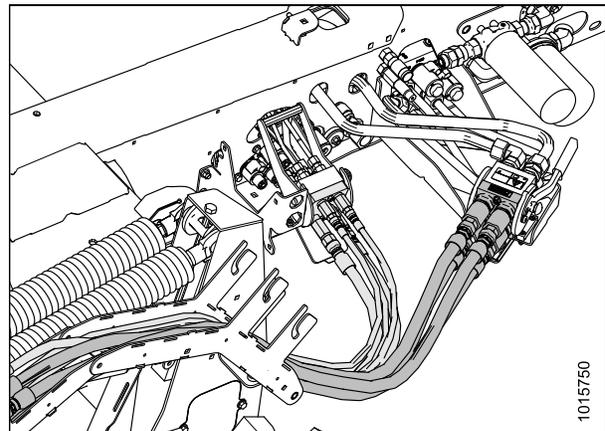


Figure 5.48: Hydraulic Multicouplers and Hose Routing

5.1.3 R85 16-Foot Header

Attaching an R85 16-Foot Header

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. **Hydraulic center-link without self-alignment:**
Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

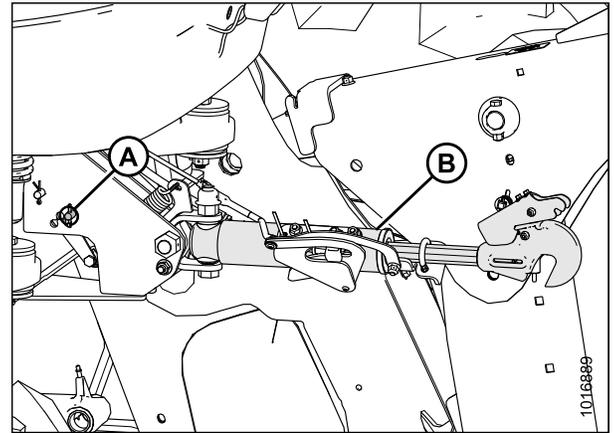


Figure 5.49: Hydraulic Center-Link without Self-Alignment Kit

2. Remove hairpin (B) from clevis pin (A), and remove pin from header support (C) on both sides of header.

⚠ CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

3. Start engine.

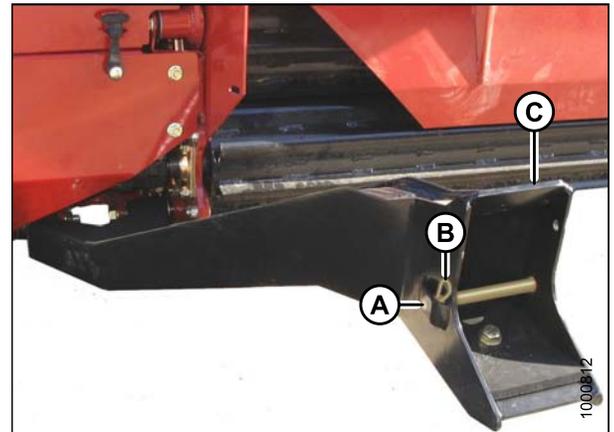


Figure 5.50: Header Support

ATTACHING HEADERS TO M1 SERIES WINDROWER

CAUTION

To prevent damage to the header lift linkages when lowering header lift legs without a header or weight box attached to the windrower, ensure the float springs tension is fully released.

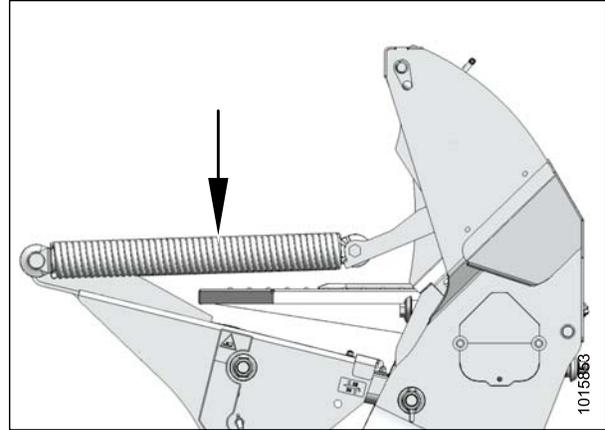


Figure 5.51: Header Float Spring

NOTE:

If not prompted by the HPT display to remove header float, remove header float manually by doing the following:

4. Press rotary scroll knob (A) on Harvest Performance Tracker (HPT) to highlight QuickMenu options.
5. Rotate scroll knob (A) to highlight the HEADER FLOAT symbol (B) and press scroll knob to select.



Figure 5.52: HPT Display

6. On Float Adjust page, press soft key 3 (A) to remove the header float.

NOTE:

If the header float is active, the icon at soft key 3 will say REMOVE FLOAT; if header float has been removed, the icon will say RESUME FLOAT.



Figure 5.53: HPT Display

ATTACHING HEADERS TO M1 SERIES WINDROWER

7. Press HEADER DOWN switch (E) on the ground speed lever (GSL) to fully retract header lift cylinders.
8. **For hydraulic center-link with self-alignment:** Press the REEL UP switch (B) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

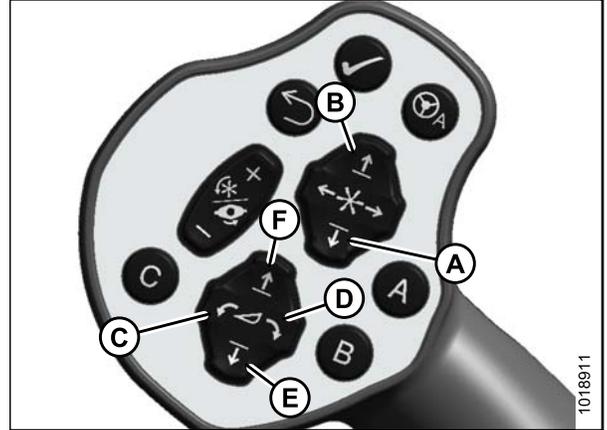


Figure 5.54: Ground Speed Lever

A - Reel Down	B - Reel Up
C - Header Tilt Down	D - Header Tilt Up
E - Header Down	F - Header Up

9. Drive the windrower slowly forward until the windrower feet (A) enter the header supports (B). Continue to drive slowly forward until feet engage the supports and header nudges forward.
10. Ensure that lift linkages are properly engaged in header legs.

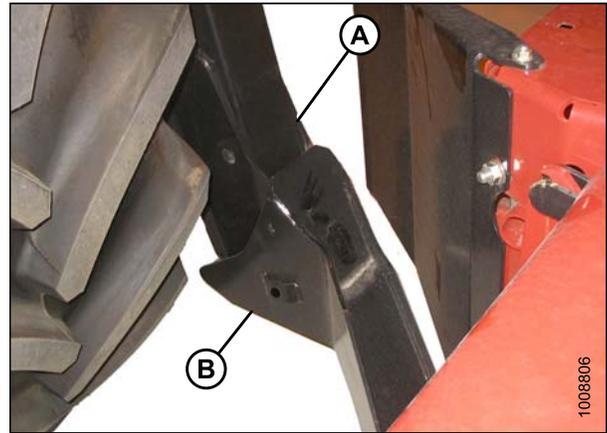


Figure 5.55: Header Support

11. **Hydraulic center-link with optional self-alignment:**
 - a. Adjust position of the center-link cylinder (A) with the switches on the GSL until the hook (B) is above the header attachment pin.

IMPORTANT:

Hook release (C) must be down to enable self-locking mechanism.

- b. If the hook release (C) is open (up), stop the engine and remove ignition key. Manually push the hook release (C) down after hook engages the header pin.
- c. Lower center-link (A) onto the header with REEL DOWN switch on the GSL until it locks into position (hook release [C] is down).
- d. Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.

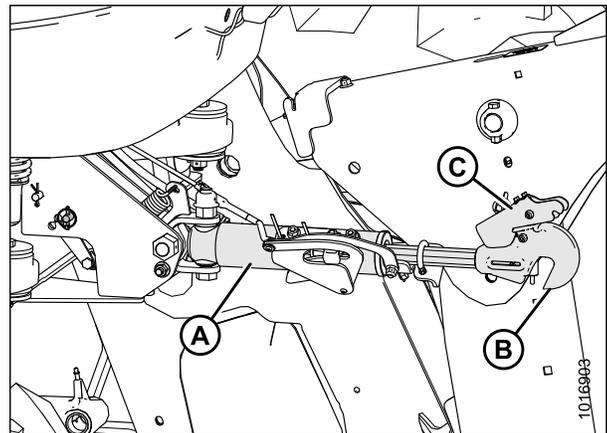


Figure 5.56: Hydraulic Center-Link

ATTACHING HEADERS TO M1 SERIES WINDROWER

12. Hydraulic center-link without self-alignment:

- Press HEADER TILT UP or HEADER TILT DOWN cylinder switches on the GSL to extend or retract center-link cylinder until the hook is aligned with the header attachment pin.
- Stop the engine and remove the key.
- Push down on rod end of link cylinder (B) until hook engages and locks onto header pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the hook release is open (up), manually push it down after hook engages pin.

- Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

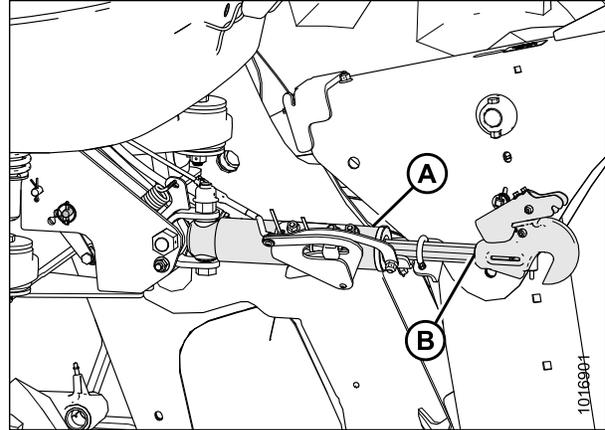


Figure 5.57: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

- Start engine.

- Press the HEADER UP switch (A) to raise header to maximum height.
- If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:
 - Press and hold the HEADER UP switch (A) until both cylinders stop moving.
 - Continue to hold the switch for 3–4 seconds. Cylinders are now phased.
- Stop the engine, and remove the key.



Figure 5.58: Ground Speed Lever

16. Engage safety prop on lift cylinder as follows:

- Pull lever (A) and rotate toward header to release, and lower safety prop onto cylinder.
- Repeat for opposite lift cylinder.

IMPORTANT:

Ensure the safety props engage over the cylinder piston rods. If safety prop does not engage properly, raise header until prop fits over the rod.

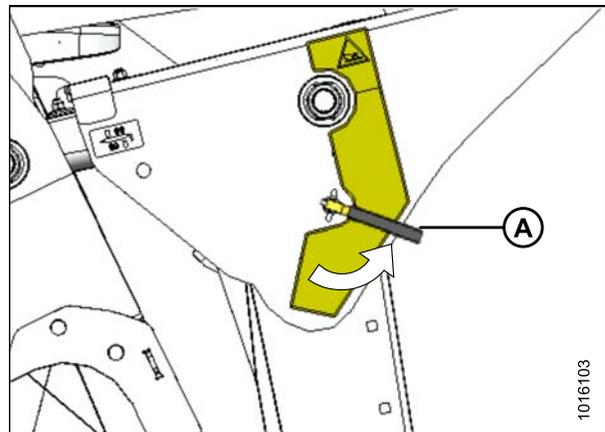


Figure 5.59: Cylinder Safety Prop

ATTACHING HEADERS TO M1 SERIES WINDROWER

17. Install clevis pin (A) through support and foot, and secure with hairpin (B). Repeat for opposite side.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

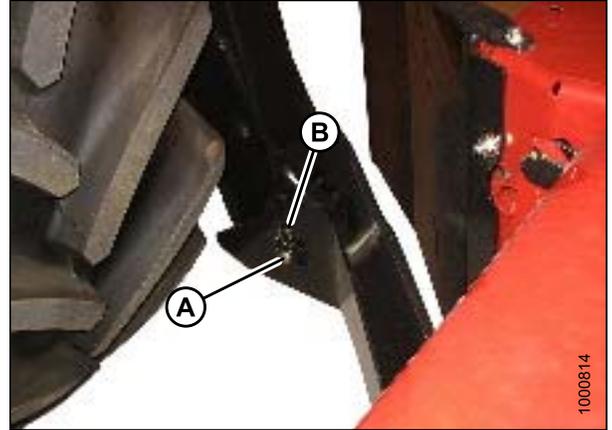


Figure 5.60: Header Support

18. Disengage safety prop by turning lever (A) downward to raise safety prop until lever locks into vertical position.

NOTE:

If safety prop will not disengage, raise header slightly.

19. Repeat for opposite side.

CAUTION

Check to be sure all bystanders have cleared the area.

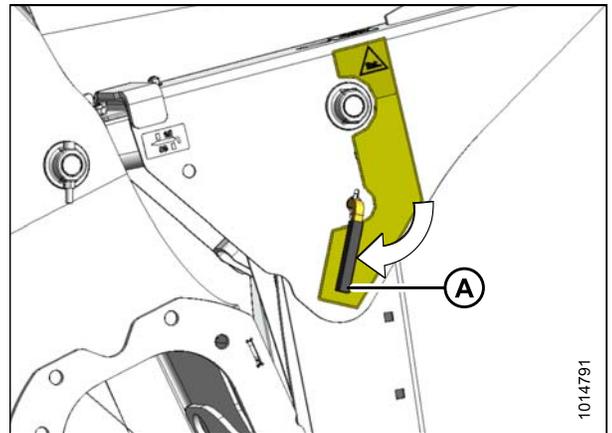


Figure 5.61: Cylinder Safety Prop

20. Start engine and press HEADER DOWN switch (A) on GSL to fully lower header.

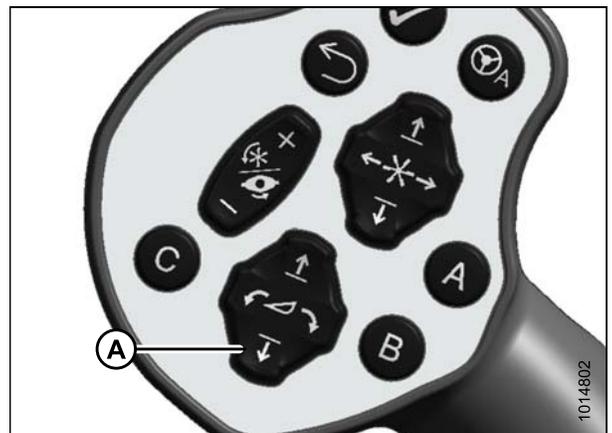


Figure 5.62: Ground Speed Lever

ATTACHING HEADERS TO M1 SERIES WINDROWER

21. Press rotary scroll knob (A) on Harvest Performance Tracker (HPT) to highlight QuickMenu options.
22. Rotate scroll knob (A) to highlight the HEADER FLOAT symbol (B), and press scroll knob to select.

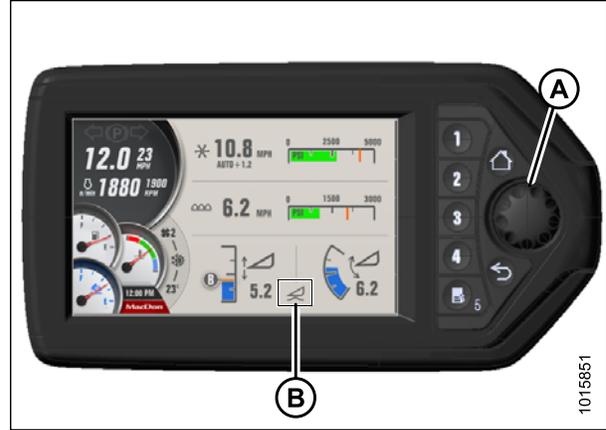


Figure 5.63: HPT Display

23. Turn scroll knob (A) to highlight left (B) or right (C) float and press knob (A) to activate selection.
24. Rotate scroll knob (A) to adjust float setting and press knob when finished.

IMPORTANT:

Float adjustments of 1.0 (out of 10) change the header weight at the cutterbar by approximately 91 kg (200 lb.). Adjust float in increments of 0.05 to optimize field performance.



Figure 5.64: HPT Display

25. Stop the engine, and remove the key.
26. Grasp one end of the rotary header and lift. Lifting force should be 426–471 N (95–105 lbf) and should be the same at both ends.

ATTACHING HEADERS TO M1 SERIES WINDROWER

Connecting R85 16-Foot Header Hydraulics

Refer to the following steps to attach the hydraulic hoses and electrical harness from the header to the windrower. Note that these steps are also included in the R85 rotary header operator's manual.

1. Open the left-side platform (A).

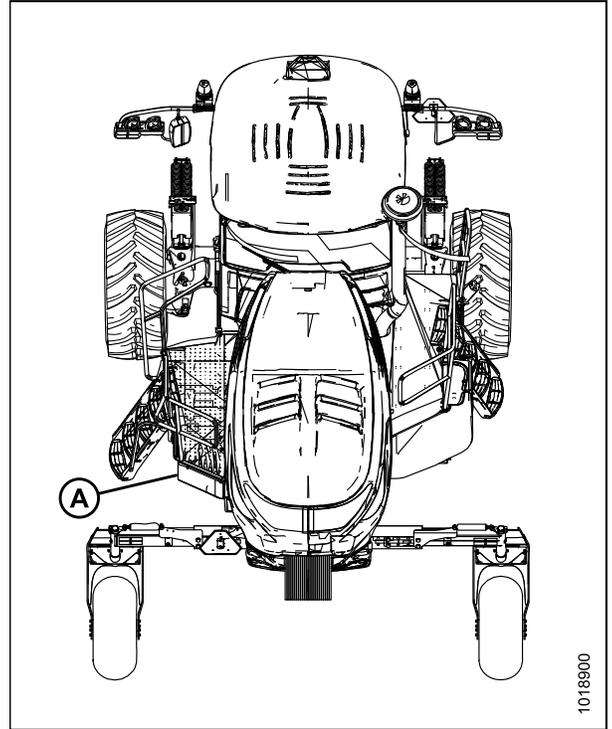


Figure 5.65: M1240 Windrower

2. Route hose bundle (A) from header to under windrower frame.

NOTE:

Route hoses as straight as possible and avoid rub/wear points that could damage hydraulic hoses.

3. Insert pin (B) into hole (C) in windrower frame, and place hose bundle on support (D).

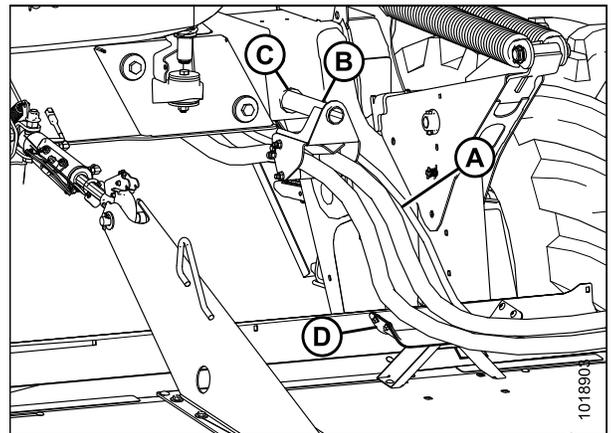


Figure 5.66: Hose and Electrical Routing

ATTACHING HEADERS TO M1 SERIES WINDROWER

4. Disconnect hose (A) from windrower receptacle (B) and place in storage cup (C) on multicoupler.

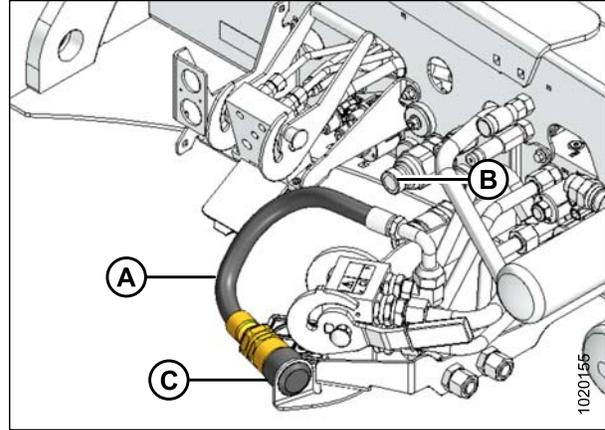


Figure 5.67: Knife Drive Hose

5. Refer to the following to connect hydraulic hoses with quick-disconnect fittings and electrical connections to the windrower. If hoses are not equipped with quick-disconnect fittings, they can be attached directly to the windrower fittings. Proceed to Step 6, page 95.
 - a. Use a clean rag to remove dirt and moisture from the couplers.
 - b. Connect the disc pressure hose (A) with red plastic tie to receptacle (B).
 - c. Connect the disc return hose (C) to receptacle (D).
 - d. Connect the case drain hose (E) to receptacle (F).
 - e. Connect the electrical harness to receptacle (G).

NOTE:

Ensure the hydraulic hoses have sufficient slack to clear the multicoupler without coming into contact with it. If necessary, increase slack in the hoses by loosening the hose holder at the windrower frame and moving the hoses as required.

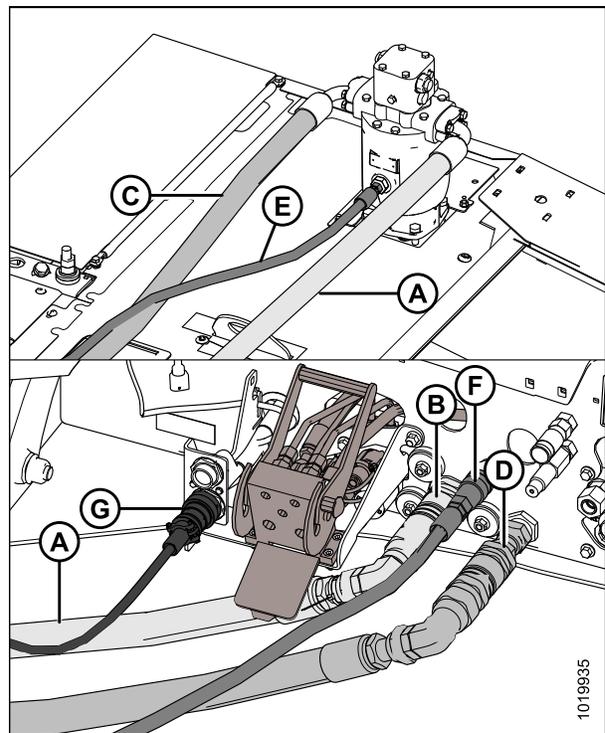


Figure 5.68: Quick-Disconnect Hydraulic and Electrical Connections (Parts Removed for Clarity)

ATTACHING HEADERS TO M1 SERIES WINDROWER

6. Refer to the following to directly connect the hydraulic hoses to the windrower as shown:
 - a. Use a clean rag to remove dirt and moisture from the couplers.
 - b. Attach the disc pressure hose (A) to fitting on frame and torque to 205–226 Nm (151–167 lbf·ft).
 - c. Connect the disc return hose (B) to fitting on frame and torque to 205–226 Nm (151–167 lbf·ft).
 - d. Connect the case drain hose (C) to fitting on frame and tighten.
 - e. Connect the electrical harness to receptacle (D).

NOTE:

Ensure the hydraulic hoses have sufficient slack to clear the multicoupler (E) without coming into contact with it. If necessary, increase slack in the hoses by loosening the hose holder at the windrower frame and moving the hoses as required.

7. Close the side platform.

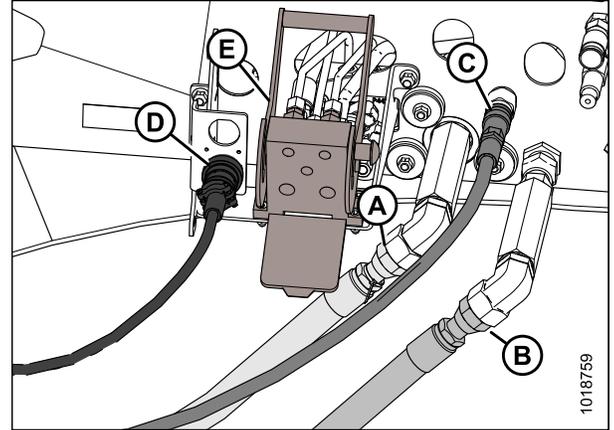


Figure 5.69: Hydraulic and Electrical Connections (Parts Removed for Clarity)

6 Reference

6.1 Lubricants, Fluids, and System Capacities

CAUTION

To avoid injury or death, do NOT allow ANY machine fluids to enter the body.

Table 6.1 System Capacities

Lubricant/Fluid	Location	Description	Capacity
Diesel exhaust fluid (DEF)	Diesel exhaust fluid tank	Must meet ISO 22241 requirements.	29 liters (7.5 US gallons)
Grease	As required unless otherwise specified	SAE multi-purpose high temperature extreme pressure (EP2) performance with 1% max molybdenum disulphide (NLGI Grade 2) lithium base	As required unless otherwise specified
Diesel fuel	Fuel tank	Ultra low sulphur diesel (ULSD) Grade No. 2, or ULSD Grade No. 1 and 2 mix ² ; refer to 6.2 Fuel Specifications, page 99 for more information	530 liters (140 US gallons)
Hydraulic oil	Hydraulic reservoir	Single grade trans-hydraulic oil. Recommended brands: <ul style="list-style-type: none"> • Petro-Canada Duratran • John Deere Hy-Gard J20C • Case HY-TRAN ULTRACTION • AGCO Power Fluid 821XL 	90 liters (25.8 US gallons) ³
Gear lubricant	Gearbox	SAE 75W-140 or 80W-140, API service class GL-5 fully synthetic gear lubricant, (SAE J2360 preferred)	2.1 liters (2.2 US quarts)
Gear lubricant	Wheel drive	SAE 75W-140 or 80W-140, API service class GL-5 fully synthetic gear lubricant, (SAE J2360 preferred)	1.4 liters (1.5 US quarts)
Antifreeze	Engine cooling system	ASTM D-6210 and Fleetguard ES Compleat [®]	33 liters (8.7 US gallons) ⁴
Engine oil	Engine oil pan	SAE 15W-40 compliant with SAE specs for API Class SJ and CJ-4 engine oil	14 liters (14.8 US quarts)
Air conditioning refrigerant	Air conditioning system	R134A	2.27 kg (5 lb.)

2. Optional when operating temperature is below 0°C (32°F).
3. Denotes capacity of a dry system. Refill capacity is 58 liters (15 US gallons).
4. Equal parts with water; high quality, soft, deionized or distilled water as recommended by Supplier.

REFERENCE

Table 6.1 System Capacities (continued)

Lubricant/Fluid	Location	Description	Capacity
Air conditioning refrigerant oil	Air conditioning system total capacity	PAG SP-15	240 cc (8.1 fl. oz.)
Windshield washer fluid	Windshield washer fluid tank	SAE J942 compliant	4 liters (1 US gallon)

If Fleetguard ES Compleat® is unavailable, use a coolant concentrate or prediluted coolant intended for use with heavy duty diesel engines and with a minimum of the following chemical and physical properties:

- Provides cylinder cavitation protection according to fleet study run at or above 60% load capacity.
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion.

The additive package must be part of one of the following coolant mixtures:

- Ethylene glycol or propylene glycol base prediluted (40–60%) heavy duty coolant.
- Ethylene glycol or propylene glycol base heavy duty coolant concentrate in a 40–60% mixture of concentrate with quality water.

Water quality is important to the performance of the cooling system. Distilled, deionized, or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

IMPORTANT:

Do **NOT** use cooling system sealing additives or antifreeze that contains sealing additives.

6.2 Fuel Specifications

Use only ultra low sulphur diesel (ULSD) from a reputable supplier. For most year-round service, No. 2 ULSD fuel meeting ASTM specification D975 Grade S15 will provide good performance.

Table 6.2 Fuel Specification

Fuel	Specification	Sulphur (by weight)	Water and Sediment (by volume)	Cetane No. °C (°F)	Lubricity
ULSD Grade No. 2	ASTM D975	0.5% maximum	0.05% maximum	40 (104) minimum	520 Microns
ULSD Grade No. 1 and 2 mix ⁵	n/a	1% maximum 0.5% maximum preferred	0.1% maximum	45–55 (113–130) cold weather / high altitude	460 Microns

In extreme situations, when available fuels are of poor quality or problems exist which are peculiar to certain operations, additives can be used. However, the engine manufacturer recommends consultation with the fuel supplier or engine manufacturer before using fuel additives. Situations where additives are useful include:

- A cetane improver additive can be used with low cetane fuels.
- A wax crystal modifier can help with fuels with high cold filter plugging points (CFPP).
- An anti-icer can help prevent ice formation in wet fuel during cold weather.
- An antioxidant or storage stability additive can help with fuel system deposits and poor storage stability.
- A lubricity enhancer can be used to increase the lubricity of fuels so that they meet the requirements given in Table 6.2, [page 99](#).

5. Optional when operating temperature is below 0°C (32°F) .

6.3 Torque Specifications

The following tables provide correct torque values for various bolts, cap screws, and hydraulic fittings.

- Tighten all bolts to torque values specified in charts (unless otherwise noted throughout this manual).
- Replace hardware with same strength and grade of bolt.
- Use torque value tables as a guide and periodically check tightness of bolts.
- Understand torque categories for bolts and cap screws by using their identifying head markings.

Jam nuts

When applying torque to finished jam nuts, multiply the torque applied to regular nuts by $f=0.65$.

Self-tapping screws

Standard torque is to be used (not to be used on critical or structurally important joints).

6.3.1 Metric Bolt Specifications

Table 6.3 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
3-0.5	1.4	1.6	*13	*14
3.5-0.6	2.2	2.5	*20	*22
4-0.7	3.3	3.7	*29	*32
5-0.8	6.7	7.4	*59	*66
6-1.0	11.4	12.6	*101	*112
8-1.25	28	30	20	23
10-1.5	55	60	40	45
12-1.75	95	105	70	78
14-2.0	152	168	113	124
16-2.0	236	261	175	193
20-2.5	460	509	341	377
24-3.0	796	879	589	651

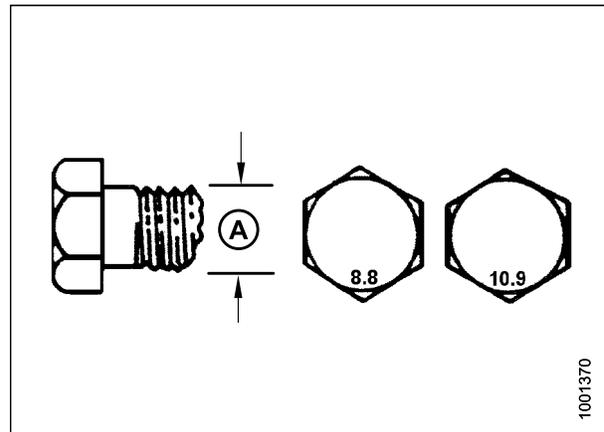


Figure 6.1: Bolt Grades

REFERENCE

Table 6.4 Metric Class 8.8 Bolts and Class 9 Distorted Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
3-0.5	1	1.1	*9	*10
3.5-0.6	1.5	1.7	*14	*15
4-0.7	2.3	2.5	*20	*22
5-0.8	4.5	5	*40	*45
6-1.0	7.7	8.6	*69	*76
8-1.25	18.8	20.8	*167	*185
10-1.5	37	41	28	30
12-1.75	65	72	48	53
14-2.0	104	115	77	85
16-2.0	161	178	119	132
20-2.5	314	347	233	257
24-3.0	543	600	402	444

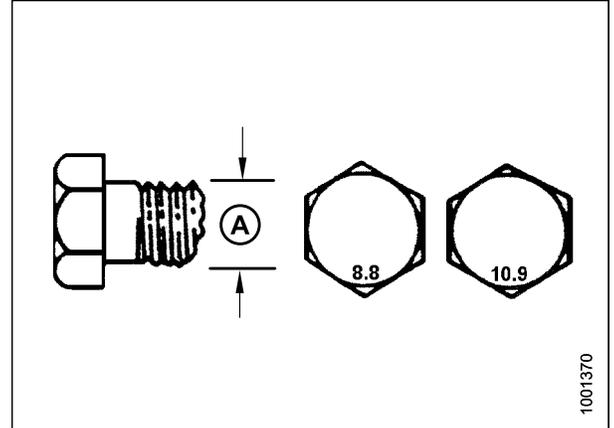


Figure 6.2: Bolt Grades

Table 6.5 Metric Class 10.9 Bolts and Class 10 Free Spinning Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
3-0.5	1.8	2	*18	*19
3.5-0.6	2.8	3.1	*27	*30
4-0.7	4.2	4.6	*41	*45
5-0.8	8.4	9.3	*82	*91
6-1.0	14.3	15.8	*140	*154
8-1.25	38	42	28	31
10-1.5	75	83	56	62
12-1.75	132	145	97	108
14-2.0	210	232	156	172
16-2.0	326	360	242	267
20-2.5	637	704	472	521
24-3.0	1101	1217	815	901

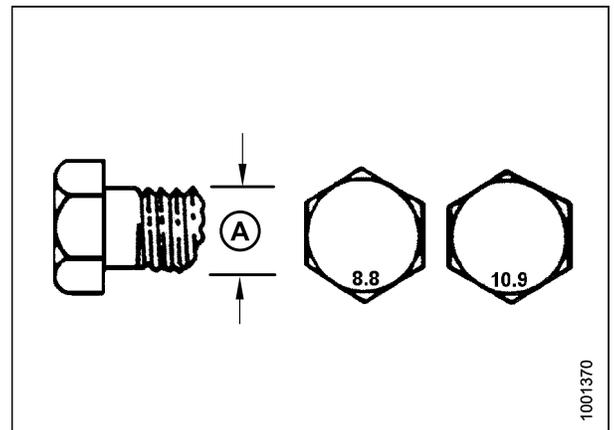


Figure 6.3: Bolt Grades

REFERENCE

Table 6.6 Metric Class 10.9 Bolts and Class 10 Distorted Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf-ft) (*lbf-in)	
	Min.	Max.	Min.	Max.
3-0.5	1.3	1.5	*12	*13
3.5-0.6	2.1	2.3	*19	*21
4-0.7	3.1	3.4	*28	*31
5-0.8	6.3	7	*56	*62
6-1.0	10.7	11.8	*95	*105
8-1.25	26	29	19	21
10-1.5	51	57	38	42
12-1.75	90	99	66	73
14-2.0	143	158	106	117
16-2.0	222	246	165	182
20-2.5	434	480	322	356
24-3.0	750	829	556	614

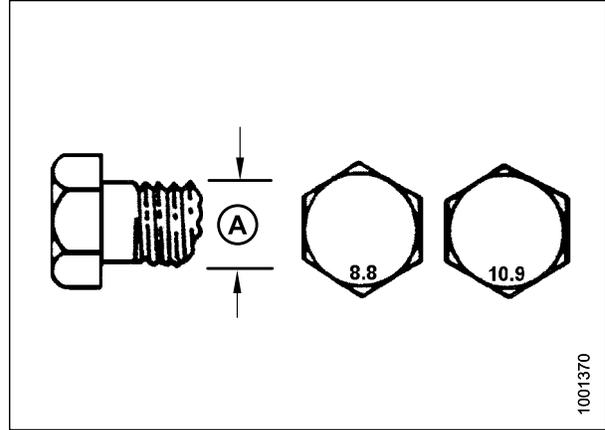


Figure 6.4: Bolt Grades

6.3.2 Metric Bolt Specifications Bolting into Cast Aluminum

Table 6.7 Metric Bolt Bolting into Cast Aluminum

Nominal Size (A)	Bolt Torque			
	8.8 (Cast Aluminum)		10.9 (Cast Aluminum)	
	Nm	lbf-ft	Nm	lbf-ft
M3	–	–	–	1
M4	–	–	4	2.6
M5	–	–	8	5.5
M6	9	6	12	9
M8	20	14	28	20
M10	40	28	55	40
M12	70	52	100	73
M14	–	–	–	–
M16	–	–	–	–

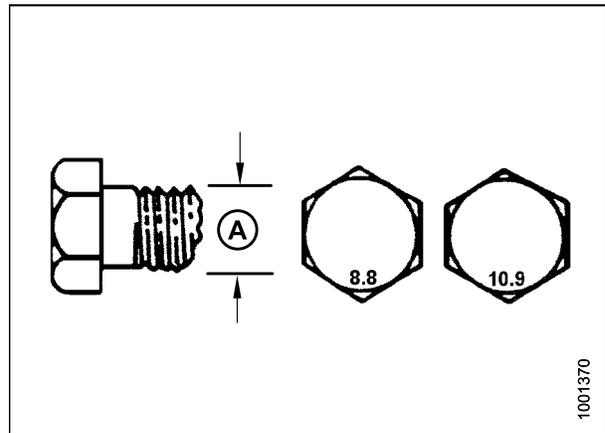


Figure 6.5: Bolt Grades

REFERENCE

6.3.3 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Back off lock nut (C) as far as possible. Ensure that washer (D) is loose and is pushed toward lock nut (C) as far as possible.
3. Check that O-ring (A) is **NOT** on threads and adjust if necessary.
4. Apply hydraulic system oil to O-ring (A).

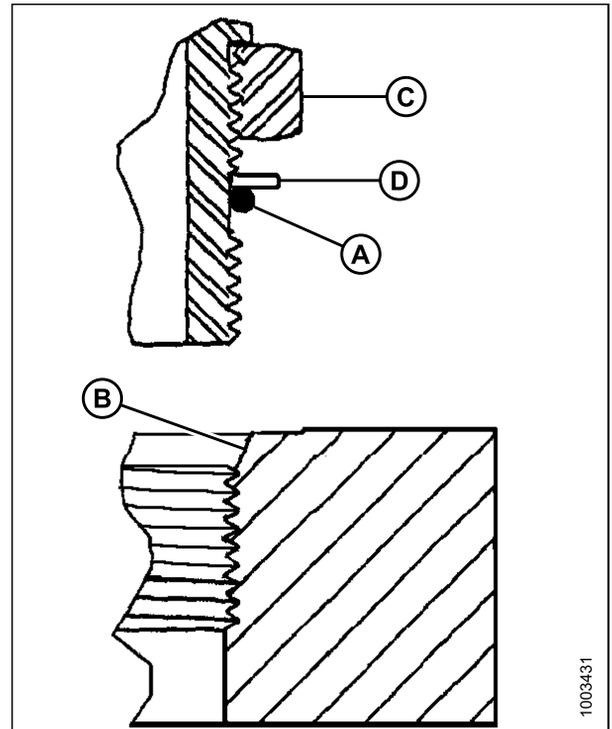


Figure 6.6: Hydraulic Fitting

5. Install fitting (B) into port until back up washer (D) and O-ring (A) contact part face (E).
6. Position angle fittings by unscrewing no more than one turn.
7. Turn lock nut (C) down to washer (D) and tighten to torque shown. Use two wrenches, one on fitting (B) and other on lock nut (C).
8. Check final condition of fitting.

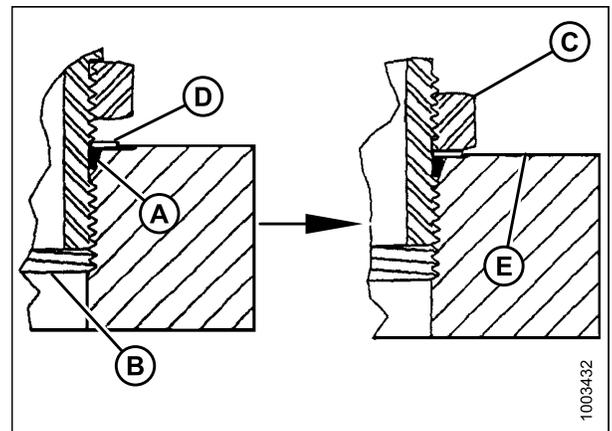


Figure 6.7: Hydraulic Fitting

REFERENCE

Table 6.8 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ⁶	
		Nm	lbf·ft (*lbf·in)
-2	5/16-24	6-7	*53-62
-3	3/8-24	12-13	*106-115
-4	7/16-20	19-21	14-15
-5	1/2-20	21-33	15-24
-6	9/16-18	26-29	19-21
-8	3/4-16	46-50	34-37
-10	7/8-14	75-82	55-60
-12	1-1/16-12	120-132	88-97
-14	1-3/8-12	153-168	113-124
-16	1-5/16-12	176-193	130-142
-20	1-5/8-12	221-243	163-179
-24	1-7/8-12	270-298	199-220
-32	2-1/2-12	332-365	245-269

6. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

6.3.4 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Check that O-ring (A) is **NOT** on threads and adjust if necessary.
3. Apply hydraulic system oil to O-ring.
4. Install fitting (C) into port until fitting is hand-tight.
5. Torque fitting (C) according to values in Table 6.9, page 105.
6. Check final condition of fitting.

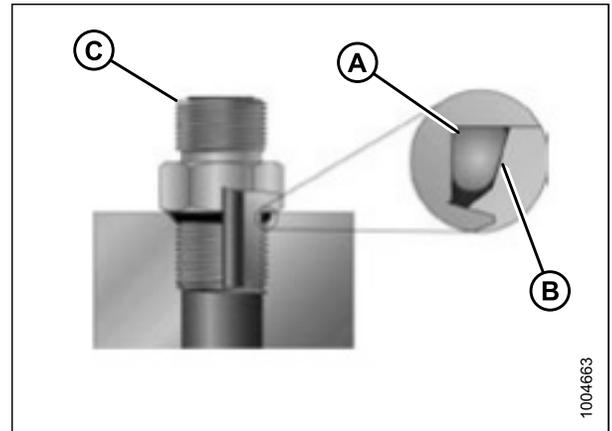


Figure 6.8: Hydraulic Fitting

Table 6.9 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ⁷	
		Nm	lbf·ft (*lbf·in)
-2	5/16–24	6–7	*53–62
-3	3/8–24	12–13	*106–115
-4	7/16–20	19–21	14–15
-5	1/2–20	21–33	15–24
-6	9/16–18	26–29	19–21
-8	3/4–16	46–50	34–37
-10	7/8–14	75–82	55–60
-12	1-1/16–12	120–132	88–97
-14	1-3/8–12	153–168	113–124
-16	1-5/16–12	176–193	130–142
-20	1-5/8–12	221–243	163–179
-24	1-7/8–12	270–298	199–220
-32	2-1/2–12	332–365	245–269

7. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

6.3.5 O-Ring Face Seal (ORFS) Hydraulic Fittings

1. Check components to ensure that sealing surfaces and fitting threads are free of burrs, nicks, scratches, or any foreign material.

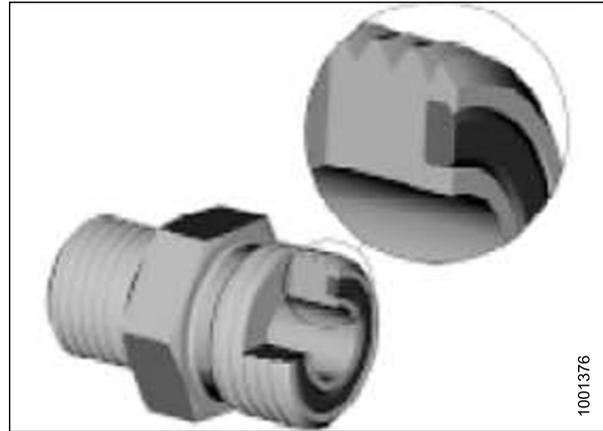


Figure 6.9: Hydraulic Fitting

2. Apply hydraulic system oil to O-ring (B).
3. Align tube or hose assembly so that flat face of sleeve (A) or (C) comes in full contact with O-ring (B).
4. Thread tube or hose nut (D) until hand-tight. The nut should turn freely until it is bottomed out.
5. Torque fittings according to values in Table 6.10, page 106.

NOTE:

If applicable, hold hex on fitting body (E) to prevent rotation of fitting body and hose when tightening fitting nut (D).

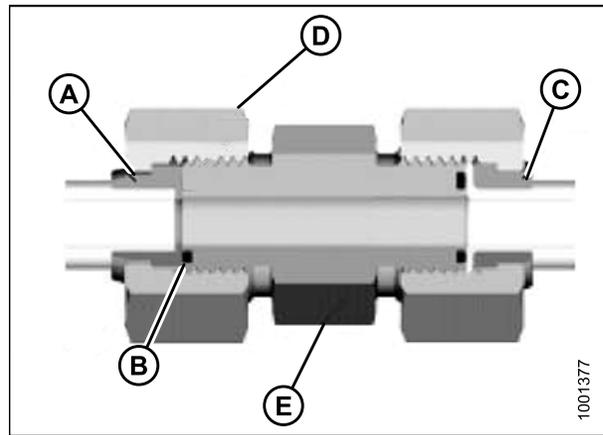


Figure 6.10: Hydraulic Fitting

6. Use three wrenches when assembling unions or joining two hoses together.
7. Check final condition of fitting.

Table 6.10 O-Ring Face Seal (ORFS) Hydraulic Fittings

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ⁸	
			Nm	lbf-ft
-3	Note ⁹	3/16	–	–
-4	9/16	1/4	25–28	18–21
-5	Note ⁹	5/16	–	–
-6	11/16	3/8	40–44	29–32
-8	13/16	1/2	55–61	41–45
-10	1	5/8	80–88	59–65
-12	1-3/16	3/4	115–127	85–94

8. Torque values and angles shown are based on lubricated connection as in reassembly.
9. O-ring face seal type end not defined for this tube size.

REFERENCE

Table 6.10 O-Ring Face Seal (ORFS) Hydraulic Fittings (continued)

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ¹⁰	
			Nm	lbf·ft
-14	Note ⁹	7/8	–	–
-16	1-7/16	1	150–165	111–122
-20	1-11/16	1-1/4	205–226	151–167
-24	1–2	1-1/2	315–347	232–256
-32	2-1/2	2	510–561	376–414

6.3.6 Tapered Pipe Thread Fittings

Assemble pipe fittings as follows:

1. Check components to ensure that fitting and port threads are free of burrs, nicks and scratches, or any form of contamination.
2. Apply pipe thread sealant (paste type) to external pipe threads.
3. Thread fitting into port until hand-tight.
4. Torque connector to appropriate torque angle. The Turns From Finger Tight (T.F.F.T.) values are shown in Table 6.11, page 107. Make sure that tube end of a shaped connector (typically 45° or 90°) is aligned to receive incoming tube or hose assembly. Always finish alignment of fitting in tightening direction. Never back off (loosen) pipe threaded connectors to achieve alignment.
5. Clean all residue and any excess thread conditioner with appropriate cleaner.
6. Assess final condition of fitting. Pay special attention to possibility of cracks to port opening.
7. Mark final position of fitting. If a fitting leaks, disassemble fitting and check for damage.

NOTE:

Overtorque failure of fittings may not be evident until fittings are disassembled.

Table 6.11 Hydraulic Fitting Pipe Thread

Tapered Pipe Thread Size	Recommended T.F.F.T.	Recommended F.F.F.T.
1/8–27	2–3	12–18
1/4–18	2–3	12–18
3/8–18	2–3	12–18
1/2–14	2–3	12–18
3/4–14	1.5–2.5	12–18
1–11 1/2	1.5–2.5	9–15
1 1/4–11 1/2	1.5–2.5	9–15
1 1/2–11 1/2	1.5–2.5	9–15
2–11 1/2	1.5–2.5	9–15

10. Torque values and angles shown are based on lubricated connection as in reassembly.

REFERENCE

6.4 Conversion Chart

Table 6.12 Conversion Chart

Quantity	SI Units (Metric)		Factor	Inch-Pound Units (Imperial)	
	Unit Name	Abbreviation		Unit Name	Abbreviation
Area	hectares	ha	$\times 2.4710 =$	acres	acres
Flow	liters per minute	L/min	$\times 0.2642 =$	US gallons per minute	gpm
Force	Newtons	N	$\times 0.2248 =$	pounds force	lbf
Length	millimeters	mm	$\times 0.0394 =$	inch	in.
Length	meters	m	$\times 3.2808 =$	foot	ft.
Power	kilowatts	kW	$\times 1.341 =$	horsepower	hp
Pressure	kilopascals	kPa	$\times 0.145 =$	pounds per square inch	psi
Pressure	megapascals	MPa	$\times 145.038 =$	pounds per square inch	psi
Pressure	bar (Non-SI)	bar	$\times 14.5038 =$	pounds per square inch	psi
Torque	Newton meters	Nm	$\times 0.7376 =$	pound feet or foot pounds	lbf-ft
Torque	Newton meters	Nm	$\times 8.8507 =$	pound inches or inch pounds	lbf-in
Temperature	degrees Celsius	°C	$(^{\circ}\text{C} \times 1.8) + 32 =$	degrees Fahrenheit	°F
Velocity	meters per minute	m/min	$\times 3.2808 =$	feet per minute	ft/min
Velocity	meters per second	m/s	$\times 3.2808 =$	feet per second	ft/s
Velocity	kilometers per hour	km/h	$\times 0.6214 =$	miles per hour	mph
Volume	liters	L	$\times 0.2642 =$	US gallons	US gal
Volume	milliliters	ml	$\times 0.0338 =$	ounces	oz.
Volume	cubic centimeters	cm ³ or cc	$\times 0.061 =$	cubic inches	in. ³
Weight	kilograms	kg	$\times 2.2046 =$	pounds	lb.

REFERENCE

6.5 Definitions

The following terms and acronyms may be used in this manual.

Term	Definition
A Series header	MacDon A30-D, A40-D, A40-DX, and Grass Seed auger headers
API	American Petroleum Institute
ASTM	American Society of Testing and Materials
Bolt	A headed and externally threaded fastener that is designed to be paired with a nut
Cab-forward	Windrower operation with Operator and cab facing in direction of travel
Center-link	A hydraulic cylinder link between header and machine used to change header angle
CGVW	Combined gross vehicle weight
DEF	Diesel exhaust fluid; also called AdBlue in Europe, and AUS 32 in Australia
DEF supply module	Pump that supplies diesel exhaust fluid through system
DM	Dosing module
D1X Series header	MacDon D115X, D120X, and D125X rigid draper headers for windrowers
D1XL Series header	MacDon D130XL, D135XL, D140XL, and D145XL rigid draper headers for windrowers
DK	Double knife
DKD	Double-knife drive
DDD	Double-draper drive
DOC	Diesel oxidation catalyst
DRT	Decomposition reactor tube
DWA	Double Windrow Attachment
ECM	Engine control module
ECU	Electronic control unit
EEC	Eco Engine Control
Engine-forward	Windrower operation with Operator and engine facing in direction of travel
Finger tight	Finger tight is a reference position where sealing surfaces or components are making contact with each other, and fitting has been tightened to a point where fitting is no longer loose
FFFT	Flats from finger tight
GSL	Ground speed lever
GSS	Grass Seed Special
GVW	Gross vehicle weight
Hard joint	A joint made with use of a fastener where joining materials are highly incompressible
HPT display	Harvest Performance Tracker display module on a self-propelled windrower

REFERENCE

Term	Definition
Header	A machine that cuts and lays crop into a windrow and is attached to a self-propelled windrower
Hex key	A tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in head (internal-wrenching hexagon drive); also known as an Allen key and various other synonyms
HDS	Hydraulic deck shift
hp	Horsepower
JIC	Joint Industrial Council: A standards body that developed standard sizing and shape for original 37° flared fitting
Knife	A cutting device which uses a reciprocating cutter (also called a sickle)
M1 Series windrower	MacDon M1170 and M1240 self-propelled windrowers
MDS	Mechanical deck shift
n/a	Not applicable
Nut	An internally threaded fastener that is designed to be paired with a bolt
N-DETENT	The slot opposite the NEUTRAL position on operator's console
NPT	National Pipe Thread: A style of fitting used for low pressure port openings. Threads on NPT fittings are uniquely tapered for an interference fit
ORB	O-ring boss: A style of fitting commonly used in port opening on manifolds, pumps, and motors
ORFS	O-ring face seal: A style of fitting commonly used for connecting hoses and tubes This style of fitting is also commonly called ORS, which stands for O-ring seal
rpm	Revolutions per minute
R Series header	MacDon R80 and R85 disc headers
RoHS (Reduction of Hazardous Substances)	A directive by the European Union to restrict use of certain hazardous substances (such as hexavalent chromium used in some yellow zinc platings)
SAE	Society of Automotive Engineers
SCR	Selective catalytic reduction
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread into a mating part
SDD	Single-drapeer drive
Self-Propelled (SP) Windrower	Self-propelled machine consisting of a power unit with a header
SK	Single knife
SKD	Single-knife drive
Soft joint	A joint made with use of a fastener where joining materials are compressible or experience relaxation over a period of time
spm	Strokes per minute
Tension	Axial load placed on a bolt or screw, usually measured in Newtons (N) or pounds (lb.)

REFERENCE

Term	Definition
TFFT	Turns from finger tight
Torque	The product of a force X lever arm length, usually measured in Newton-meters (Nm) or foot-pounds (lbf-ft)
Torque angle	A tightening procedure where fitting is assembled to a precondition (finger tight) and then nut is turned farther a number of degrees to achieve its final position
Torque-tension	The relationship between assembly torque applied to a piece of hardware and axial load it induces in bolt or screw
ULSD	Ultra low sulphur diesel
Washer	A thin cylinder with a hole or slot located in the center that is to be used as a spacer, load distribution element, or a locking mechanism
Windrower	Power unit of a self-propelled header

Predelivery Checklist

Perform these checks and adjustments prior to delivery to your Customer. The completed checklist should be retained by either the Operator or the Dealer.

CAUTION

Carefully follow the instructions given. Be alert for safety related messages that bring your attention to hazards and unsafe practices.

Windrower Serial Number:

Engine Serial Number:

Table .13 M1240 Self-Propelled Windrower Predelivery Checklist

✓	Item	Reference
	Check for shipping damage or missing parts. Be sure all shipping dunnage is removed.	—
	Check for loose hardware. Tighten to required torque.	<i>6 Reference, page 97</i>
	Check tire air pressures and adjust as required.	<i>4.1.11 Checking Tire Pressures, page 50</i>
	Check wheel drive hub lubricant level.	<i>4.1.2 Checking and Adding Wheel Drive Lubricant Level, page 42</i>
	Check engine coolant level and strength at pressurized coolant tank.	<i>4.1.7 Checking Engine Coolant Level, page 47</i>
	Check air cleaner and clamps.	<i>4.1.3 Checking Engine Air Intake, page 43</i>
	Check engine oil level and check for leaks.	<i>4.1.4 Checking and Adding Engine Oil, page 44</i>
	Check hydraulic oil level and check for leaks along lines.	<i>4.1.5 Checking and Adding Hydraulic Oil, page 46</i>
	Check fuel separator for water and foreign material, drain and clean as necessary, and add fuel.	<i>4.1.6 Checking Fuel Separator, page 47</i>
	Check gearbox lubricant level.	<i>4.1.8 Checking Engine Gearbox Lubricant Level and Adding Lubricant, page 48</i>
	Check tension of A/C compressor belt.	<i>4.1.9 Checking Air Conditioning (A/C) Compressor Belts, page 48</i>
	Check that machine is completely lubricated.	<i>3.12.2 Lubrication Points, page 33</i>
	Check Operator's Presence System	<i>4.1.10 Checking Operating Safety System, page 49</i>
	Check horn operation.	<i>4.2.4 Checking Horn, page 62</i>
	Start engine and run to operating temperature.	<i>3.14 Starting the Engine, page 36</i>
	Check HPT, fuel and diesel exhaust fluid (DEF) gauges for operation.	<i>4.2.1 Checking Harvest Performance Display (HPT), page 53</i>
	Check engine speed on HPT.	<i>4.2.2 Checking Engine Speed, page 58</i>
	Check that air conditioning and heater are functioning properly.	<i>4.2.6 Checking Air Conditioning and Heater, page 63</i>

REFERENCE

Table .13 M1240 Self-Propelled Windrower Predelivery Checklist (continued)

✓	Item	Reference
	Check that interior lights are functioning properly.	<i>4.2.5 Checking Interior Lights, page 63</i>
	Check that exterior lights are functioning properly.	<i>4.2.3 Checking Exterior Lights, page 59</i>
	Check that hazard and signal lights are functioning properly.	<i>4.2.3 Checking Exterior Lights, page 59</i>
	Check that beacons are functioning properly (if installed).	<i>4.2.3 Checking Exterior Lights, page 59</i>
	Complete the header's Predelivery Checklist (if applicable).	—
	Check that manuals are in the windrower manual case.	<i>4.3 Checking Manuals, page 66</i>
	Check that plastic coverings and windshield decal from cab interior have been removed.	<i>4.4 Performing Final Steps, page 67</i>

Date Checked:

Checked by:

Lubricants, Fluids, and System Capacities

Lubricant/Fluid	Location	Description	Capacity
Diesel exhaust fluid (DEF)	Diesel exhaust fluid tank	Must meet ISO 22241 requirements.	29 liters (7.5 US gallons)
Grease	As required unless otherwise specified	SAE multi-purpose high temperature extreme pressure (EP2) performance with 1% max molybdenum disulphide (NLGI Grade 2) lithium base	As required unless otherwise specified
Diesel fuel	Fuel tank	Ultra low sulphur diesel (ULSD) Grade No. 2, or ULSD Grade No. 1 and 2 mix ¹¹ ; refer to 6.2 Fuel Specifications, page 99 for more information	530 liters (140 US gallons)
Hydraulic oil	Hydraulic reservoir	Single grade trans-hydraulic oil. Recommended brands: <ul style="list-style-type: none"> • Petro-Canada Duratran • John Deere Hy-Gard J20C • Case HY-TRAN ULTRACTION • AGCO Power Fluid 821XL 	90 liters (25.8 US gallons) ¹²
Gear lubricant	Gearbox	SAE 75W-140 or 80W-140, API service class GL-5 fully synthetic gear lubricant, (SAE J2360 preferred)	2.1 liters (2.2 US quarts)
Gear lubricant	Wheel drive	SAE 75W-140 or 80W-140, API service class GL-5 fully synthetic gear lubricant, (SAE J2360 preferred)	1.4 liters (1.5 US quarts)
Antifreeze	Engine cooling system	ASTM D-6210 and Fleetguard ES Compleat®; refer to 6.1 Lubricants, Fluids, and System Capacities, page 97	33 liters (8.7 US gallons) ¹³
Engine oil	Engine oil pan	SAE 15W-40 compliant with SAE specs for API Class SJ and CJ-4 engine oil	14 liters (14.8 US quarts)
Air conditioning refrigerant	Air conditioning system	R134A	2.27 kg (5 lb.)
Air conditioning refrigerant oil	Air conditioning system total capacity	PAG SP-15	240 cc (8.1 fl. oz.)
Windshield washer fluid	Windshield washer fluid tank	SAE J942 compliant	4 liters (1 US gallon)

11. Optional when operating temperature is below 0°C (32°F).

12. Denotes capacity of a dry system. Refill capacity is 58 liters (15 US gallons).

13. Equal parts with water; high quality, soft, deionized or distilled water as recommended by Supplier.

MacDon Industries Ltd.

680 Moray Street
Winnipeg, Manitoba
Canada R3J 3S3
t. (204) 885-5590
f. (204) 832-7749

MacDon, Inc.

10708 N. Pomona Avenue
Kansas City, Missouri
United States 64153-1924
t. (816) 891-7313
f. (816) 891-7323

MacDon Australia Pty. Ltd.

A.C.N. 079 393 721
P.O. Box 243, Suite 3, 143 Main Street
Greensborough, Victoria, Australia 3088
t. 03 9432 9982
f. 03 9432 9972

MacDon Brasil Agribusiness Ltda.

Rua Grã Nicco, 113, sala 202, B. 02
Mossunguê, Curitiba, Paraná
CEP 81200-200 Brasil
t. +55 (41) 2101-1713
f. +55 (41) 2101-1699

LLC MacDon Russia Ltd.

123317 Moscow, Russia
10 Presnenskaya nab, Block C
Floor 5, Office No. 534, Regus Business Centre
t. +7 495 775 6971
f. +7 495 967 7600

CUSTOMERS

MacDon.com

DEALERS

Portal.MacDon.com

Trademarks of products are the marks of their respective manufacturers and/or distributors.

Printed in Canada